



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

TT881 Toyota Rav 4 2000-2006

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	Extension Bar	E	4	M12 x 35 Bolts 2 Nuts 4 S/P Washers
C	2	Handed Side Arms	F	4	M12 x 35 x 1.25 Bolts & S/P Washers
			G	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
			H	8	12 x 25 Flat Washers
			J	1	Socket Plate 1

1. Remove the towing eye from the left hand chassis member. (This is no longer required).
2. Using item F with item H loosely bolt item C to the existing threaded holes in each chassis member.
3. Using item E bolt item A to item C.
4. Using item G with item H bolt item B to item A.
5. Using item D bolt the ball bracket to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

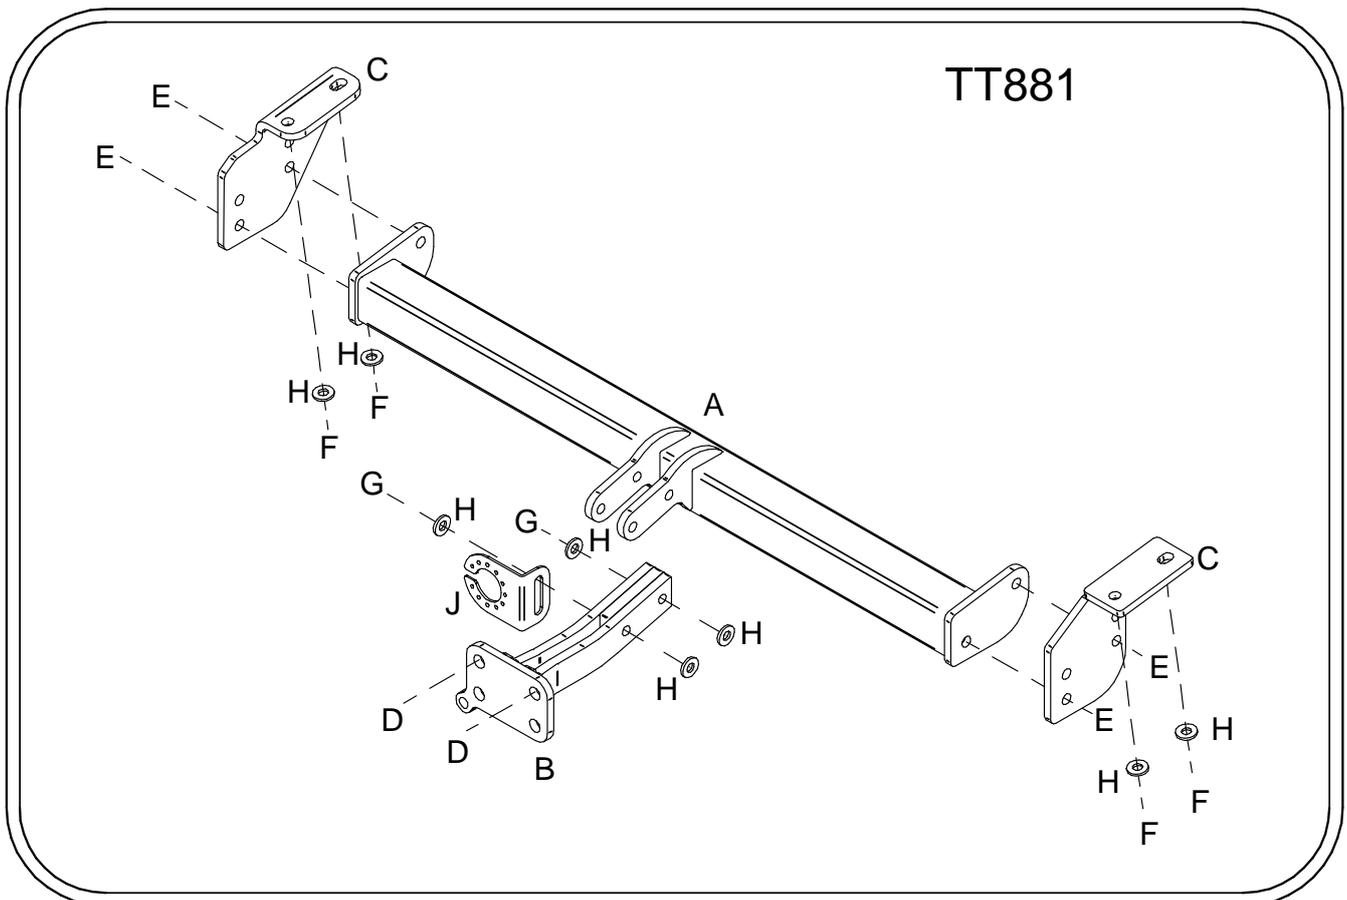

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm (for other Torque Settings see notes overleaf).
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.