




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

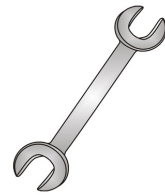

Issue 2



TM1-BKT 3.5t MERCEDES SPRINTER CHASSIS CAB WITH UNDER RUN BEAM

Item	Qty	Description
A	2	Handed Beam Bracket



1. Unplug light clusters.
2. Remove the tail gate bump stops from the rear panel and put to one side along with the fixings. (These will need to be refitted).
3. Remove the rear underrun beam and discard the side arms only.
4. Fit either TM1 or TM100B to the vehicle.
5. Fit Items A to either end of the Towbar assembly using fixings provided in the Towbar kit.
6. Refit the underrun beam to Items A using the original fixings.
7. Fully tighten all fixings ensuring the product is rigid square and secure.
8. Position the tail gate bump stops onto the rear panel ensuring that the tail gate does not foul on the light clusters once the bed is tipped.
9. Mark the position of the bump stops onto the rear panel. (Note: New holes maybe required to remount the bump stops).
10. Using the original fixings, mount the bump stops to the rear panel.
11. Reattach wiring loom to light clusters.

TM1-BKT

Fitted To TM1B

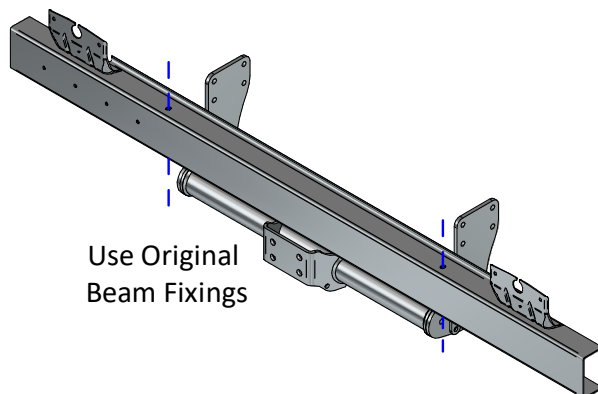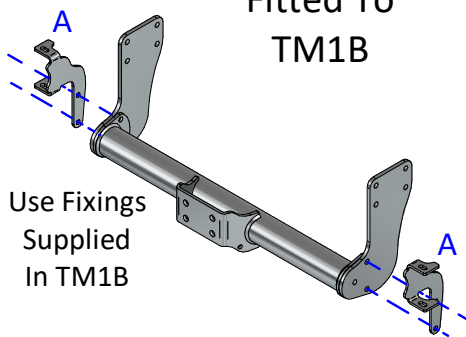

Fitted To TM100B

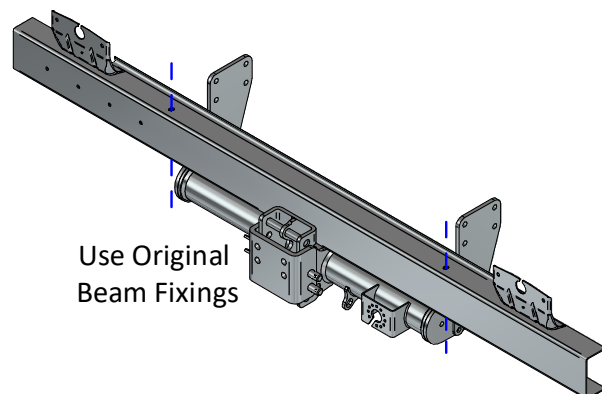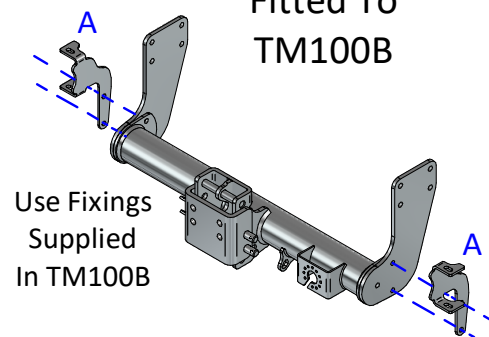

Note:

1. Torque Settings see notes overleaf.
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.