




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

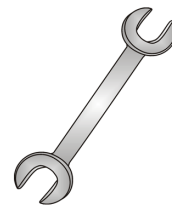


Issue 5

## TN8 NISSAN NV200 COMBI & VAN 2009>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Handed Side Arms	E	4	M12 x 150 Bolts, Nuts & S/P Washers
C	4	19 x 72 Spacer Tubes	F	4	M12 x 35 x 1.25 & S/P Washers
			G	4	M12 x 35 Bolts, Nuts & S/P Washers
			H	8	12 x 40 Flat Washers
			J	2	16 x 27 Flat Washers

1. Remove fixing from nearside bumper tag, and cut as shown, SEE SKETCH.
2. Using item **E** with item **C** and item **H** bolt items **B** to each correct chassis member.
3. Using item **F** with item **H** loosely bolt the remaining mounting point on the lower face of each chassis member in items **B**.
4. Using items **G** bolt item **A** to items **B**.
5. Using item **F** with item **H** bolt item **A** through the vertical point in the rear valence.
6. Using item **D** bolt the ball bracket and wiring plate (not supplied in this kit) to item **A**. Note: Item **J** may be required under the bolt head when not using PRO-TOW Couplings to ensure the bolt doesn't hit the bumper.
7. Fully tighten all nuts and bolts ensuring Towbar assembly is rigid square and secure.

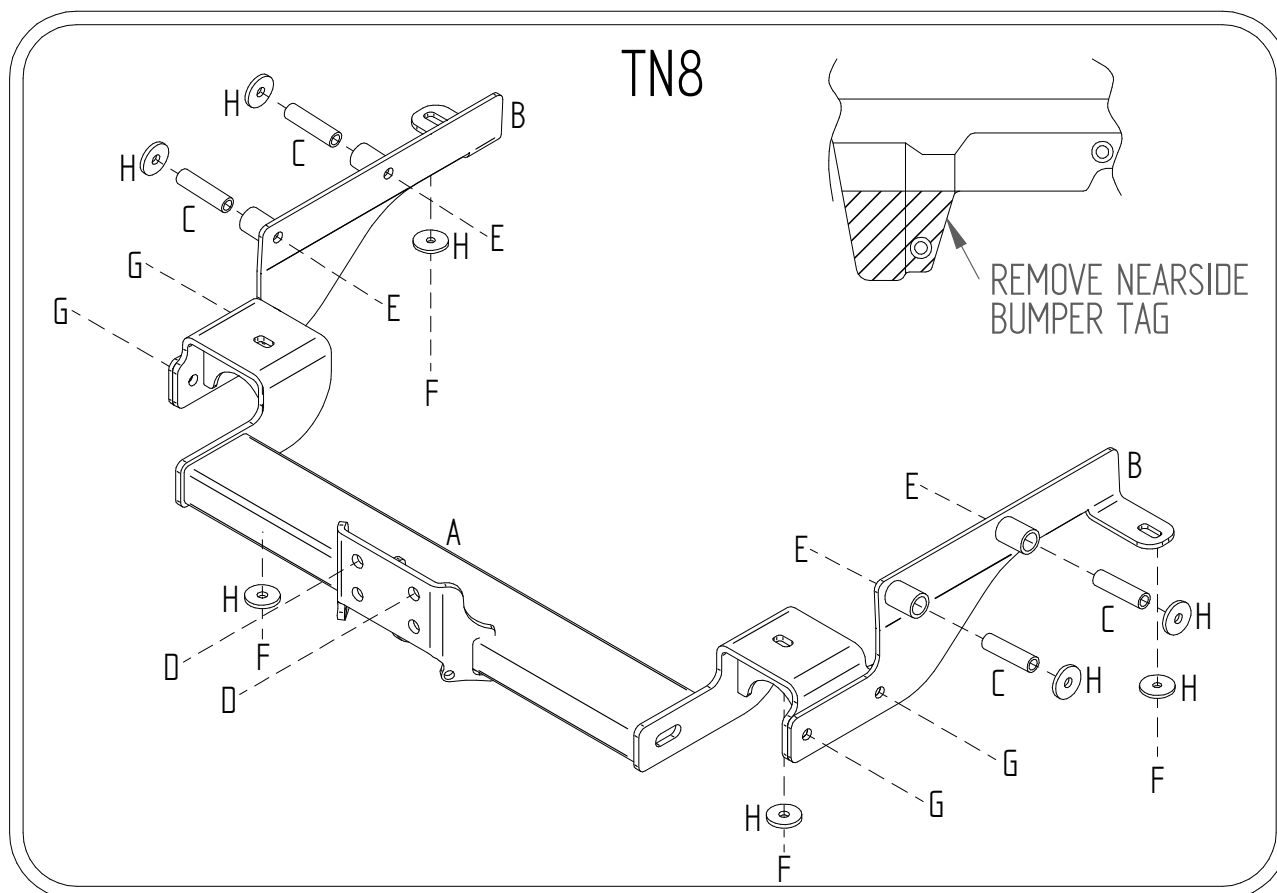

### Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.