




# Tow-Trust Towbars

## TTRUPD Fitting Instruction

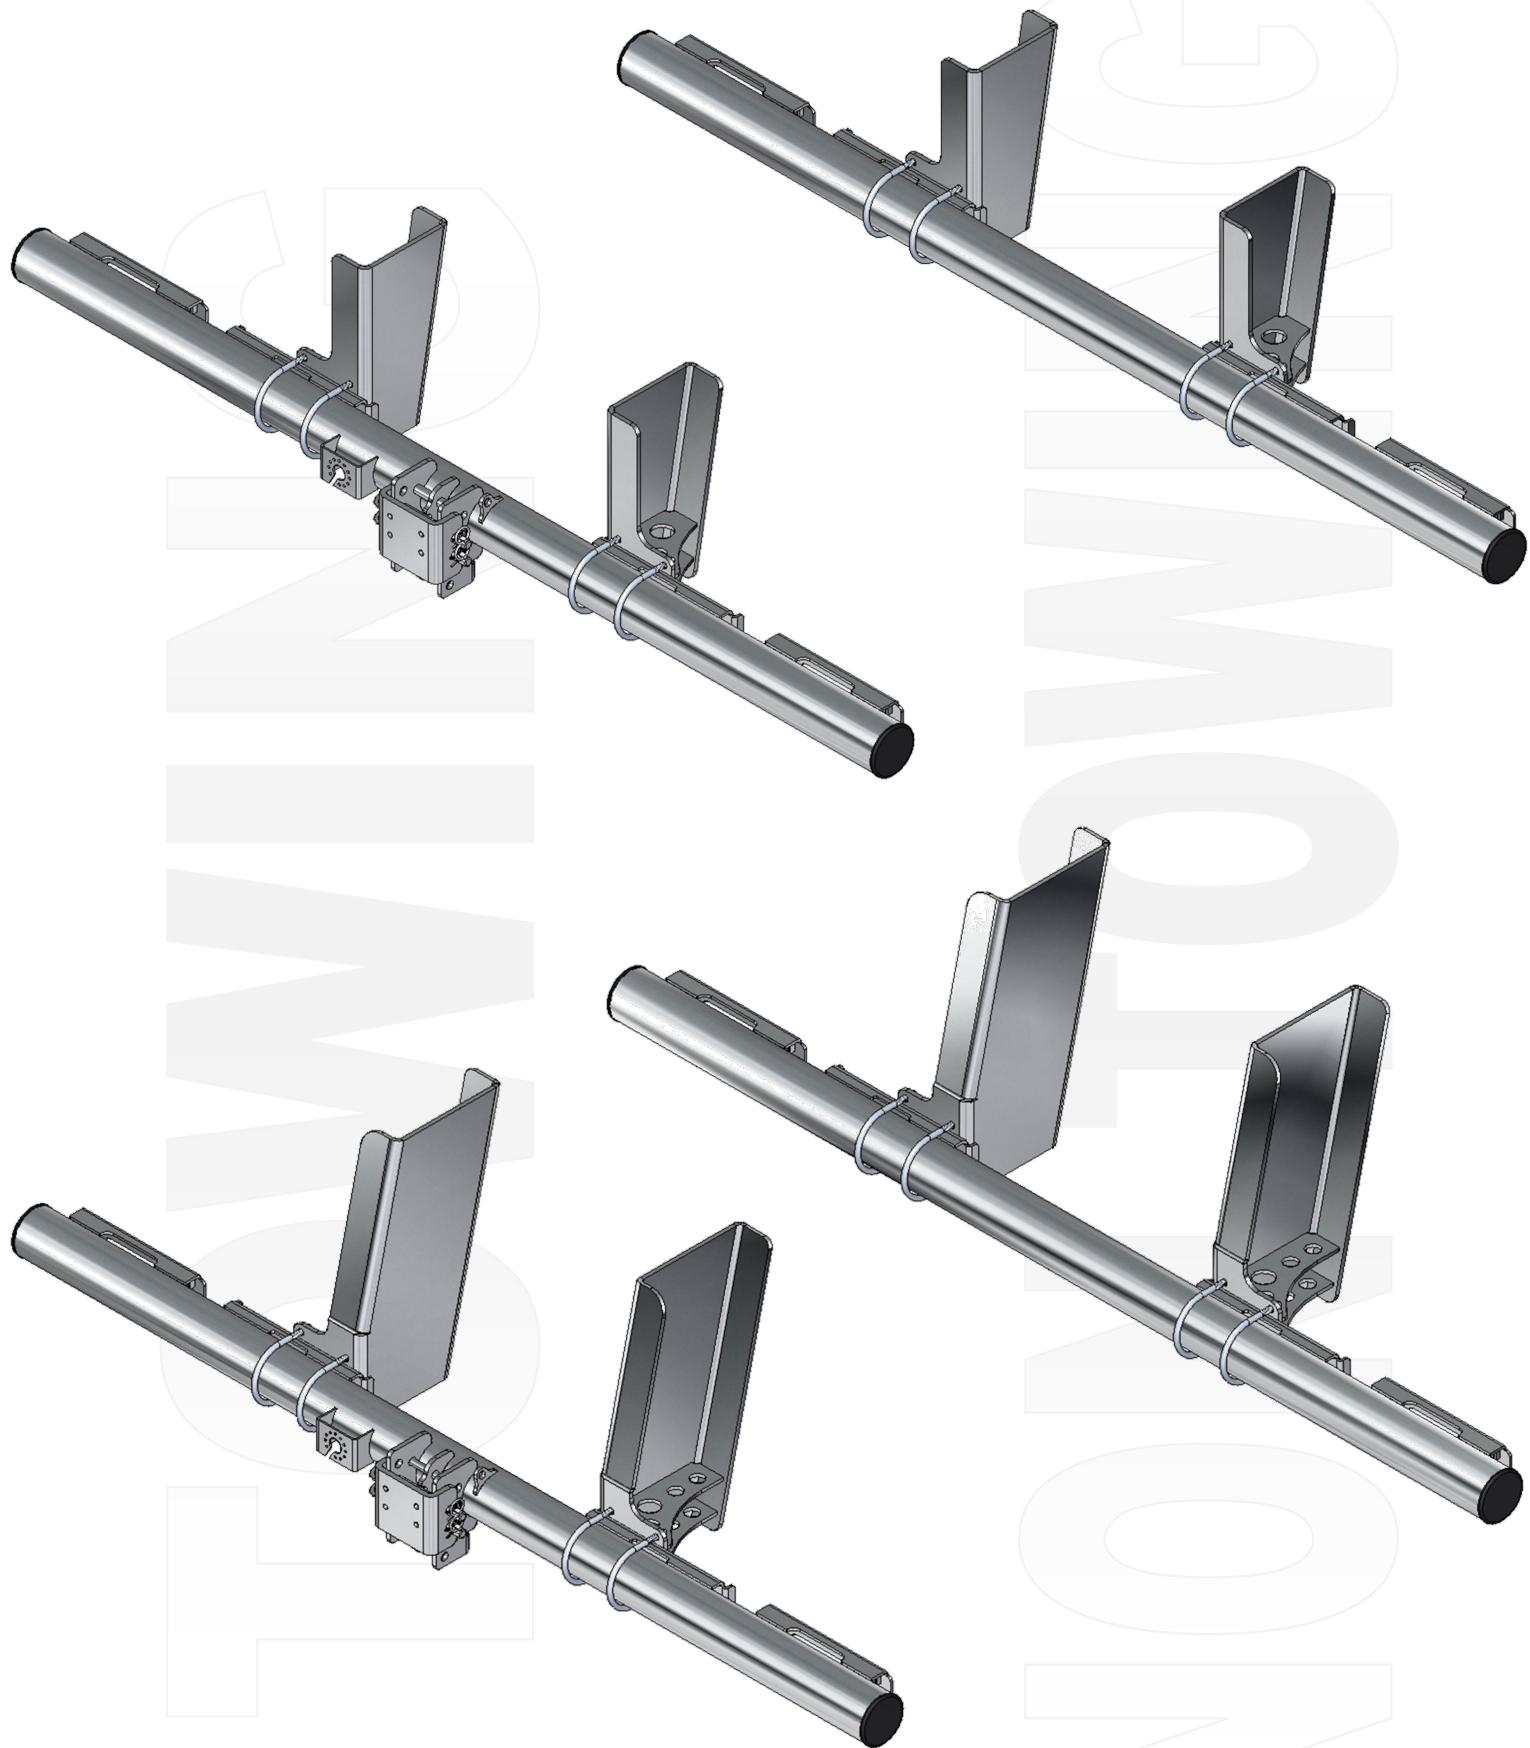

Can Be Fitted To Any Vehicle From 3500 Kg To 32000 Kg GVW



# Tow-Trust Towbars

## TTRUPD Fitting Instruction



**NON TOWING**

**TOWING**

2008mm

**Part No. TTRUPD-N2**

2008mm

**Part No. TTRUPD-N2T**

2356mm

**Part No. TTRUPD-N3**

2356mm

**Part No. TTRUPD-N3T**

434mm


629mm



**Part No. TTRUPD-ARM#1**








**Part No. TTRUPD-ARM#2**

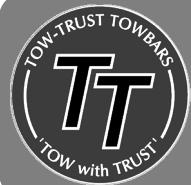

# Tow-Trust Towbars



## TTRUPD Fitting Instruction

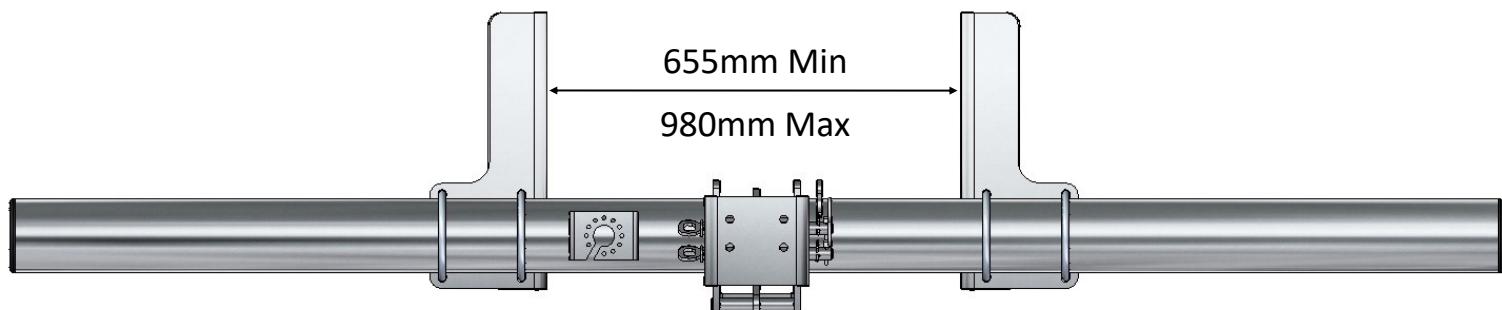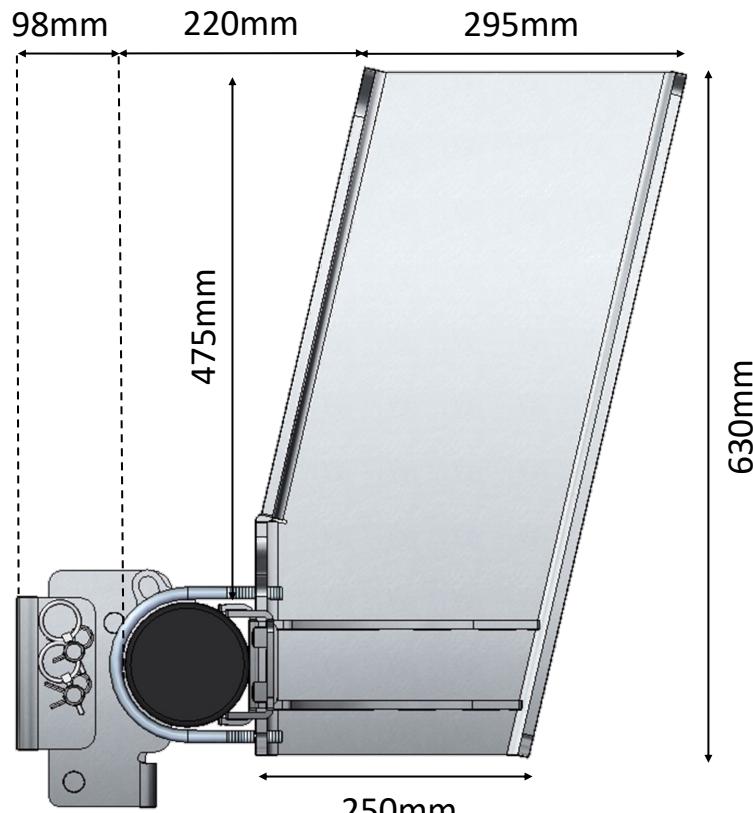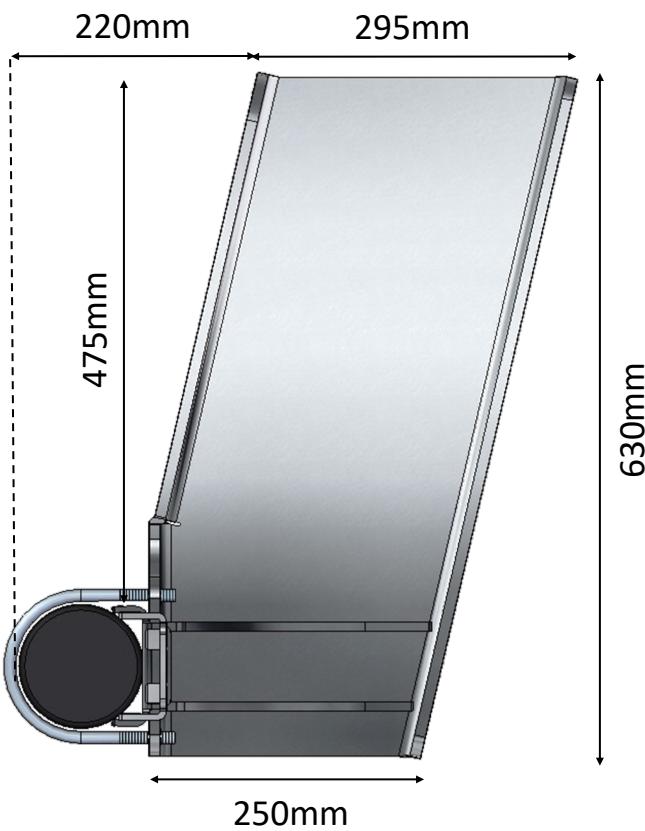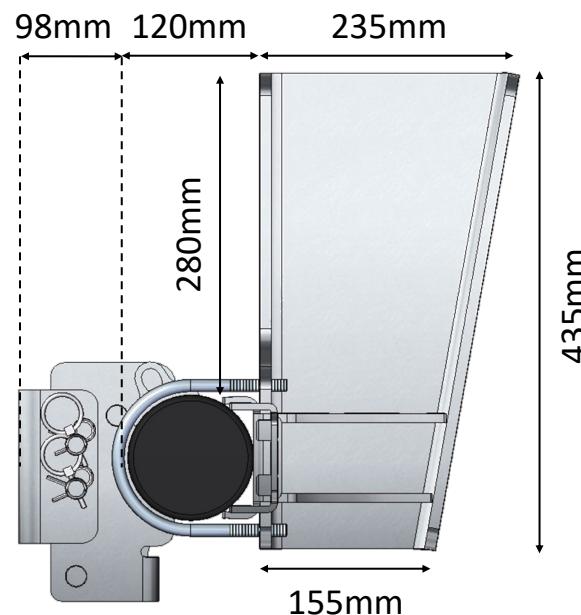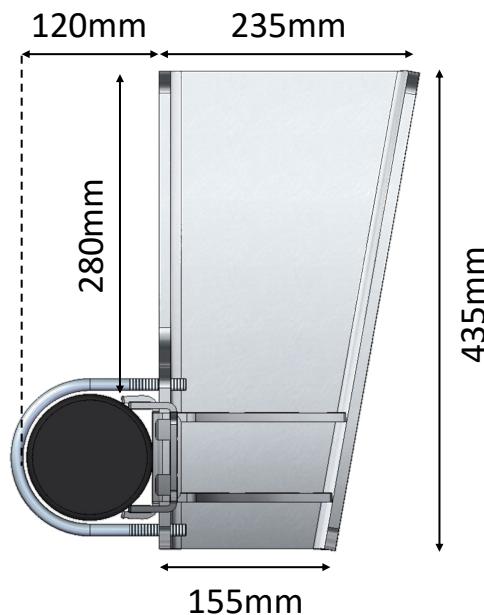



# Tow-Trust Towbars

## TTRUPD Fitting Instruction

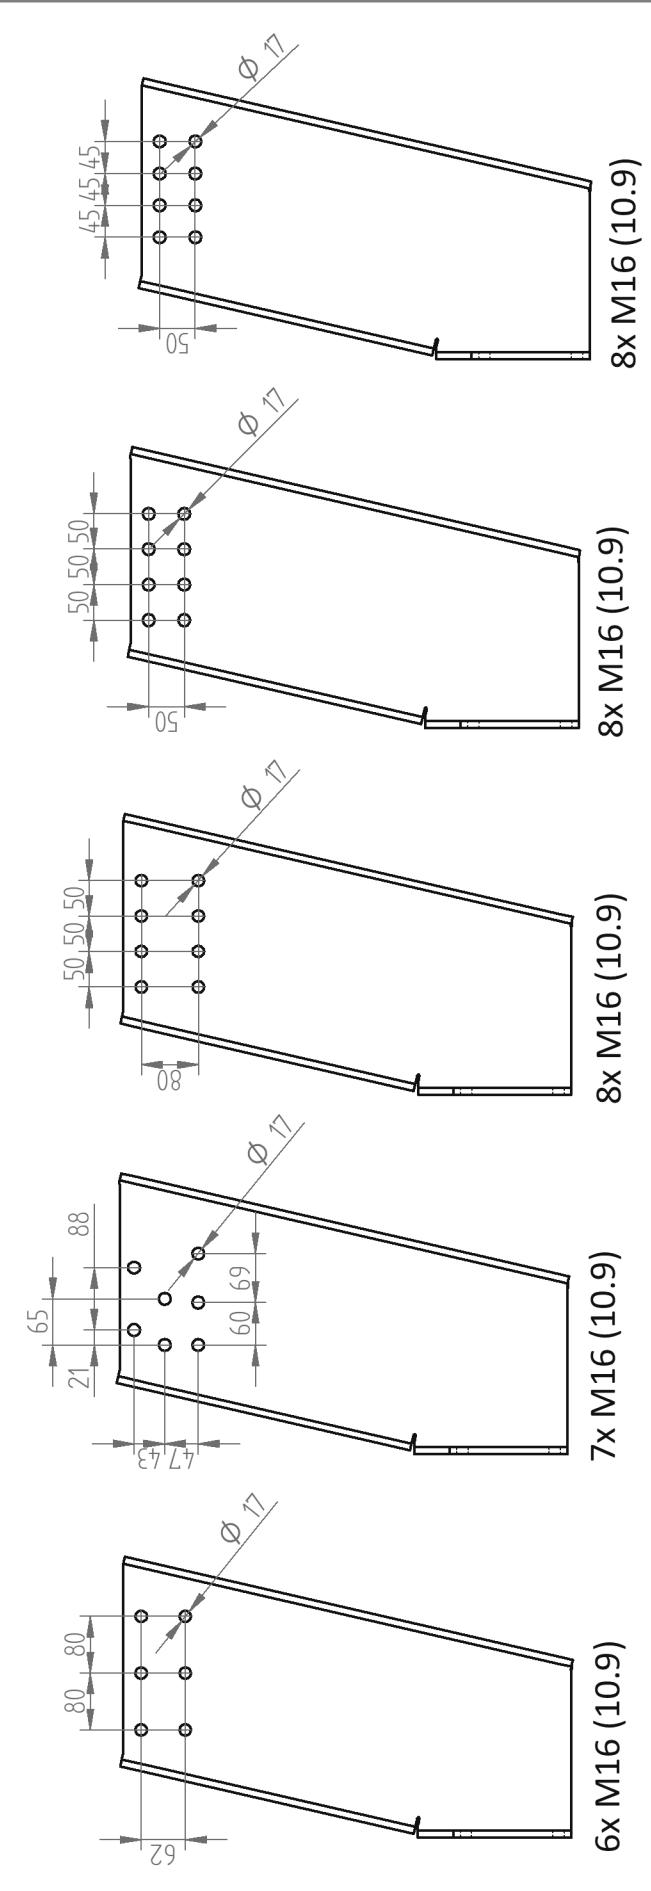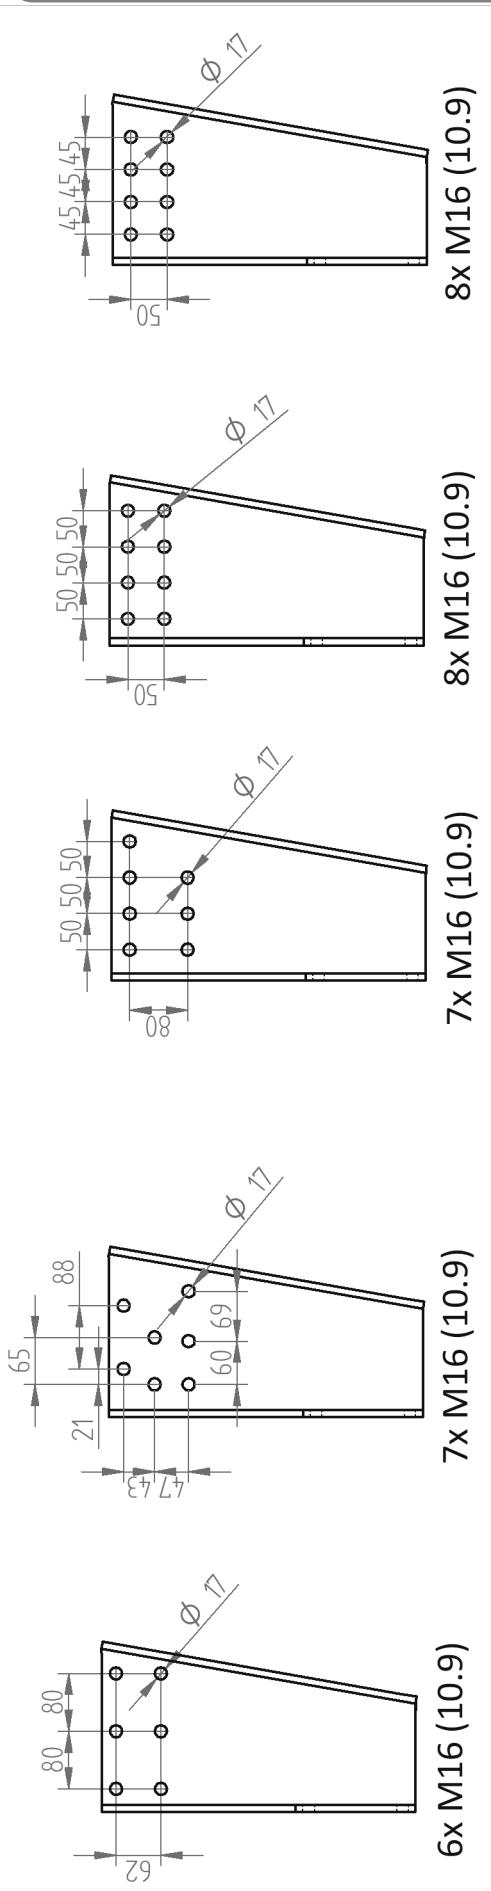






**Hole Patterns Must Always be  
drilled with a minimum of 25mm  
Of Material Above**

## Minimum Hole Patterns



# Tow-Trust Towbars

## TTRUPD Fitting Instruction

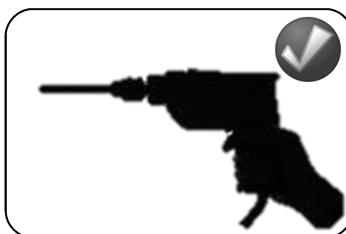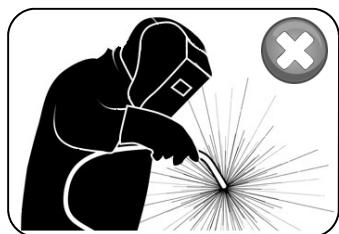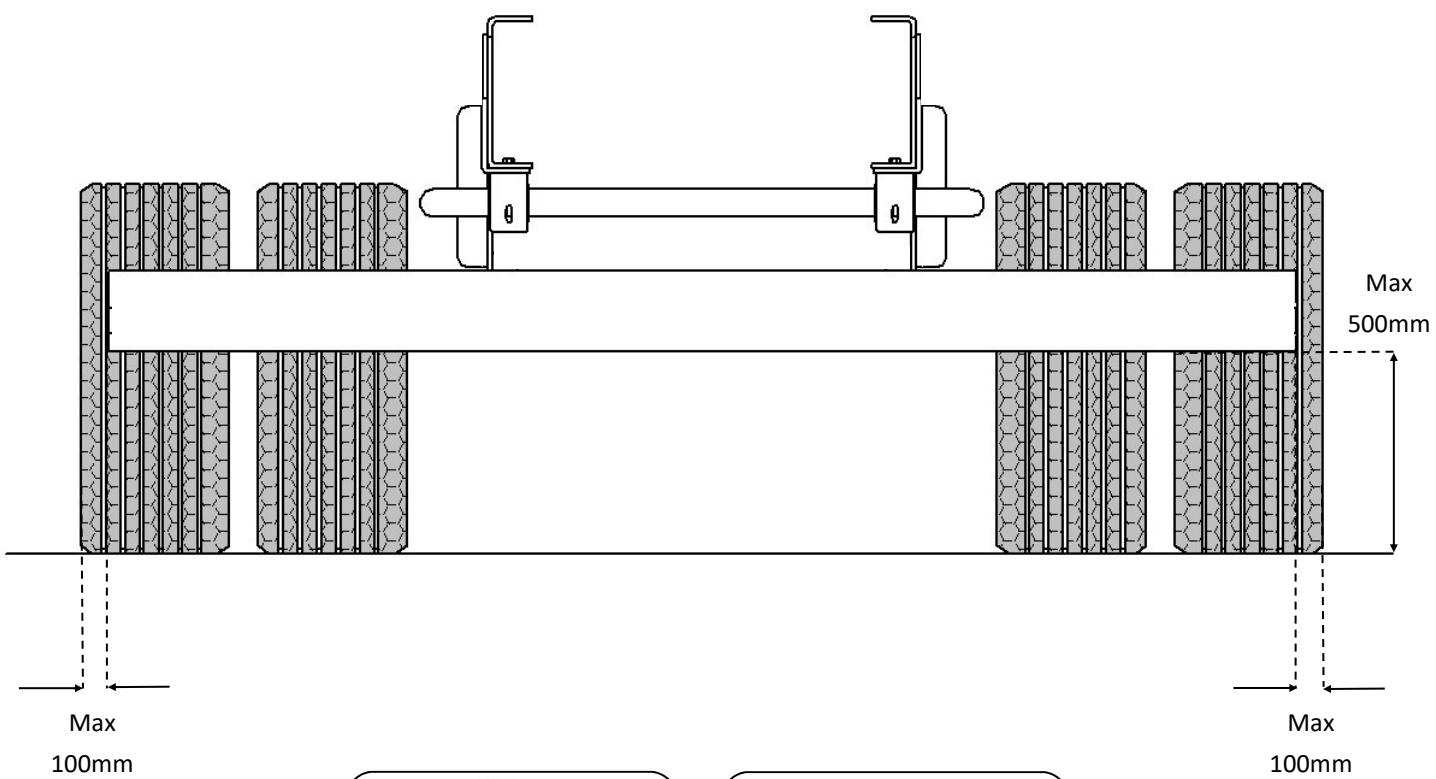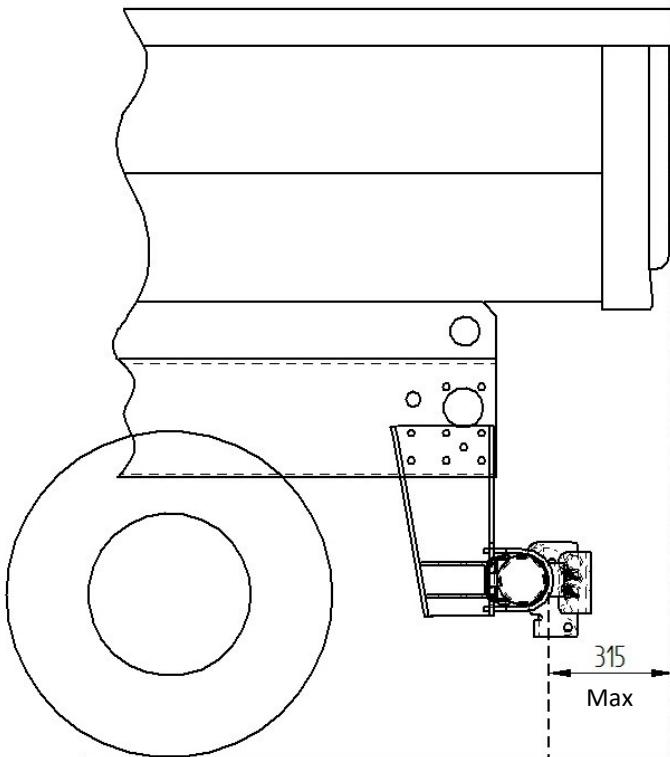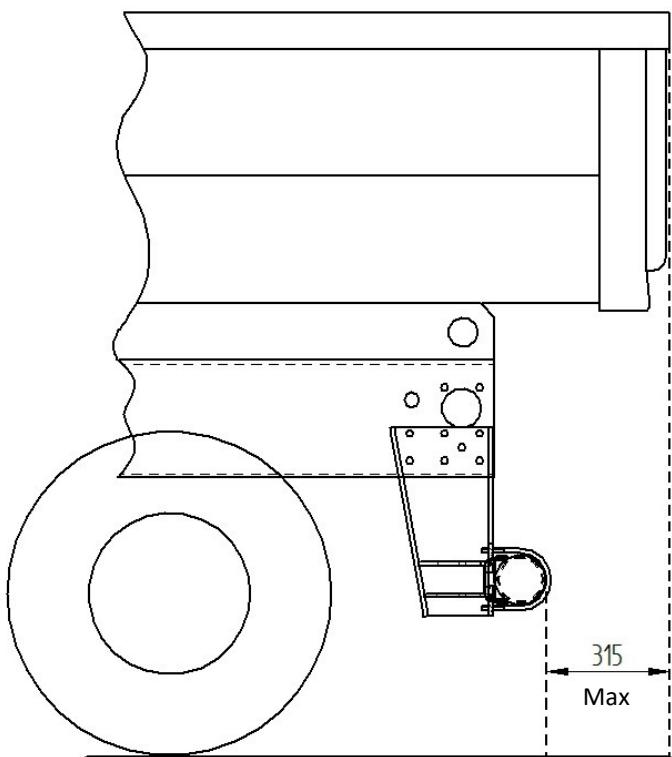



# Tow-Trust Towbars

## TTRUPD Fitting Instruction



### Parts List: Part No. TTRUPD-N2





2008mm



1x 2008mm NON Towing Beam, 1x Reg58 Blue Type Approval label & 2 x 114mm Plastic end caps



### Parts List: Part No. TTRUPD-N2T 2008mm

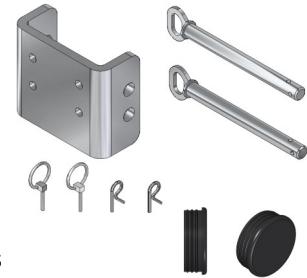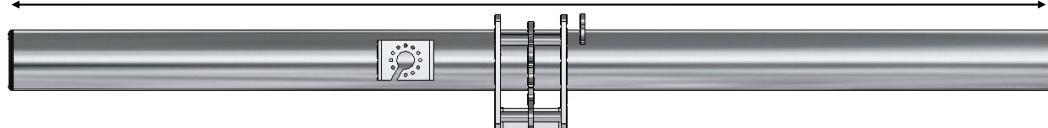

1x REG58 Blue Type Approval label , 1x REG55 Blue Type Approval label

1x 2008mm Towing Beam, 1 x NATO slider plate, 2 pins, 2 R-Clips, 2 x Lynch Pins & 2 x 114mm Plastic end caps

### Parts List: Part No. TTRUPD-N3





2356mm



1x 2356mm NON Towing Beam, 1x Reg58 Blue Type Approval label & 2 x 114mm Plastic end caps

### Parts List: Part No. TTRUPD-N3T 2356mm

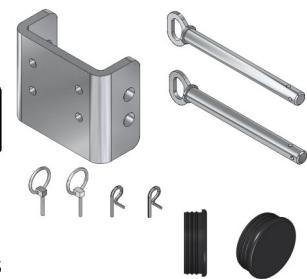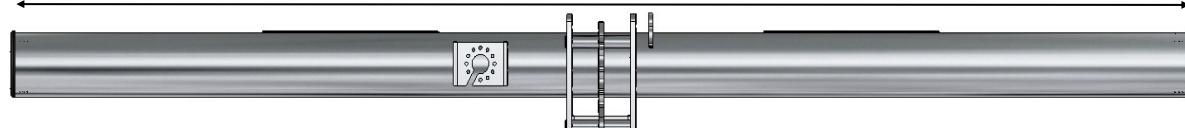

1x REG58 Blue Type Approval label , 1x REG55 Blue Type Approval label

1x 2356mm Towing Beam, 1 x NATO slider plate, 2 pins, 2 R-Clips, 2 x Lynch Pins & 2 x 114mm Plastic end caps



### Parts List: Part No. TTRUPD-ARM#1



434mm

2x Handed side arms (ARM#1), 4x 130mm M12 U Bolts, 8x M12 Lock Nuts, 8x 12 x 25 F/W, 16x M16 x 50 Flange Bolts (10.9) & Flange Nuts

### Parts List: Part No. TTRUPD-ARM#2



629mm

2x Handed side arms (ARM#2), 4x 130mm M12 U Bolts, 8x M12 Lock Nuts, 8x 12 x 25 F/W, 16x M16 x 50 Flange Bolts (10.9) & Flange Nuts




# Tow-Trust Towbars


## TTRUPD Fitting Instruction




1. Mark off holes in attachment brackets at required height

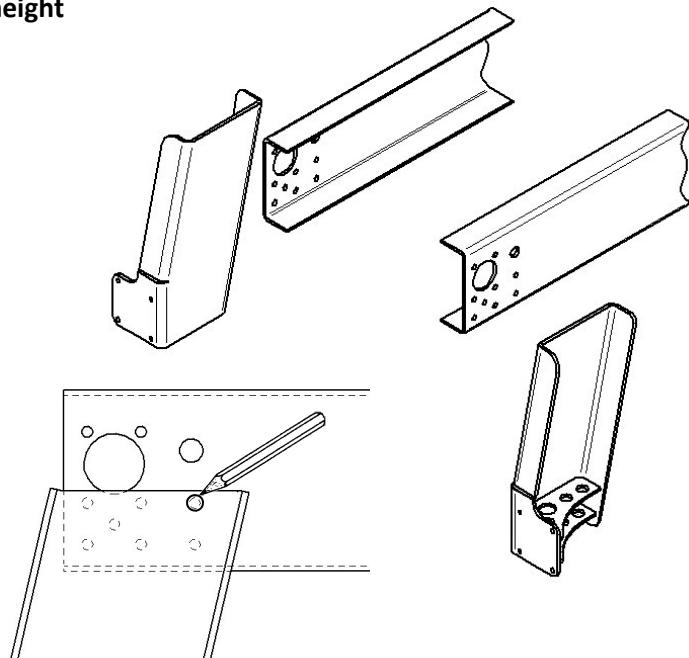



2. Drill holes in attachment brackets at required height and cut off unnecessary material if required  
(Attachment brackets must always be drilled to one of the minimum of hole patterns supplied)

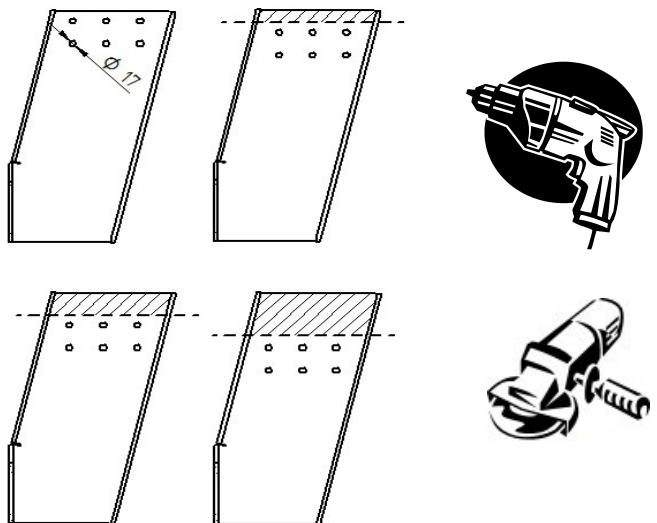



1. Bolt attachment brackets to the vehicle chassis

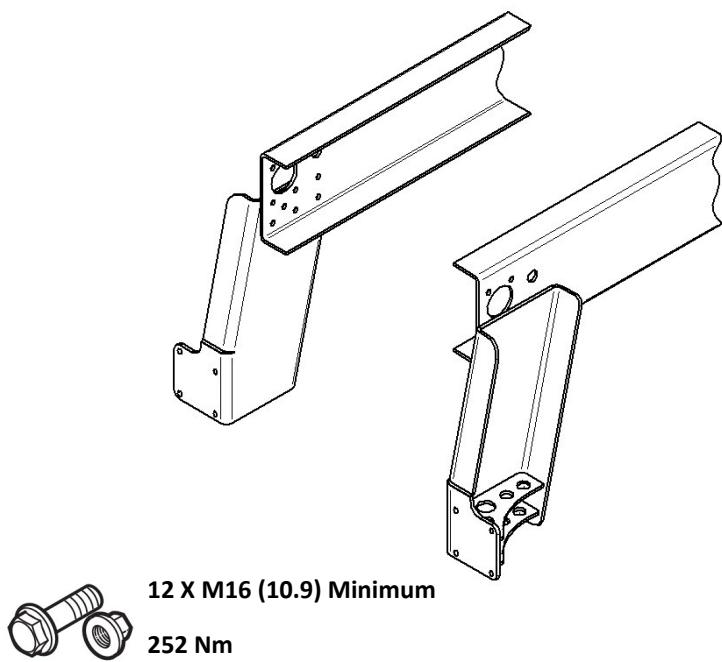

4. Bolt chosen beam to attachment brackets using 4x M12 U-Bolts, 8x 12 x 25 flat washers & 8x M12 lock nuts

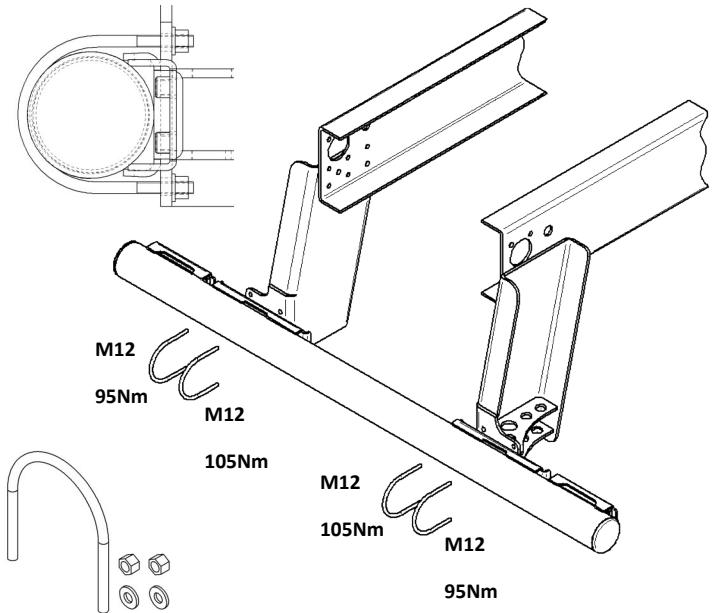

1500 Miles

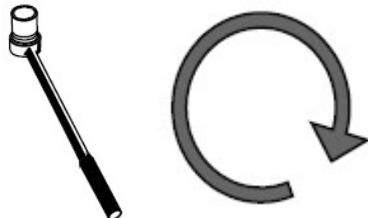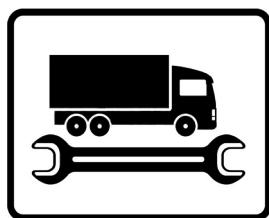



# Tow-Trust Towbars

## TTRUPD Fitting Instruction




Always fit with a 4 bolt Type




Approved Pin Ball or Jaw Only

Example Part Numbers

Part No APBJ-4BS

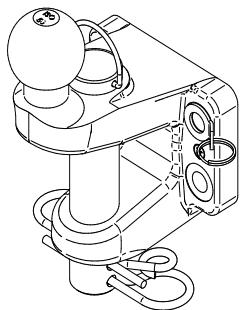

Example image above

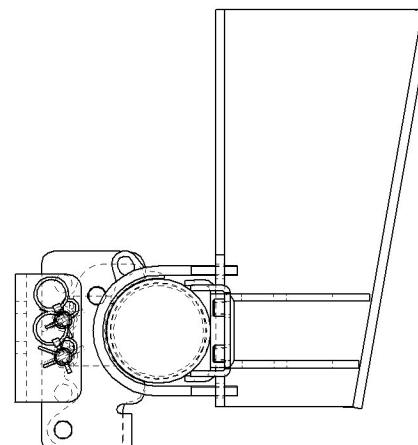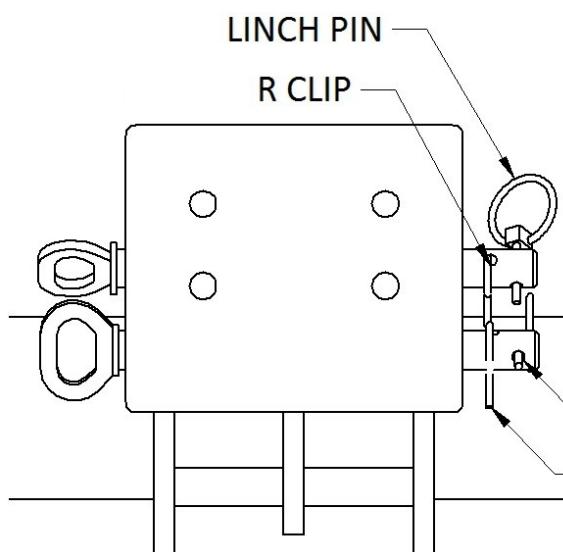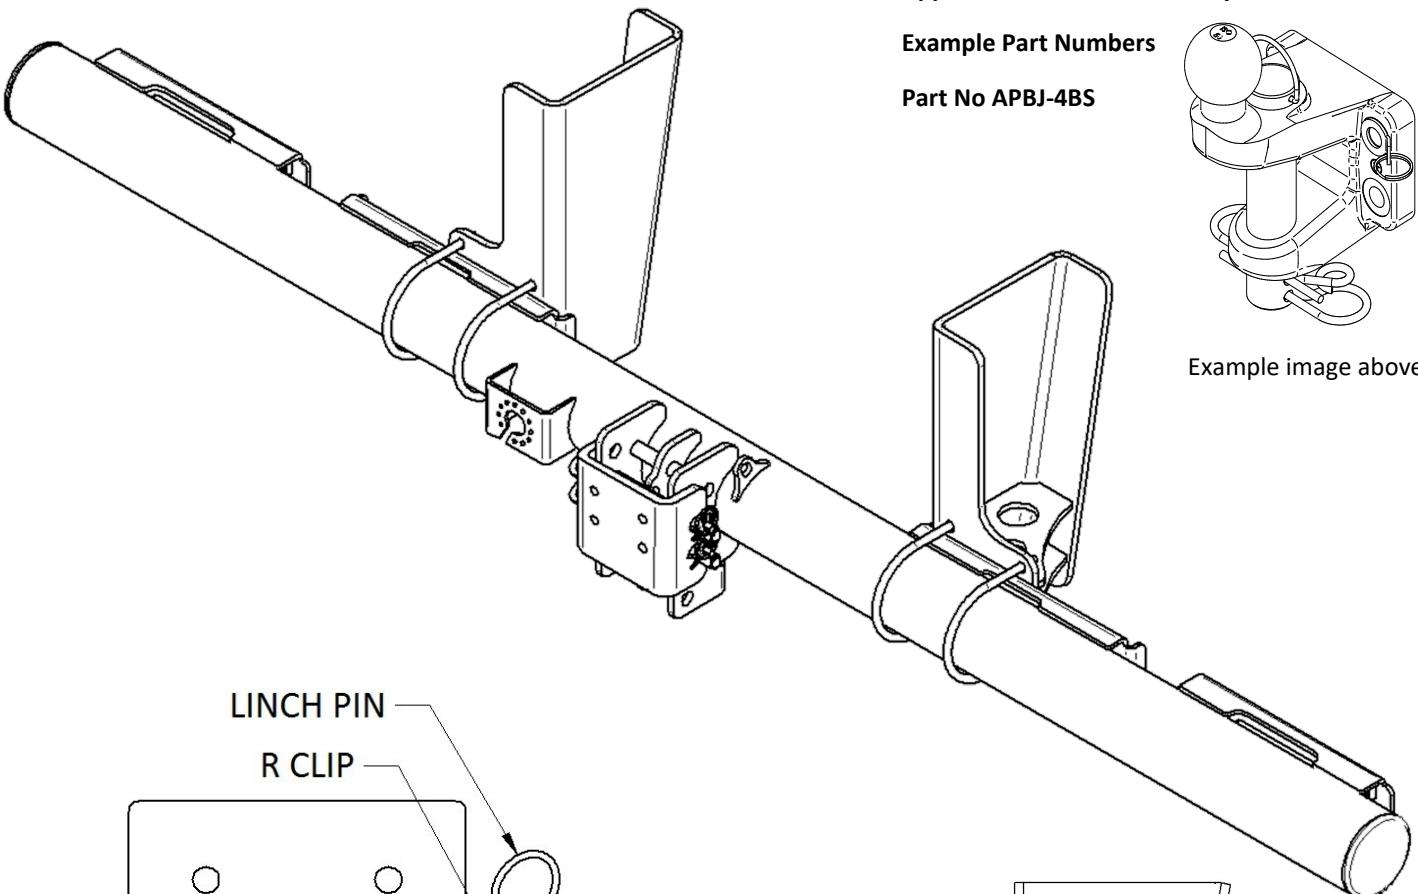

1500 Miles

