



AAL-KO-DP Kit

Item	Qty	Description	Item	Qty	Description
A	2	Drop Plates	E	8	M12 X 55 (10.9) Bolts & Nyloc Nuts
B	2	Spacer Plates	F	4	M14 x 50 Bolts & S/P Washers
C	2	Clamp Plates	G	12	12 x 25 Flat Washers
D	2	Towbar Spacers	H	4	12 x 40 Flat Washers
			J	4	14 x 27 Flat Washers

Notes Before Installation:

1. Always establish the correct chassis width and spacer requirements.
2. Carefully read the Towbars full fitting instructions.
3. The drop plates can be cut down if required.
4. The drop plates must have 30mm of material where the Towbar Side Arm/Crossbar is fixed.


Drop Plate Installation Using Figure 1:

1. Locate the rear mounting points and loosely attach items A with items B (when required) and items C to the chassis each side using items E with items G and items H.
2. Loosely attach the Towbar Crossbar and the required spacer combination (plus items D when required) using items F with items J.
3. Follow the remaining fitting instructions for Towbar.


Drop Plate Installation Using Figure 2:

1. Locate the rear mounting points and loosely attach items A with items B (when required) and items C to the chassis each side using items E with items G and items H.
2. Loosely attach the Towbar Side Arm using items E with items G.
3. Loosely attach the Towbar Crossbar and the required spacer combination (plus items D when required) using items F with items J.
4. Follow the remaining fitting instructions for Towbar.


Chassis
Drop Plates (A)

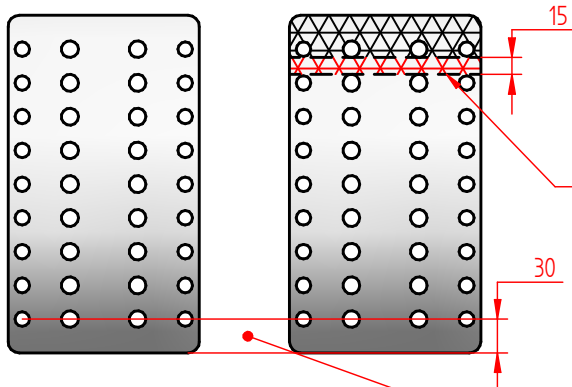


Chassis
Spacer Plates (B)

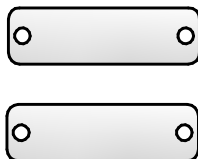

Chassis
Clamp Plates (C)

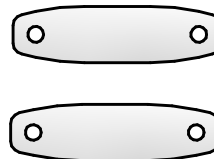



Towbar
Spacer Plates (D)

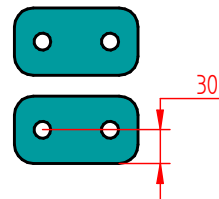

When Cutting Plates Down
There Always Must Be
A Minimum Of 15mm Of Material
Above The Mounting Points


There Always Must Be
30mm Of Material On The Lower Edge
This Matches The Dimension
Of The Side Arms, Spacers & Crossbar

Figure 1

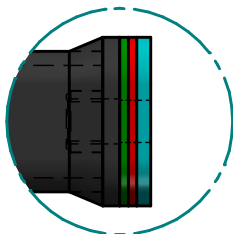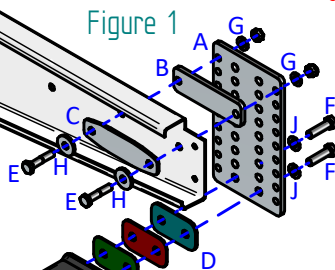

See Original Towbar Fitting Instructions
In Relation To The Red And Green Spacers
Using The Cyan Spacers Gives An Additional 10mm Overall Width

Figure 2

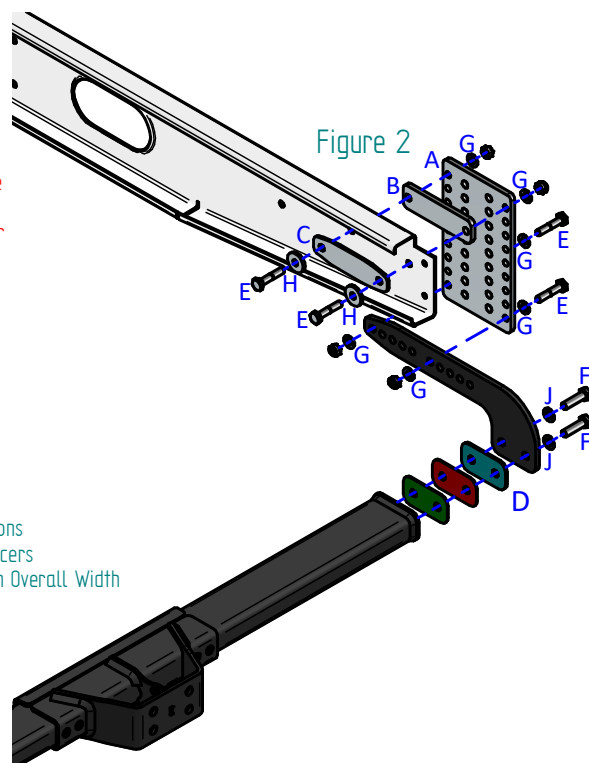

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.