



**TALKO3 Vehicles Built From AL-KO 1416mm to 1448mm Wide Chassis (AFKS Plant & Go Wide Track 2015>)
Plus Vehicles Using Fiat (PSA) Chassis Extensions Kits Mounted To The External/Outside Face Of The OEM Chassis 2006>**


Item	Qty	Description	Item	Qty	Description
A	1	TALKO3 Crossbar 1416mm	F	2	M16 X 60 Bolts & Nyloc Nuts
B	2	Side Arms	G	4	M12 x 40 (10.9) Bolts & Nyloc Nuts
C	1	Rear C-Section	H	4	M14 x 45 Bolts & S/P Washers
D	1	Flange Assembly	J	4	M14 x 140 Bolts & Nyloc Nuts
E	4	Spacer Plates	K	4	12 x 25 Flat Washers
			L	4	12 x 40 Flat Washers
			M	12	14 x 27 Flat Washers
			P	12	M14 Bolt Caps

Notes:

1. Ensure the type approval label is in the position shown below when installing this product.
2. Before installation always establish the correct chassis width and spacer requirements.

Towbar Installation:

1. Locate the rear mounting points and loosely attach items **B** to the chassis each side using items **G** with items **K** and items **L**.
2. Loosely attach item **A** to items **B** (**plus items E when required**) using items **H** with items **M**.
3. Loosely attach items **C** and **D** to item **A** using items **J** with items **M**.
4. Using Items **F** secure your desired ball bracket and wiring plate (Not supplied in this kit) to Item **D**.
5. Fully tighten all the fixings ensuring the Towbar is ridged, square and secure.
6. Attach items **P** to items **H** and items **J**.

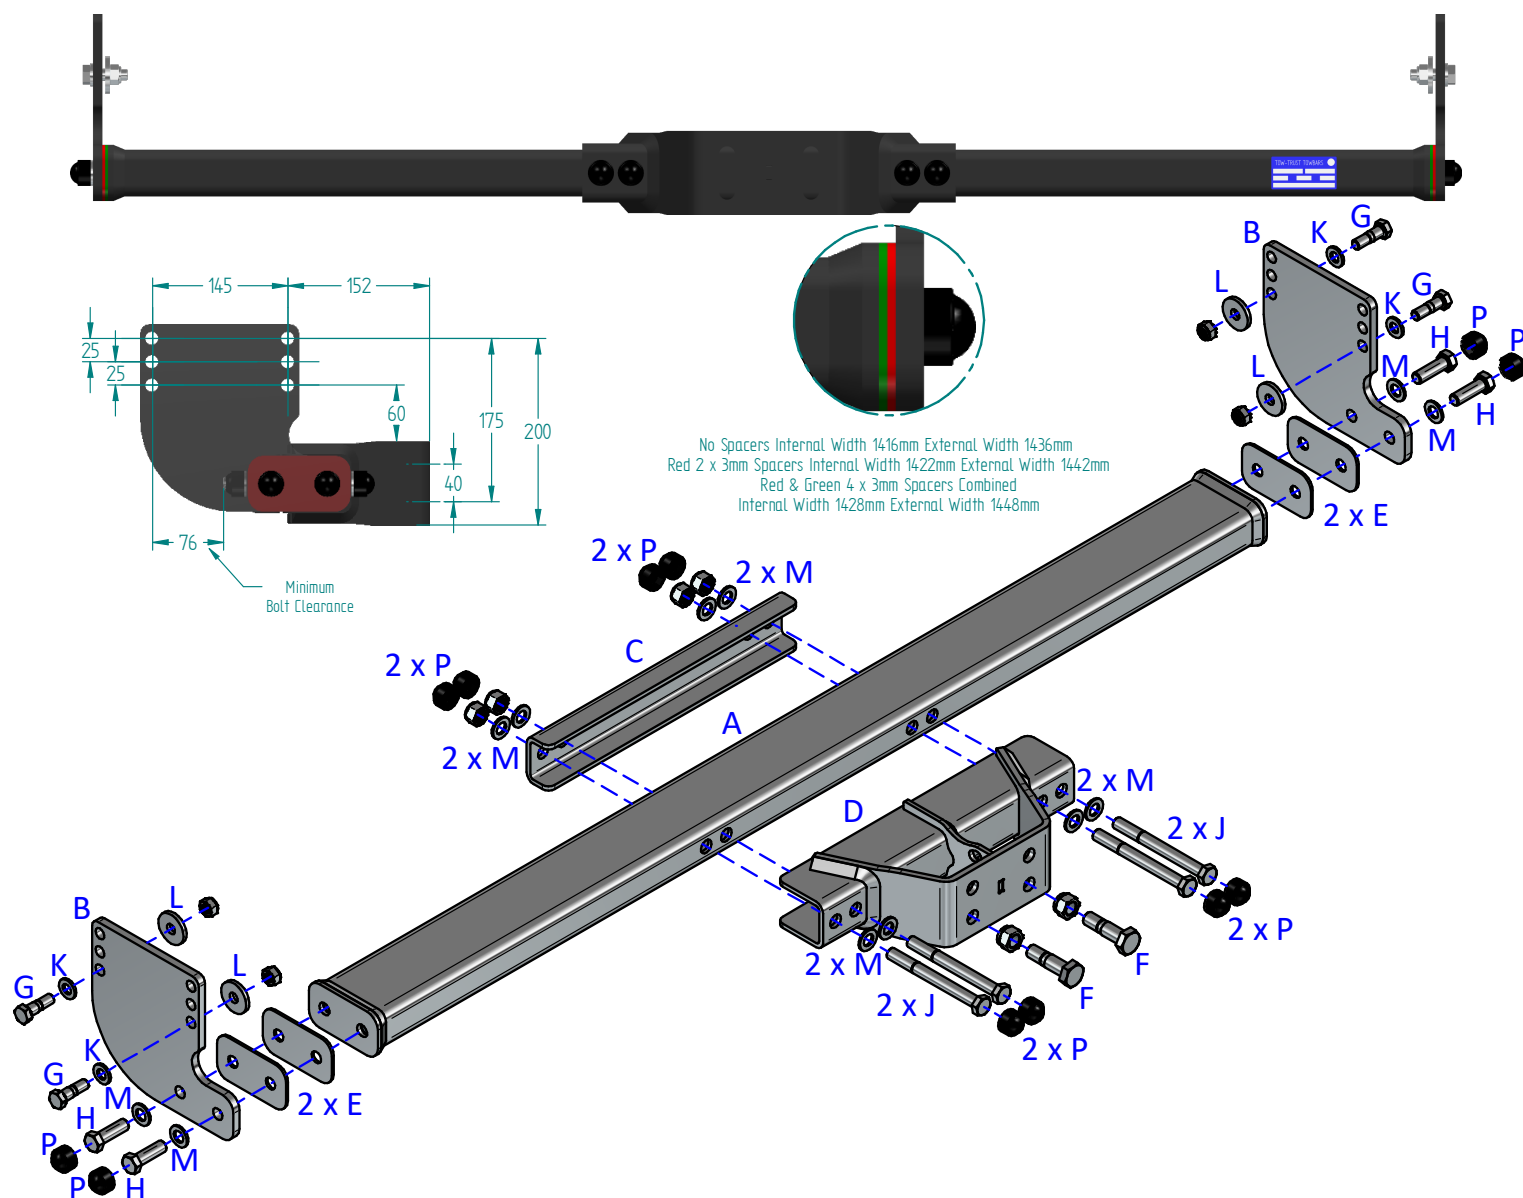

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.