

**TAUT9VK-6224 Ford Transit Chassis Based Vehicles 2006>**  
**Internally Mounted Chassis Extensions With 145mm Hole Centres 814-834mm Wide**

Item	Qty	Description	Item	Qty	Description
A	1	TAUT9 Crossbar	H	1	TTFPU Universal Flip Up Socket Plate
B	2	Side Arms	J	2	M12 x 25 Bolts & S/P Washers
C	2	Clamp Plates	K	2	M12 x 22 Bolts & S/P Washers
D	2	Spacer Plates	L	8	M12 x 45 Bolts & Nyloc Nuts
F	1	6#24 Detachable Neck	N	20	12 x 25 Flat Washers


**Notes: -**

1. This Towbar can also be installed on Ford Chassis Extensions mounted to the inside face of the chassis using the 145mm mounting points.
2. **Page 1** is for models with **ATT-CHASS-FO-\*\*\*\*** extensions. **Figures 1, 2 & 3** Show the correct settings for mounting this Towbar.
3. **Page 2** is for Ford Based Internally Mounted Chassis Extensions with 145mm hole centres.


### Towbar Installation : -

1. Using **Figure 1** identify the correct position to mount the Towbar.
2. Using **Figure 2** loosely fix items **B** to the outside face of each chassis extension using items **L** with items **N** with items **C** on the inside of the chassis extensions.
3. Using items **L** with items **N** loosely fix item **A** to items **B** with items **D** in between as required.
4. Using items **J** and items **K** with items **N** fix item **F** and item **H** to item **A** to the position shown in **Figure 2**.
5. Fully tighten all fixings ensuring the Towbar is rigid, square, and secure.


### Figure 1

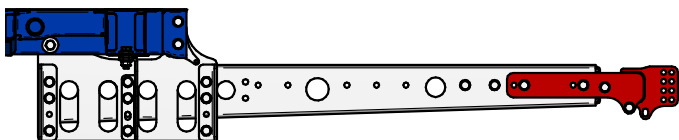





## Figure 2



### Figure 3

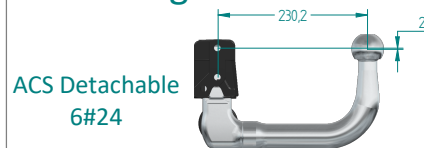

## Models With Tow-Trust Chassis Extensions

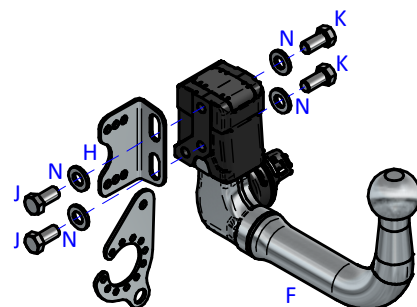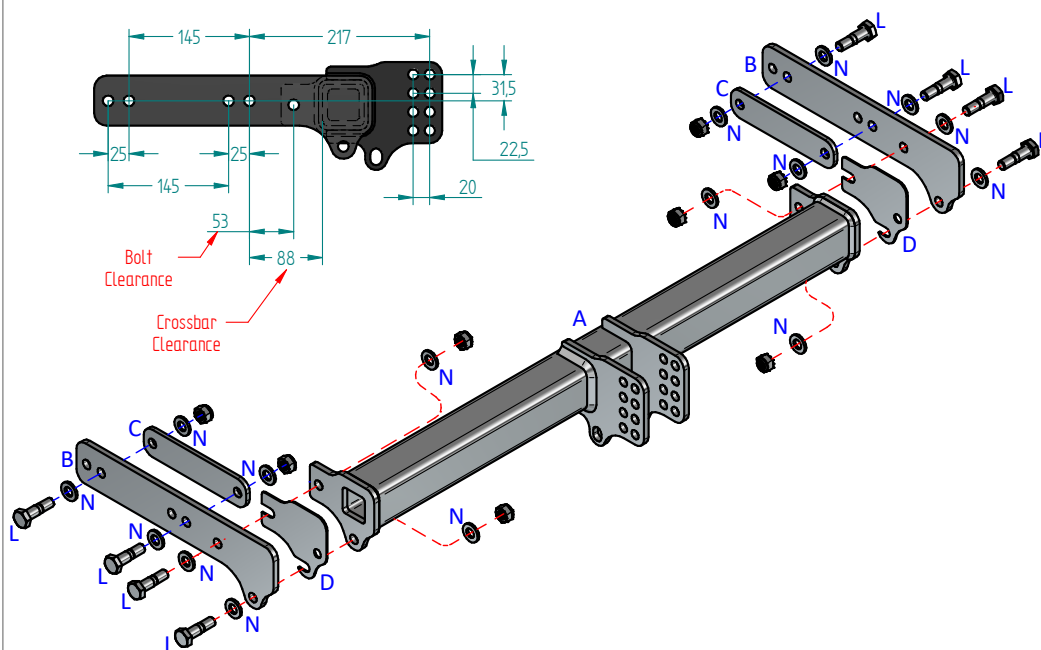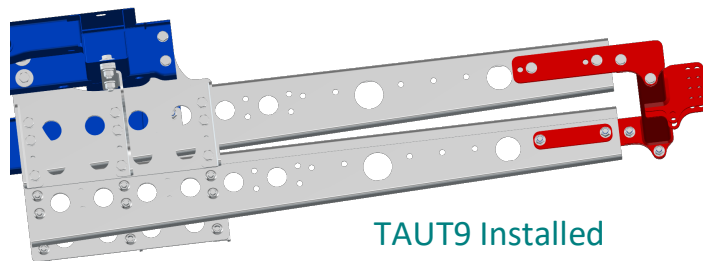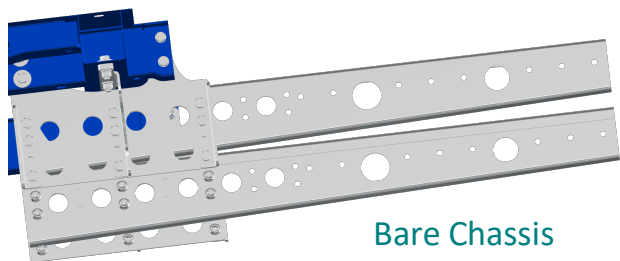

**Notes:**







1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.

## Notes: -

1. This Page contains images and instructions only for mounting this Towbar to Ford Based Motorhomes with Chassis Extensions.
2. It is important that any Chassis Extensions fitted are checked for suitability for towing and that there is a towing capacity before installation.
3. It is important that all dimensions are checked for suitability before purchase and fitment.
4. Some Chassis Extensions may require strengthening kits and addition components before they become compatible with towing.
5. **Figure 4** shows the chassis width and position the Towbar can be used with.

## Towbar Installation:

1. Using **Figures 5, 6 & 7** identify the correct position to mount the Towbar.
2. Using **Figure 6** loosely fix items **B** to the outside face of each chassis extension using items **L** with items **N** with items **C** on the inside of the chassis extensions.
3. Using items **L** with items **N** loosely fix item **A** to items **B** with items **D** in between as required.
4. Using items **J** and items **K** with items **N** fix item **F** and item **H** to item **A** to the position best suited to the vehicle.
5. Fully tighten all fixings ensuring the Towbar is rigid, square, and secure.

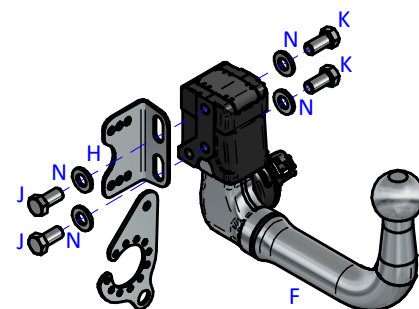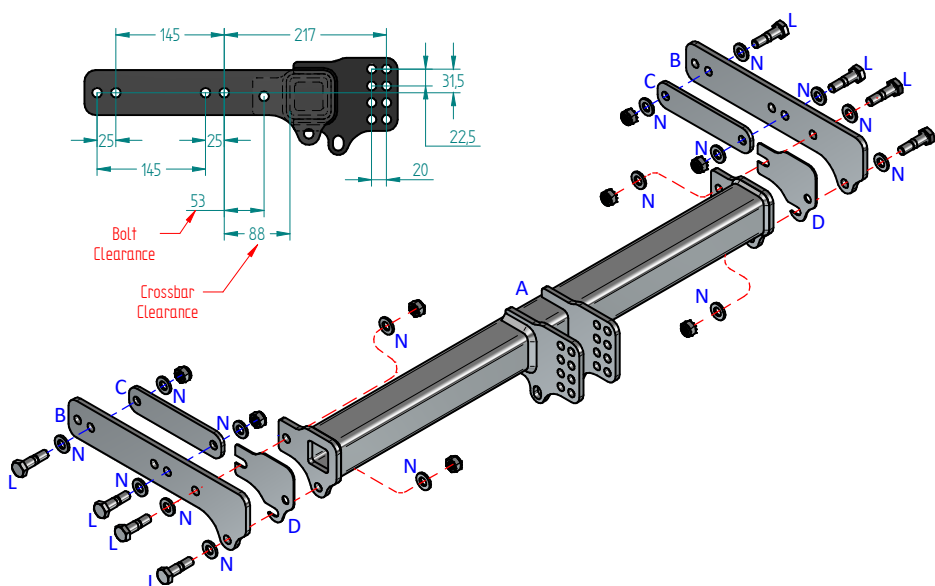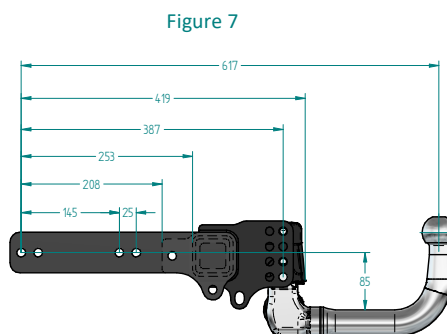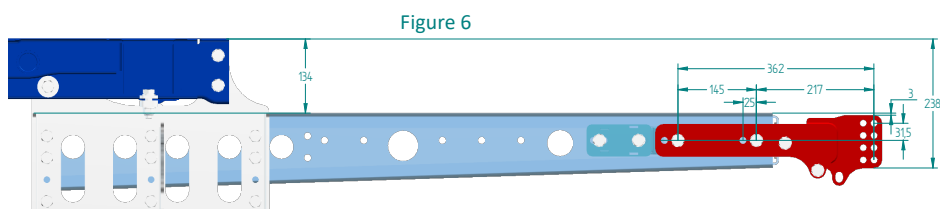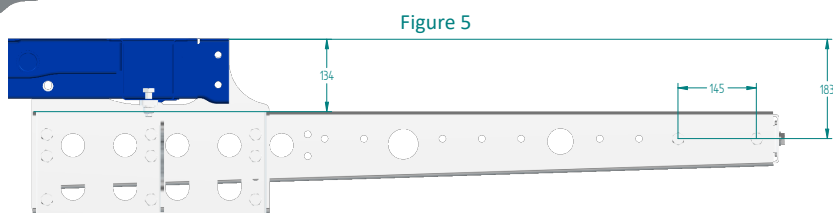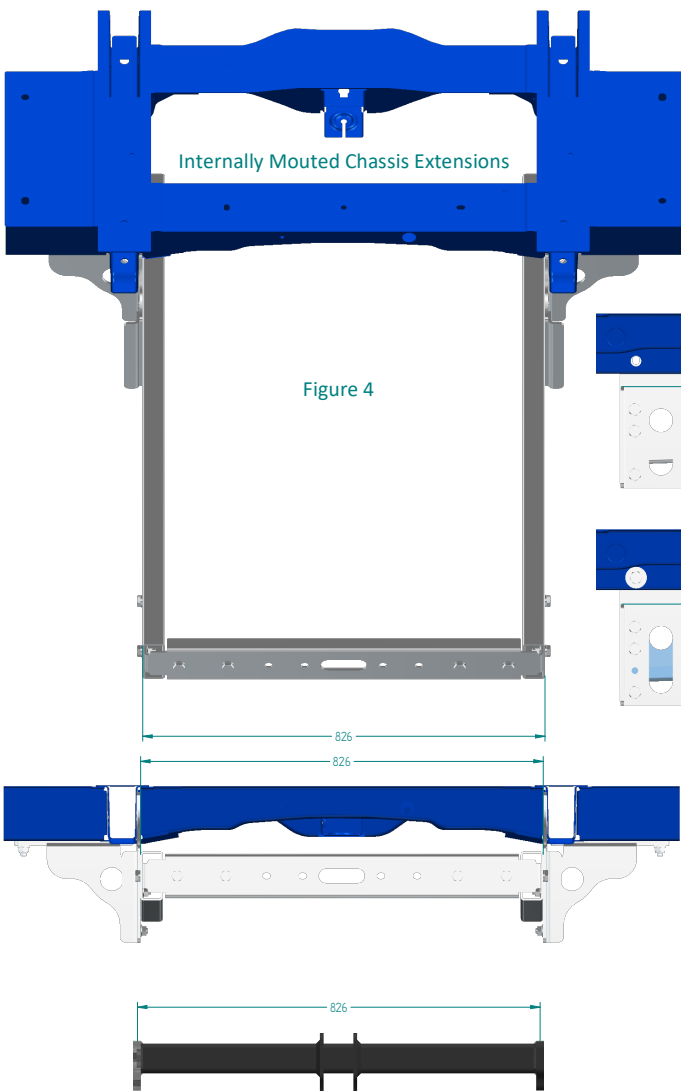

- Notes:**
1. For Torque settings see general notes overleaf.
  2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
  3. We recommend the use of PRO-TOW Couplings with all our products