

## ATT-CHASS-CSK Chassis Strengthening Kit For ATT-CHASS Range of Products & Alko Chassis Vehicles Requiring Additional Strengthening Kits

| Item | Qty | Description | Item | Qty | Description                   |
|------|-----|-------------|------|-----|-------------------------------|
| A    | 2   | Inner Arms  | C    | 12  | M12 x 30 Bolts & 4 Nyloc Nuts |
| B    | 2   | Outer Arms  | D    | 16  | 12 x 25 Flat Washers          |
|      |     |             | E    | 8   | M12 Serrated Flange Nuts      |
|      |     |             | F    | 12  | M12 Bolt Caps                 |

**Note:** This Chassis Strengthening kit can be fitted to the internal or external face of chassis extensions.

There are additional supports and brackets available separately to assist with a full installation where required. (See Page 2).


This kit requires the chosen drop plates and extensions to be fitted to the vehicle first or have the Alko chassis present.

For fitment to **ATT-CHASS Range** this kit requires the fitment of **ATT-CHASS-CB**. (See Page 2).

Item A must be mounted inside **ATT-CHASS-EXT** when used on the internal face as shown in the diagram below and item B mounted to **ATT-CHASS-CB**.

### Strengthening Kit Installation:

- Loosely assemble items A and items B using Items C and Items D. **Note: Using the nyloc nuts at this point.**
- Loosely fix items A and B to the chassis extensions (**ATT-CHASS-EXT**) and crossbar (**ATT-CHASS-CB**) using items C, D and E.
- Loosely Install the Towbar and any other items as per each individual set of instructions.
- Fully tighten all fixings ensuring the entire installation is ridged, square and secure then fit items F to items C.

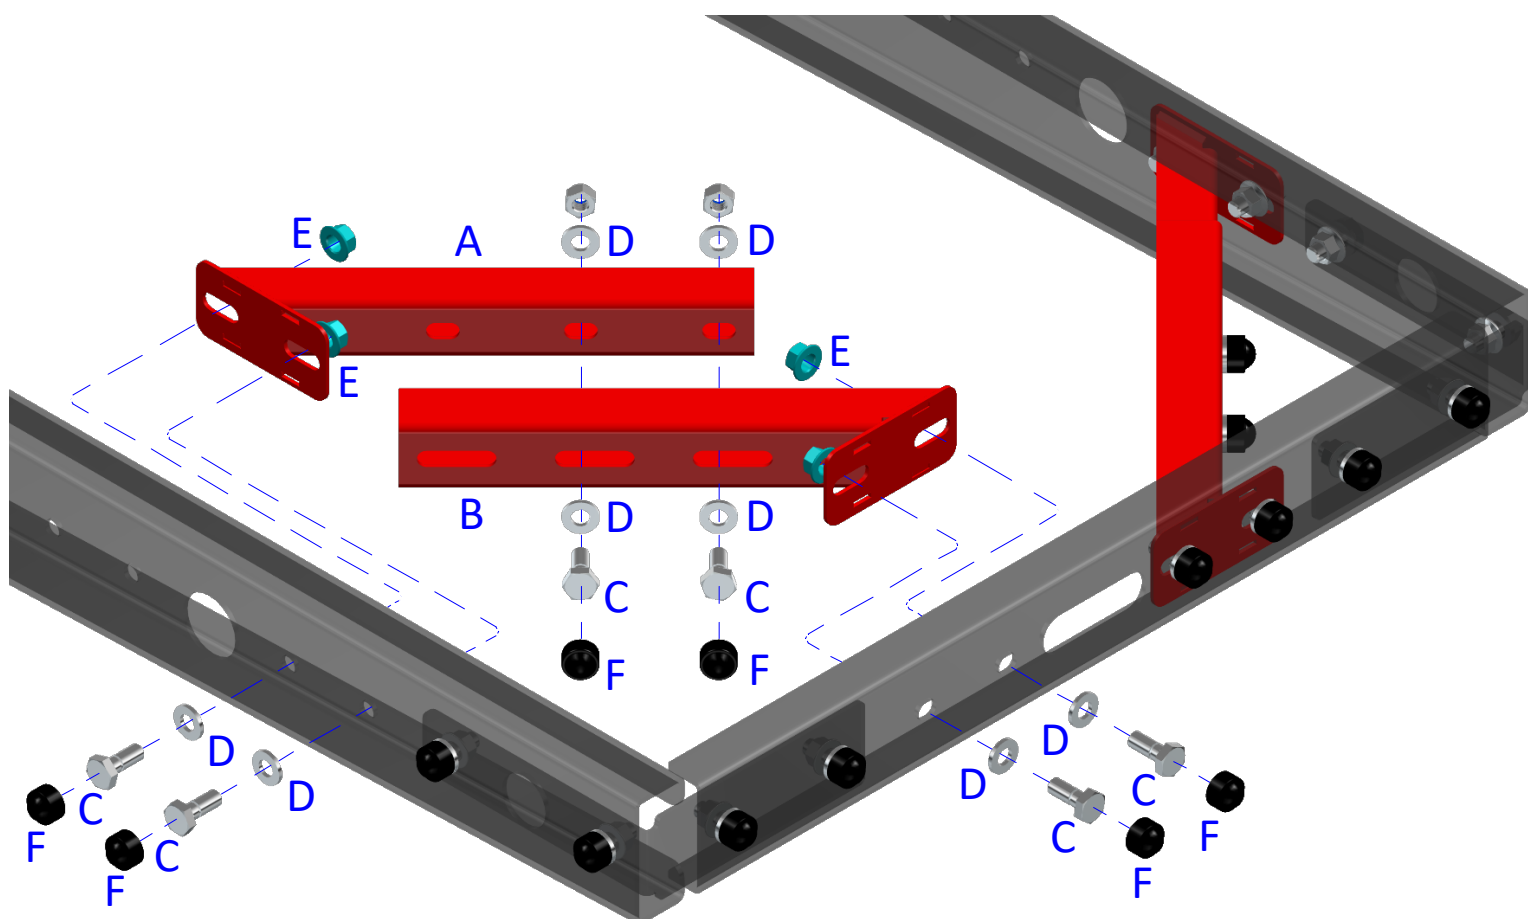

### Notes:

- For Torque settings see general notes overleaf.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.

## Optional Extra's

Note: The images shown below are for illustration purposes only. Final fitment may appear slightly different depending on the vehicle's chassis width and drop plate location.

Part Number:

**ATT-CHASS-CB**

Description:

Crossbar Kit

Only the red parts are supplied in this kit.



Part Number:

**ATT-CHASS-CSK**


Description:

Chassis Strengthening Kit

To enable fitment of this kit.

Part Number: **ATT-CHASS-CB**  
must be installed along with the extensions  
first.

Only the red parts are supplied in this kit.

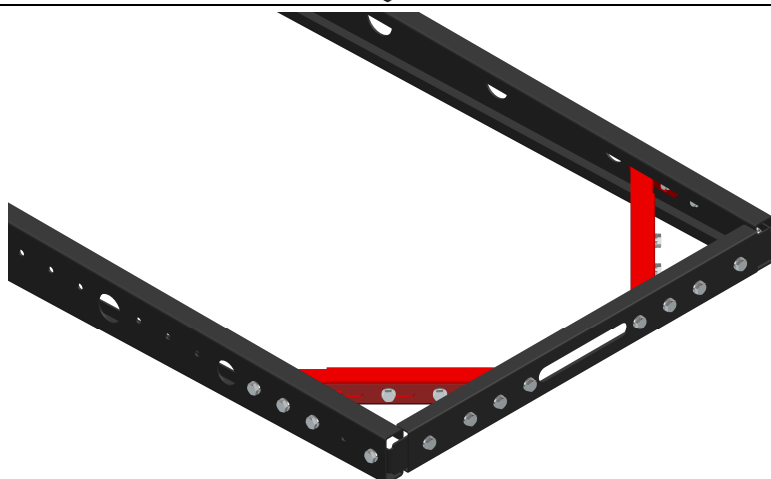


Part Number:

**ATT-CHASS-FS**

Description:

Floor / Garage  
Support Kit

Only the red parts are supplied in this kit.

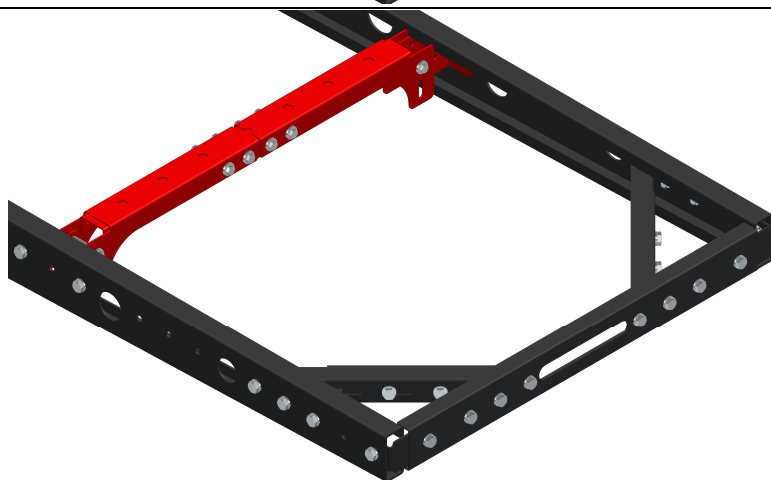

Part Number:

**ATT-CHASS-BK**


Description:

Individual  
Support Kit

Side brackets can be installed with or without  
Part Numbers:

**ATT-CHASS-CB**  
**ATT-CHASS-FS**  
**ATT-CHASS-CSK**

Only the red parts are supplied in this kit.

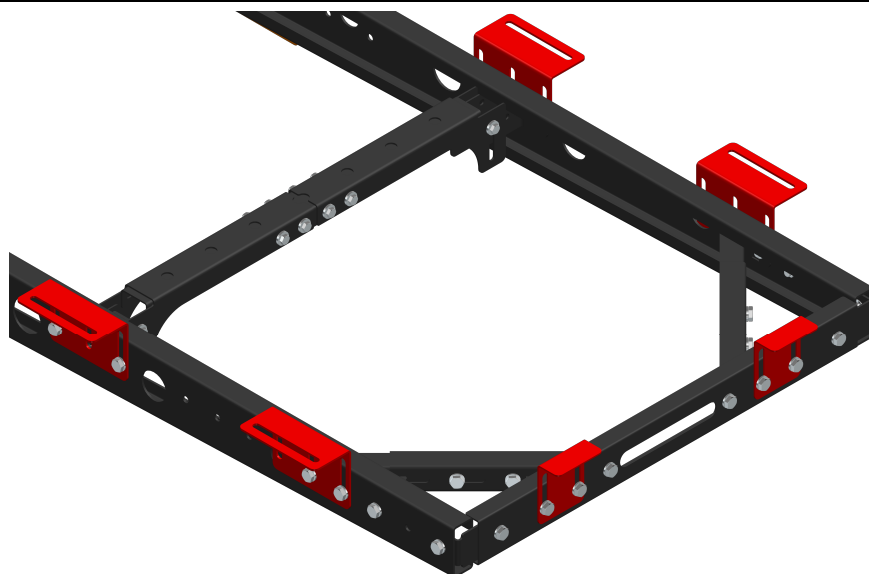

### Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.