

ATT-CHASS-FS Chassis Extension Floor / Garage Support Kit (ATT-CHASS-EXT Ordered Separately)

Item	Qty	Description	Item	Qty	Description
A	1	Central Bridge	E	6	M10 x 90 Bolts & Nyloc Nuts
B	2	Side Arms	F	4	M12 x 25 Bolts & Serrated Flange Nuts
C1	2	Left Hand Angle Brackets	G	12	10 x 25 Flat Washers
C2	2	Right Hand Angle Brackets	H	4	12 x 25 Flat Washers
D	6	17 O/D x 53mm Long Tubes	J	12	M10 Bolt Caps
Foam Tape	1	1.5M Long	K	4	M12 Bolt Caps

Note: This floor/ garage support kit can be fitted to the internal or external face of the chassis extensions.

It may be necessary to remove existing components during the fitment of this product.


There are additional supports and brackets available separately to assist with a full installation where required.

This kit requires the chosen drop plates and extensions to be fitted to the vehicle first.

Floor / Garage Support Installation:

1. Install the drop plates and extension kits as per their individual instructions.
2. Cut the Foam Tape into four equal lengths of **365mm** and attach to each one of item **B** as shown **figure 1**, any remaining tape can be attached to item **A** as shown in **figure 4**.
3. Establish the correct assembly required for the vehicle from the three assemblies shown below. (**Assemblies 1, 2, or 3**).
4. Loosely fix item **A** to items **B** as per the chosen assembly diagram using items **E** with items **G** ensuring items **D** are fitted in-between as shown.
5. Loosely fix items **C1** and **C2** to items (**ATT-CHASS-EXT**) using items **F** with items **H** as shown in **figure 3**.
6. Loosely fix the assembly of items **A** and **B** to items **C1** and **C2** using items **E** with items **G** and items **D** fitted in-between **C1** and **C2** as shown in **figure 2**.
7. Loosely install the Towbar and any other items as per each individual set of instructions and raise the assembly of items **A** and **B** ensuring it's touching the motorhome floor/garage.
8. Fully tighten all fixings ensuring the entire installation is ridged, square and secure then fit items **J** to items **E** and items **K** to items **F** to complete the installation of this kit.

Assembly 1

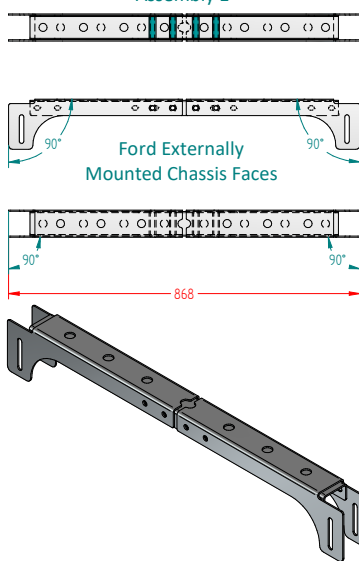

Assembly 2

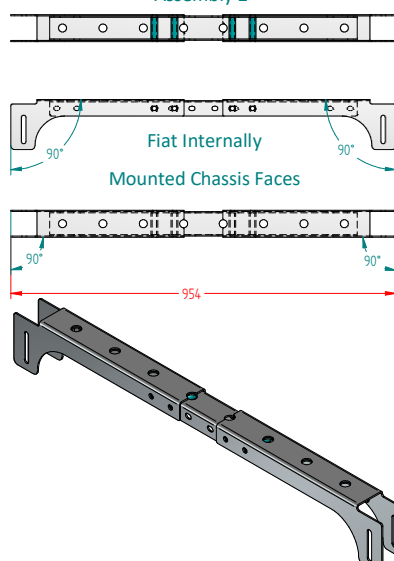


Figure 1

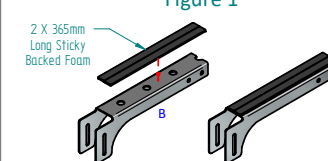


Figure 2


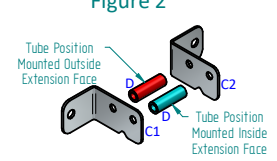


Figure 3

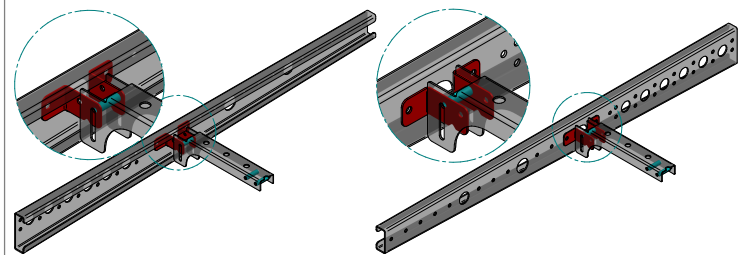

Internally
Mounted Chassis Face

Externally
Mounted Chassis Face

Assembly 3


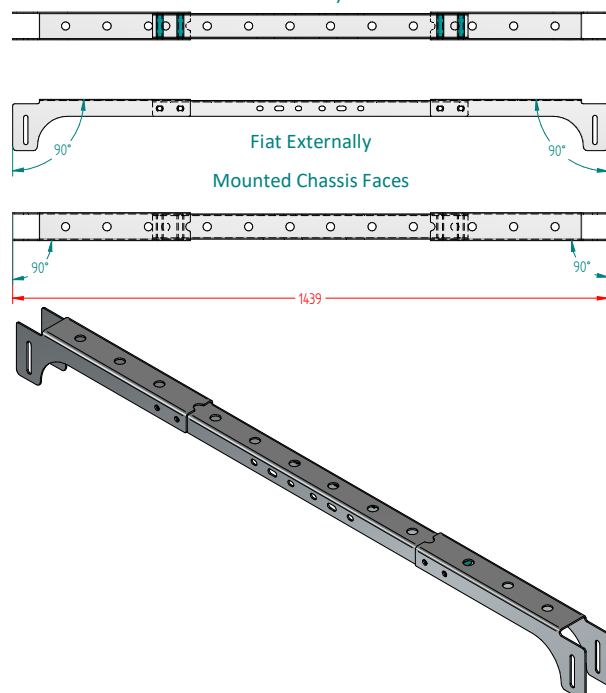


Figure 4

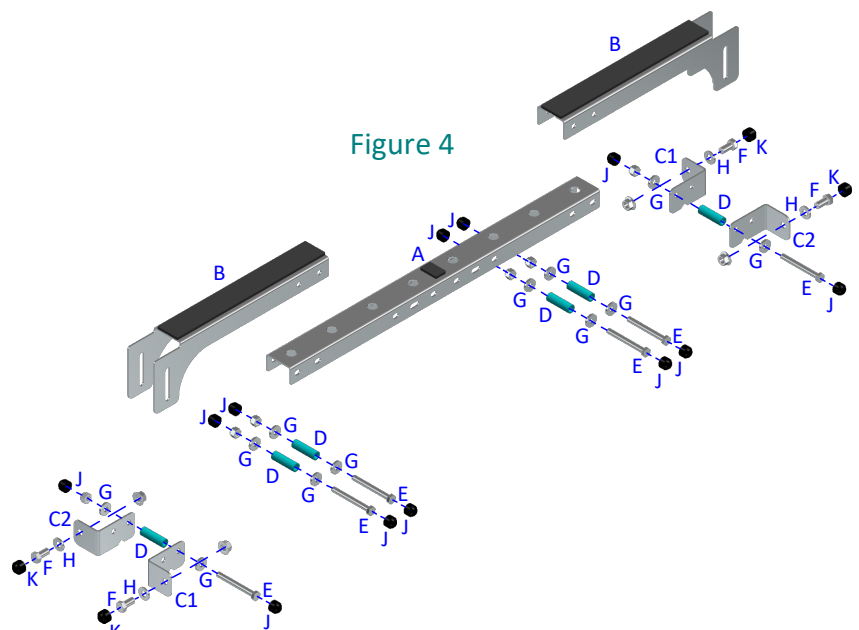

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.

Optional Extra's

Note: The images shown below are for illustration purposes only. Final fitment may appear slightly different depending on the vehicle's chassis width and drop plate location.

Part Number:


ATT-CHASS-CB

Description:

Crossbar Kit

Only for fitment when the chassis extensions are mounted to the external faces of the chassis.

Only the red parts are supplied in this kit.

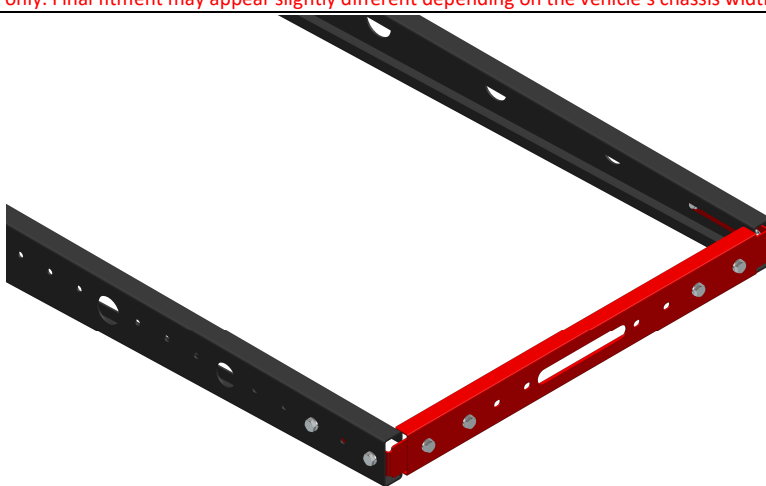

Part Number:

ATT-CHASS-CSK

Description:

Chassis Strengthening Kit

To enable fitment of this kit.
Part Number: **ATT-CHASS-CB**
must be installed along with the extensions first.

Only the red parts are supplied in this kit.



Part Number:


ATT-CHASS-FS

Description:

Floor / Garage Support Kit

Only for fitment when the chassis extensions are mounted to the external faces of the chassis.

Only the red parts are supplied in this kit.

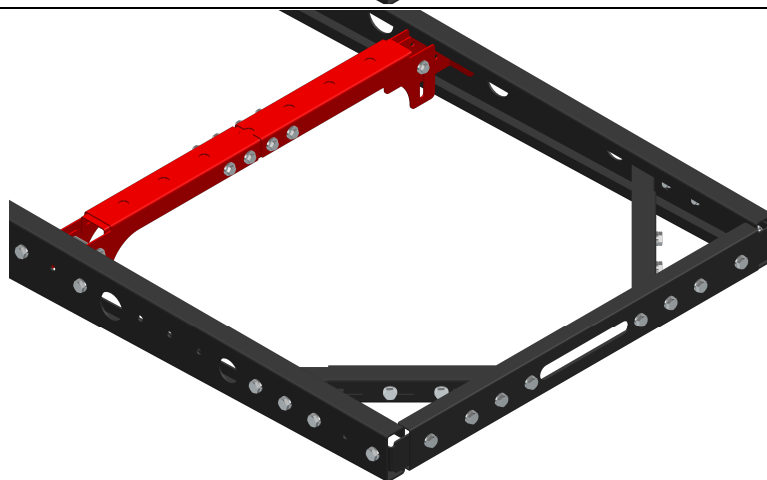

Part Number:

ATT-CHASS-BK

Description:

Individual Support Kit


Side brackets can be installed with or without
Part Numbers:

ATT-CHASS-CB

ATT-CHASS-FS

ATT-CHASS-CSK

Only the red parts are supplied in this kit.

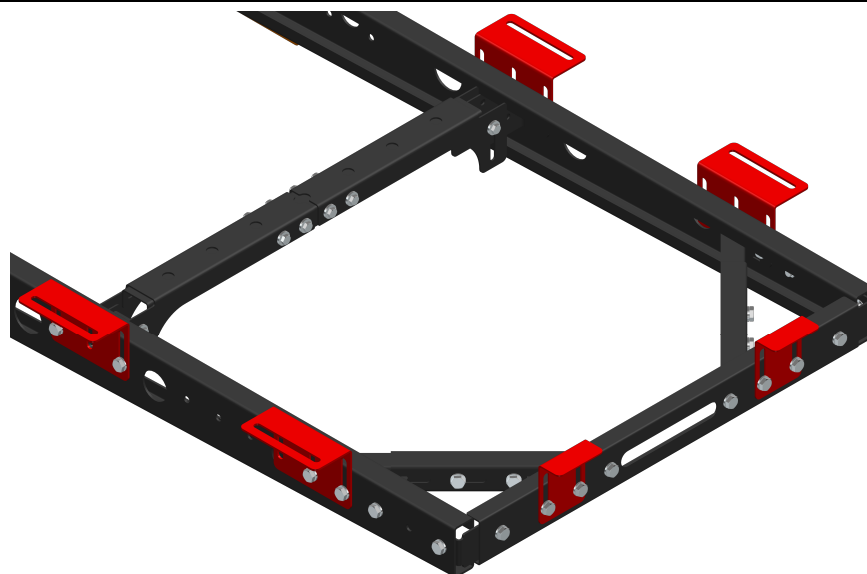

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.