

ATT-CHASS-BK Chassis Bracket Kit For ATT-CHASS Range of Products, For Attachment To Motorhome Floors

Item	Qty	Description	Item	Qty	Description
A	4	Side Brackets	C	12	M12 x 30 Bolts & Serrated Flange Nuts
B	2	Rear Brackets	D	12	12 x 25 HD Flat Washers
			E	12	M12 Bolt Caps

Notes: There are additional supports and brackets available separately to assist with a full installation where required. (See Page 2).

This kit requires the chosen drop plates, extensions and **ATT-CHASS-CB** where applicable to be fitted to the vehicle first.

The top edges of these brackets can be drilled to suit the position required and connect to any existing bolts through the motorhome floor.

The settings shown for item A show the bracket can be fixed using these three combinations to **ATT-CHASS-EXT** depending on the exact location required.

The image attached below shows the brackets can be attached through all the items available in the **ATT-CHASS** Range.


However, these brackets can be attached at any point required along **ATT-CHASS-EXT** and **ATT-CHASS-CB**

if a position is required that does not have pre-laser cut holes follow the fitting instructions provided with **ATT-CHASS-EXT** for further information on this.

Items B can only be used in conjunction with **ATT-CHASS-CB**.

Bracket Kit Installation:

- Loosely fix items A and items B using Items C and Items D. **Note:** There may be additional products also attached to the same points which will need fitting at the same time.
- Loosely Install the Towbar and any other items as per each individual set of instructions.
- Fully tighten all fixings ensuring the entire installation is ridged, square and secure then fit items E to items C.

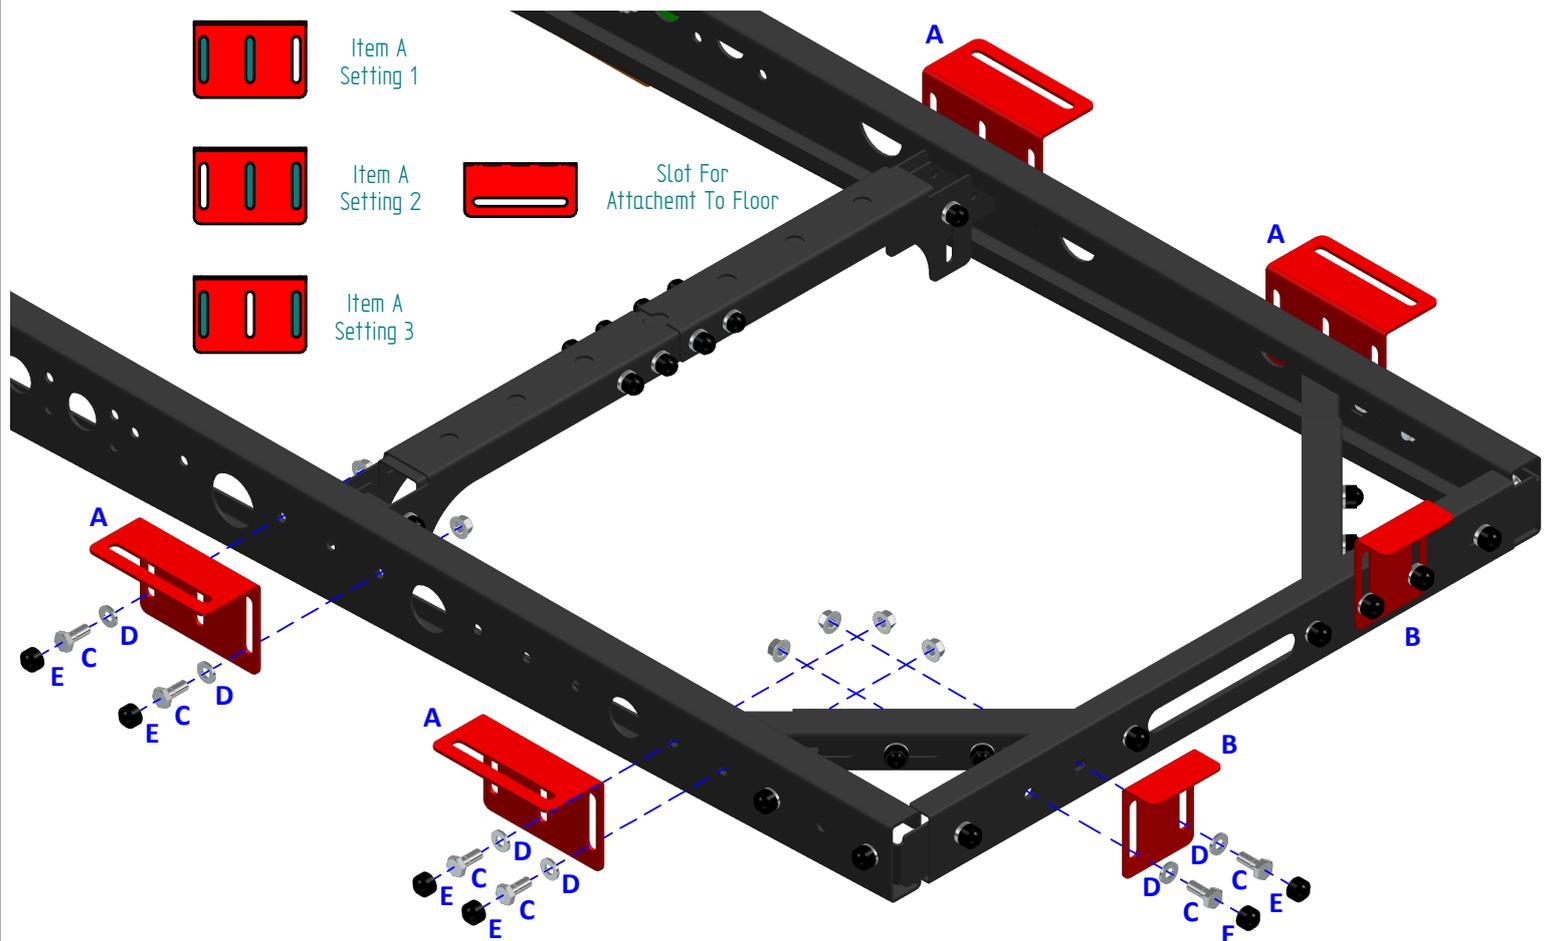

Notes:

- For Torque settings see general notes overleaf.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.


Optional Extra's

Note: The images shown below are for illustration purposes only. Final fitment may appear slightly different depending on the vehicle's chassis width and drop plate location.

Part Number:
ATT-CHASS-CB

Description:
Crossbar Kit

Only the red parts are supplied in this kit.

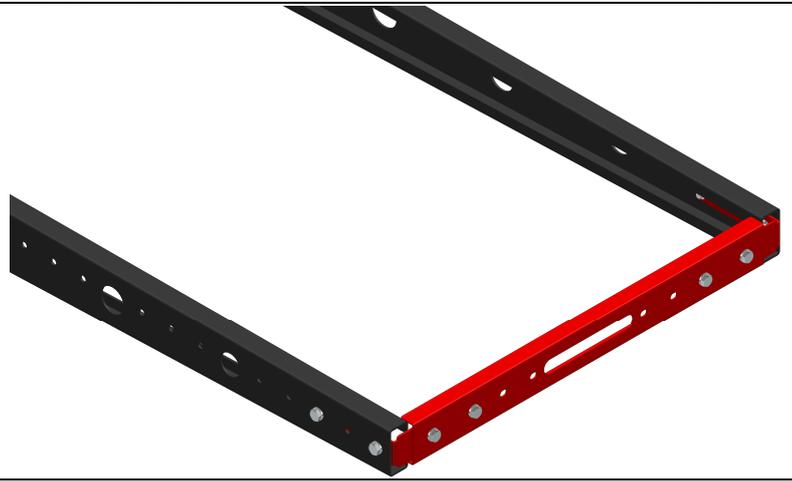

Part Number:
ATT-CHASS-CSK

Description:
Chassis Strengthening Kit

To enable fitment of this kit.
Part Number: **ATT-CHASS-CB**
must be installed along with the extensions
first.


Only the red parts are supplied in this kit.



Part Number:
ATT-CHASS-FS

Description:
Floor / Garage
Support Kit

Only the red parts are supplied in this kit.

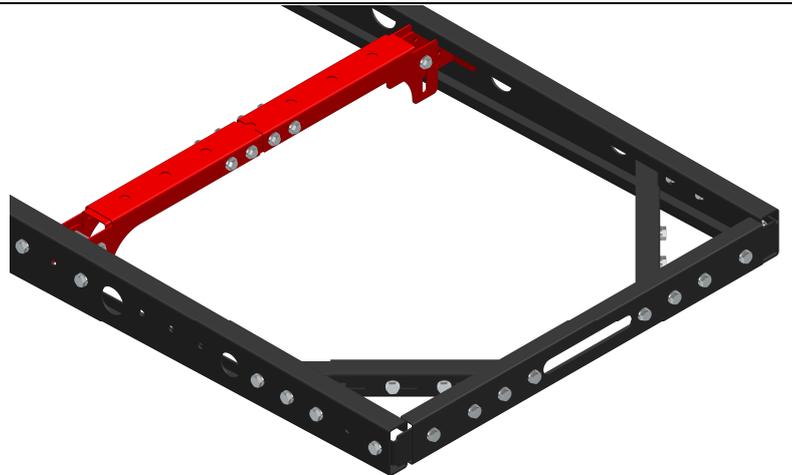


Part Number:
ATT-CHASS-BK

Description:
Individual
Support Kit

Side brackets can be installed with or without
Part Numbers:
ATT-CHASS-CB
ATT-CHASS-FS
ATT-CHASS-CSK

Only the red parts are supplied in this kit.

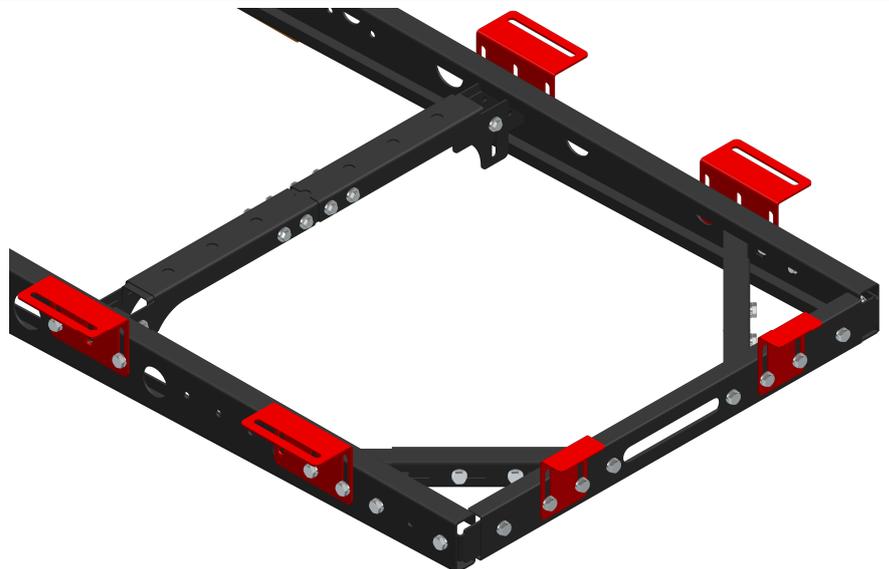

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.