

ATT-CHASS-FI-DP Fiat Ducato, Citroen Relay, Peugeot Boxer 2006> Vauxhall Movano 2021> Chassis Cab Extension Drop Plates (ATT-CHASS-EXT Ordered Separately)

Item	Qty	Description	Item	Qty	Description
A1	1	Left Hand Drop Plate	E	2	Angled Chassis Clamp Plates
A2	1	Right Hand Drop Plate	F	2	Rear Clamp Plates
B1	1	Left Hand Rear Bracket	G	6	M10 x 25 (10.9) Serrated Flange Bolts & Serrated Flange Nuts
B2	1	Right Hand Rear Bracket	H	8	M12 x 35 (10.9) Bolts & S/P Washers
C1	1	Left Hand Central Bracket	J	20	M12 x 35 (10.9) Bolts & Serrated Flange Nuts
C2	1	Right Hand Central Bracket	K	36	12 x 25 HD Flat Washers
D1	1	Left Hand Forward Bracket	L	18	M12 Bolt Caps
D2	1	Right Hand Forward Bracket	EXT	2	Not Supplied In This Kit (Order ATT-CHASS-EXT)

Note: This drop plate kit can be fitted internally or externally to each chassis rail. See Figures 7 to 16.

Items **EXT** must be ordered in conjunction with this kit. (**ATT-CHASS-EXT**)

We recommend fitment of (**ATT-CHASS-CB**) & (**ATT-CHASS-CSK**) in conjunction with this kit. (See Page 3).

It may be necessary to remove existing components during the fitment of this product.

There are additional supports and brackets available separately to assist with a full installation where required. (See Page 3).

Drop Plate Installation:

- Using **Figure 1** as a guide insert items **E** and **F** into each chassis rail as shown.
- Using **Figure 2** as a guide loosely fix items **A1** and **A2** at the rear of the chassis using items **G** and items **J** with items **K**. **Note:** Some models may require an additional mounting point drilled at this point, use items **A1** and **A2** as a template to mark the position.
- Using **Figures 1** and **3** as a guide loosely fix items **B1**, **B2**, **C1**, **C2**, **D1** and **D2** through the chassis to items **E** and **F** using items **H** and items **K** ensuring items **K** are used as spacers at the three points shown each side.
- Using **Figure 4** as a guide loosely fix items **A1**, **A2**, **B1**, **B2**, **C1**, **C2**, **D1** and **D2** to items **EXT** using items **J** with items **K**. **Note:** Always fit **ATT-CHASS-EXT** as high as physically possible.
- Using **Figure 5** as a guide loosely fix items **B1**, **B2**, **C1**, **C2**, **D1** and **D2** to items **A1** and **A2** using items **J** with items **K** at the points not used to fix items **EXT** referring to **Figures 9** to **14**.
- Loosely install the Towbar and any other items as per each individual set of instructions see **Page 3**.
- Fully tighten all fixings ensuring the entire installation is ridged, square and secure then fit items **L** to items **J**.

Figure 1



Figure 2

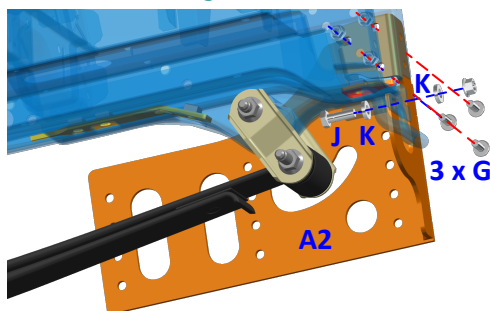


Figure 3

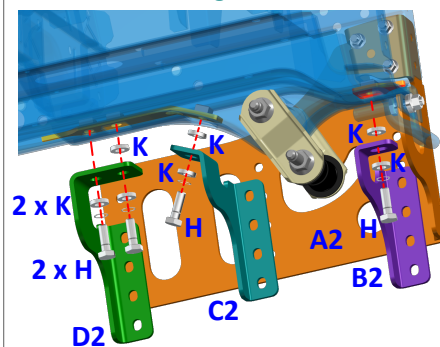


Figure 4

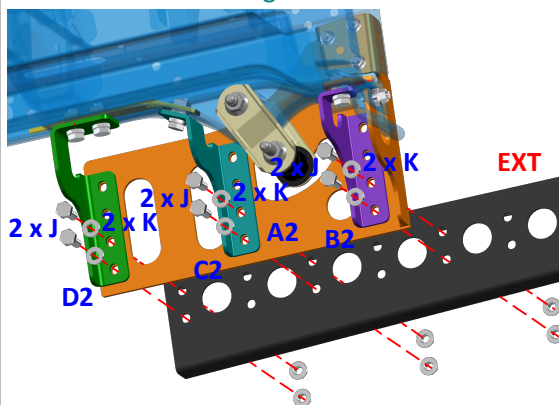


Figure 5

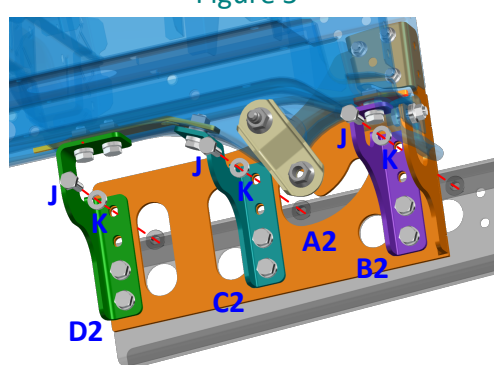


Figure 6

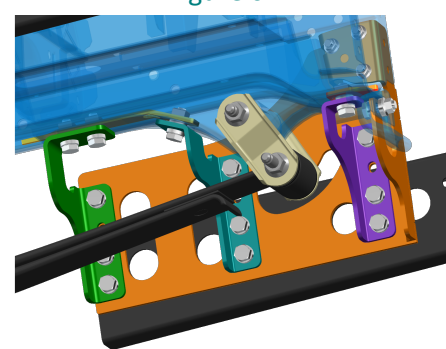


Figure 7 (Internally Mounted)


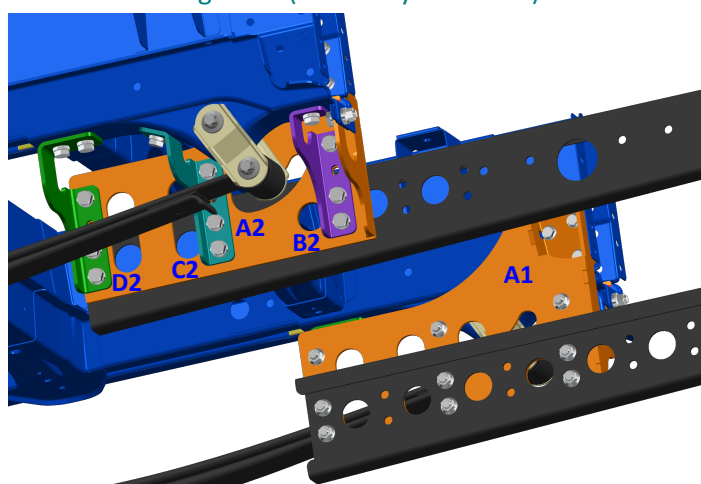


Figure 8 (Externally Mounted)

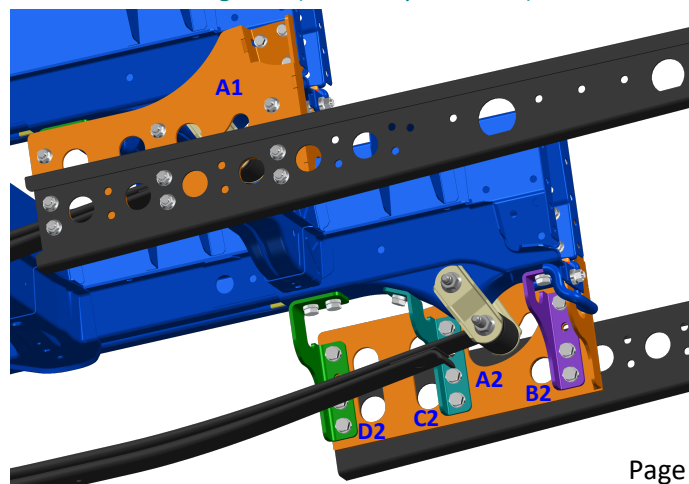

Chassis Extensions Rear Projection

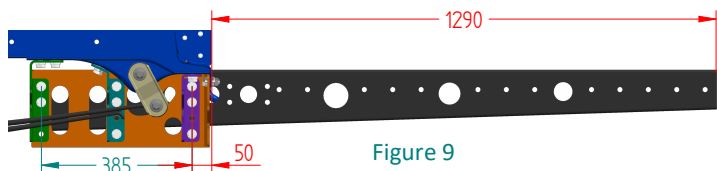


Figure 9

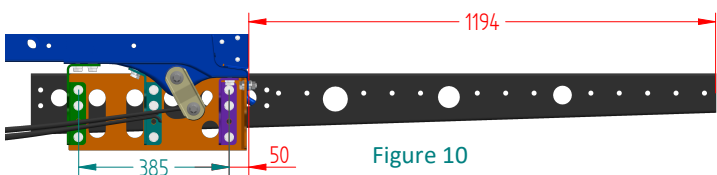


Figure 10

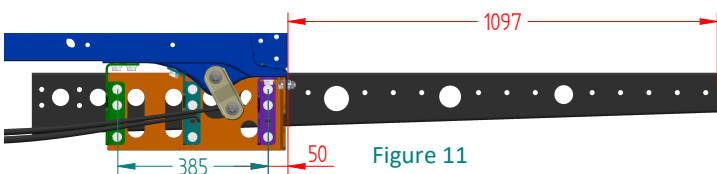


Figure 11

Note: These dimensions are using the Extensions without cutting them down and refer to direct fitment only. Refer to ATT-CHASS-EXT fitting instructions for further information.

Chassis Extensions Height Settings

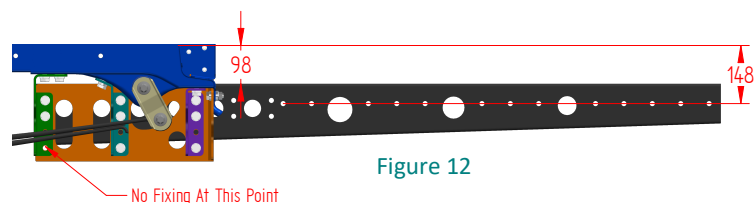


Figure 12

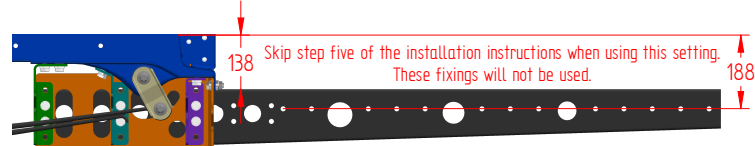


Figure 13


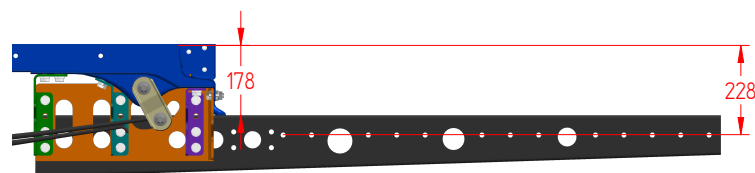


Figure 14

Figure 15

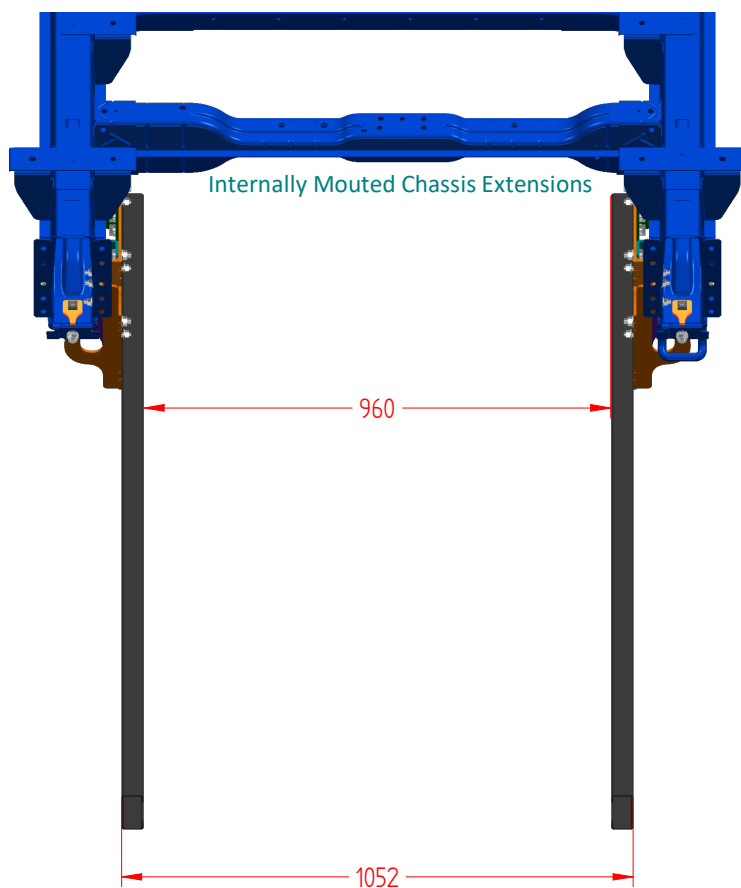

Internally Mouted Chassis Extensions



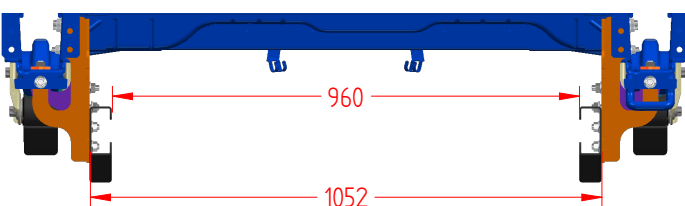


Figure 16

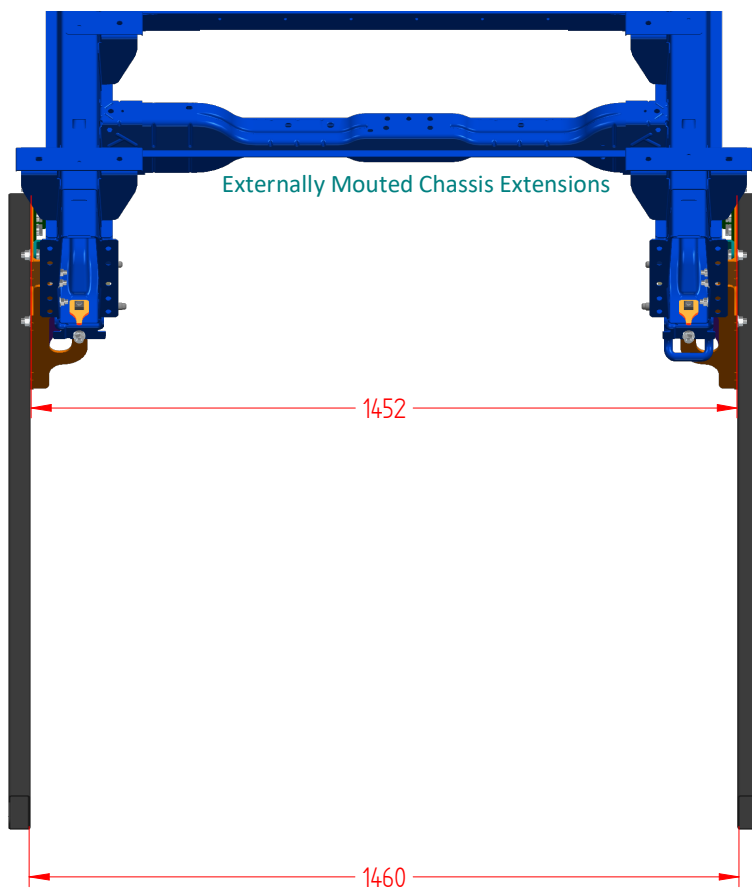

Externally Mouted Chassis Extensions

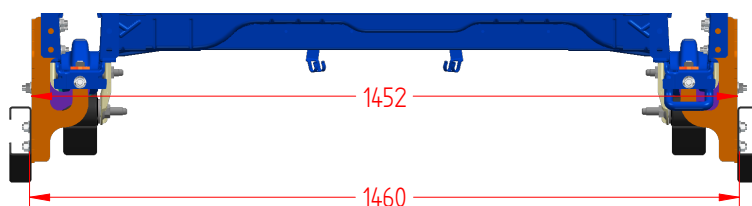

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.

Optional Extra's

Note: The images shown below are for illustration purposes only. Final fitment may appear slightly different depending on the vehicle's chassis width and drop plate location.

Part Number:

ATT-CHASS-CB

Description:

Crossbar Kit

Only the red parts are supplied in this kit.



Part Number:

ATT-CHASS-CSK

Description:

Chassis Strengthening Kit

To enable fitment of this kit.

Part Number: **ATT-CHASS-CB**

must be installed along with the extensions first.

Only the red parts are supplied in this kit.




Part Number:

ATT-CHASS-FS

Description:

Floor / Garage
Support Kit

Only the red parts are supplied in this kit.

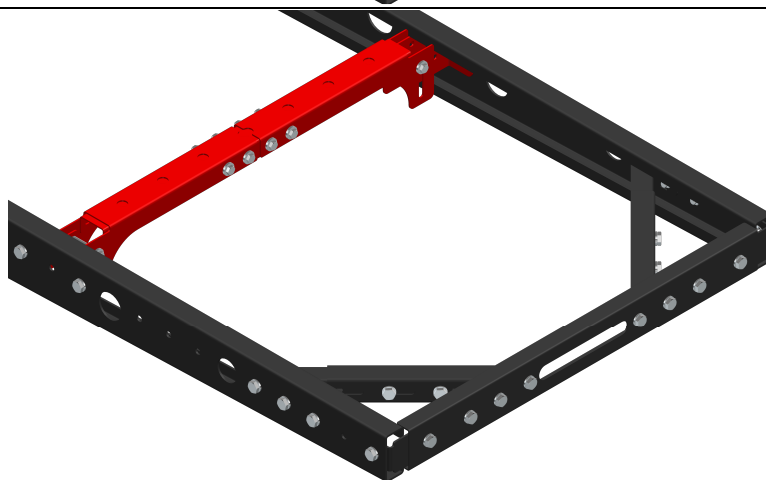

Part Number:

ATT-CHASS-BK

Description:

Individual
Support Kit

Side brackets can be installed with or without


Part Numbers:

ATT-CHASS-CB

ATT-CHASS-FS

ATT-CHASS-CSK

Only the red parts are supplied in this kit.

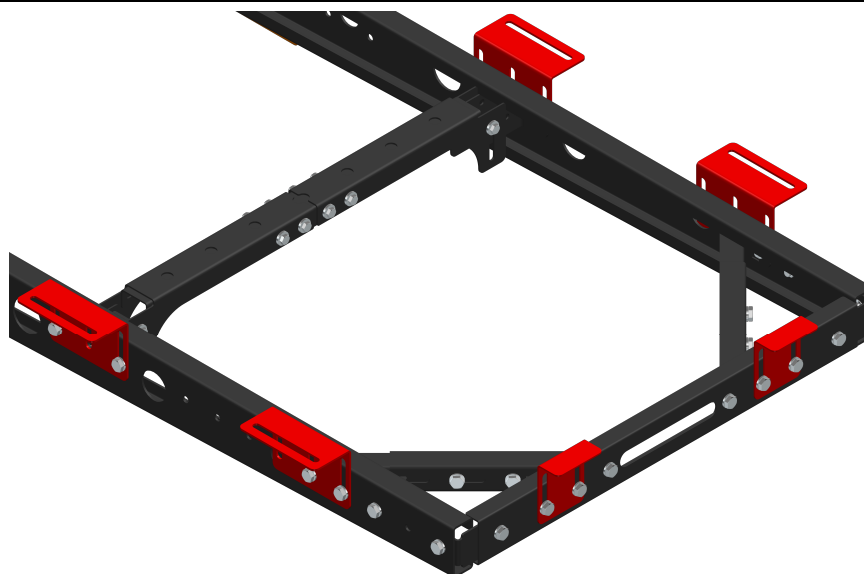

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.