

ATT-CHASS-FI-TK Additional Tube and Bolt Kit For Use With ATT-CHASS-FI-DP

Item	Qty	Description	Item	Qty	Description	Torque Settings
A	2	Clamp Plates	D	6	M10 x 120 (10.9) Bolts	70 Nm
B	2	17 O/D 82mm Long Tubes	D1	6	M10 x 160 (10.9) Bolts	70 Nm
C	4	17 O/D 87mm Long Tubes	E	12	10 x 25 Flat Washers	
			F	6	M10 Nyloc Nuts	

Notes: This Kit is for use with ATT-CHASS-FI-DP.

The tubes can be cut down to the length required if they are to be inserted in the chassis opening and need to sit internally of existing components attached to the vehicle.

It is also recommended that the tubes are cut at a 3-degree angle matching the chassis on each side if they do require any trimming.

Always ensure the item A is flush with the complete face of the chassis.

Figure 2 below is a direct replacement for Figure 2 of the ATT-CHASS-FI-DP fitting instructions.

Tube Kit Installation:

- Follow the fitting instructions supplied with ATT-CHASS-FI-DP. After Figure 1 of those instructions follow the steps below supplementing items G from the fitting kit supplied with the items in this kit. Once the steps for this kit are completed follow the rest of the steps from Figure 3 onwards from the main ATT-CHASS-FI-DP instructions.
- Open out the holes on the chassis face that is opposite the one the drop plates are being attached to out to 20mm to allow the tubes to be inserted. Or alternatively cut down the tubes as required to insert into the open end of the chassis.
- Loosely fix items A, items B and items C to the chassis using items D/D1 and items F with items E through items A1 or A2 from ATT-CHASS-FI-DP.

Figure 1

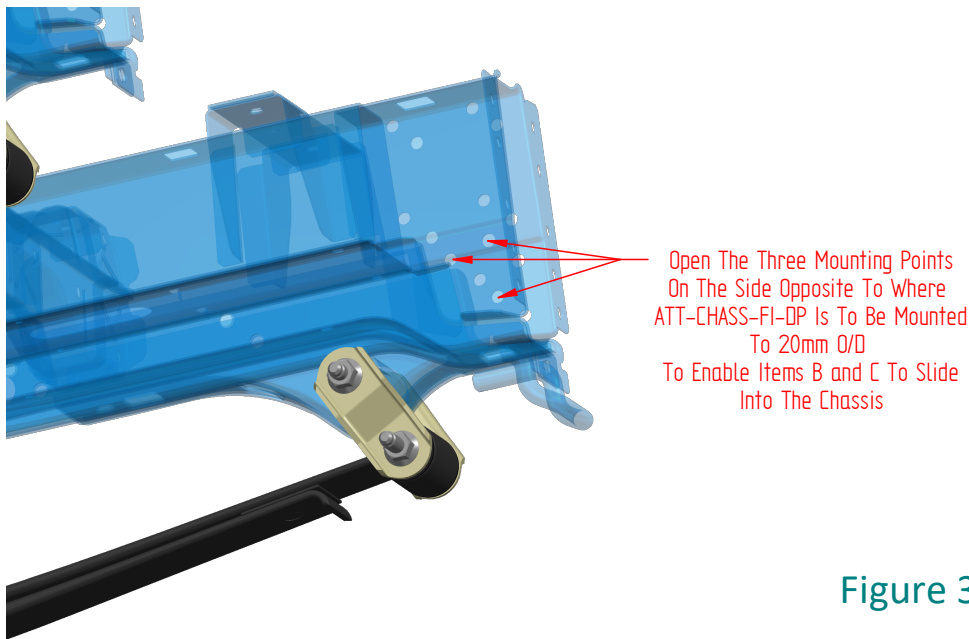


Figure 2


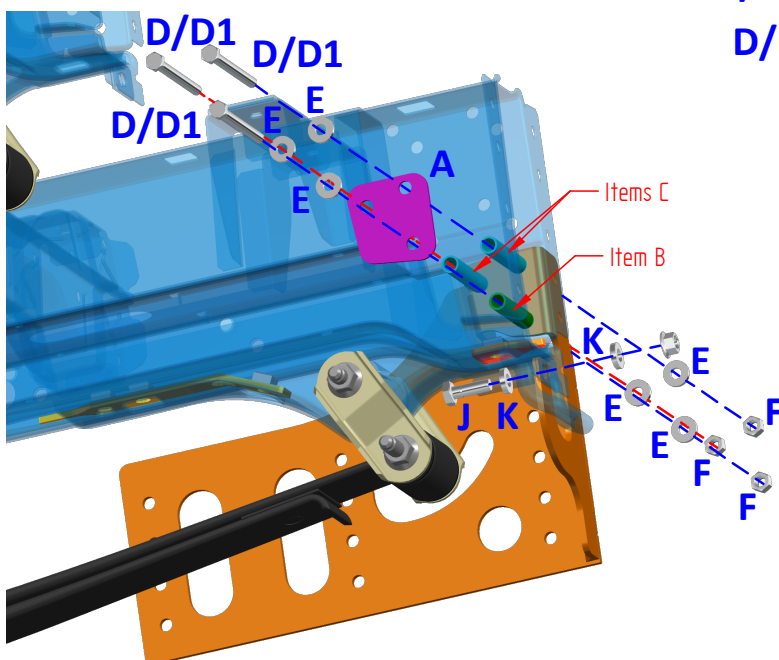


Figure 3

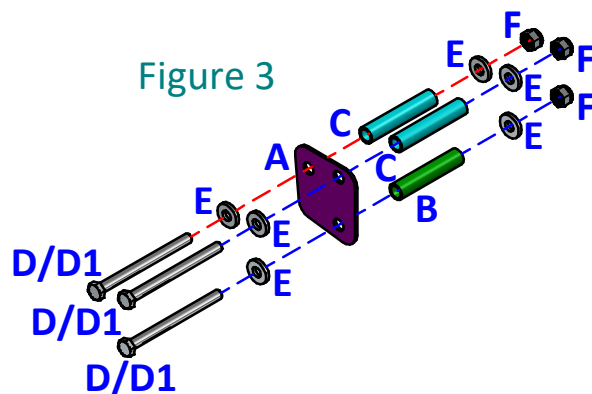

- Notes:
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
 - We recommend the use of PRO-TOW Couplings with all our products.

Optional Extra's

Note: The images shown below are for illustration purposes only. Final fitment may appear slightly different depending on the vehicle's chassis width and drop plate location.

Part Number:

ATT-CHASS-CB

Description:

Crossbar Kit

Only the red parts are supplied in this kit.



Part Number:

ATT-CHASS-CSK

Description:

Chassis Strengthening Kit

To enable fitment of this kit.

Part Number: **ATT-CHASS-CB**

must be installed along with the extensions first.

Only the red parts are supplied in this kit.




Part Number:

ATT-CHASS-FS

Description:

Floor / Garage
Support Kit

Only the red parts are supplied in this kit.

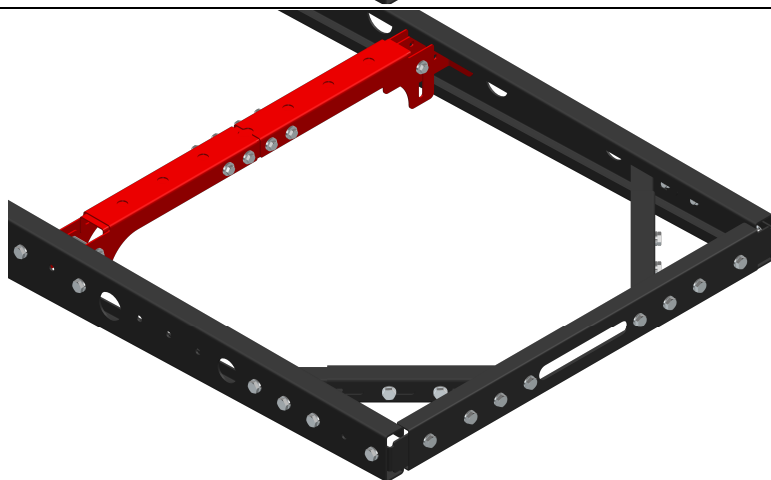

Part Number:

ATT-CHASS-BK

Description:

Individual
Support Kit


Side brackets can be installed with or without
Part Numbers:

ATT-CHASS-CB

ATT-CHASS-FS

ATT-CHASS-CSK

Only the red parts are supplied in this kit.

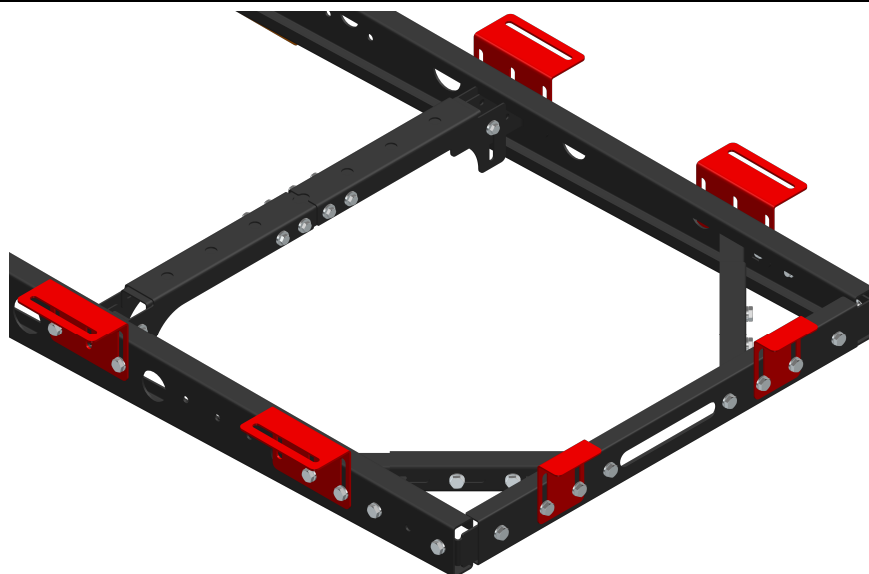

Notes:

1. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
2. We recommend the use of PRO-TOW Couplings with all our products.