


## TLDV4 SAIC MAXUS T90 EV, LDV T90 EV, T90 EV 2022>

Item	Qty	Description	Item	Qty	Description
A	1	TLDV4 Crossbar	D	2	M16 x 60 Bolts & Nyloc Nuts
B1	1	Left Hand Side Arm	E	6	M12 x 35 (10.9) Bolts & S/P Washers
B2	1	Right Hand Side Arm	F	6	M14 x 50 Bolts & Nyloc Nuts
C	2	Spacers (8mm)	G	6	12 x 30 Flat Washers
			H	12	14 x 27 Flat Washers

### Towbar Installation:

- Working on one side at a time remove the original fixings securing the bumper brackets to the vehicle (**Note: The Bumper and brackets remain in place and are not removed**) and loosely fix items **B1** and **B2** using items **E** and items **G**.
- Loosely fix item **A** to items **B1** and **B2** with items **C** using items **F** and items **H**.
- Using items **D** secure your desired ball bracket and wiring plate (Not supplied in this kit) to item **A** and fully tighten the fixings.

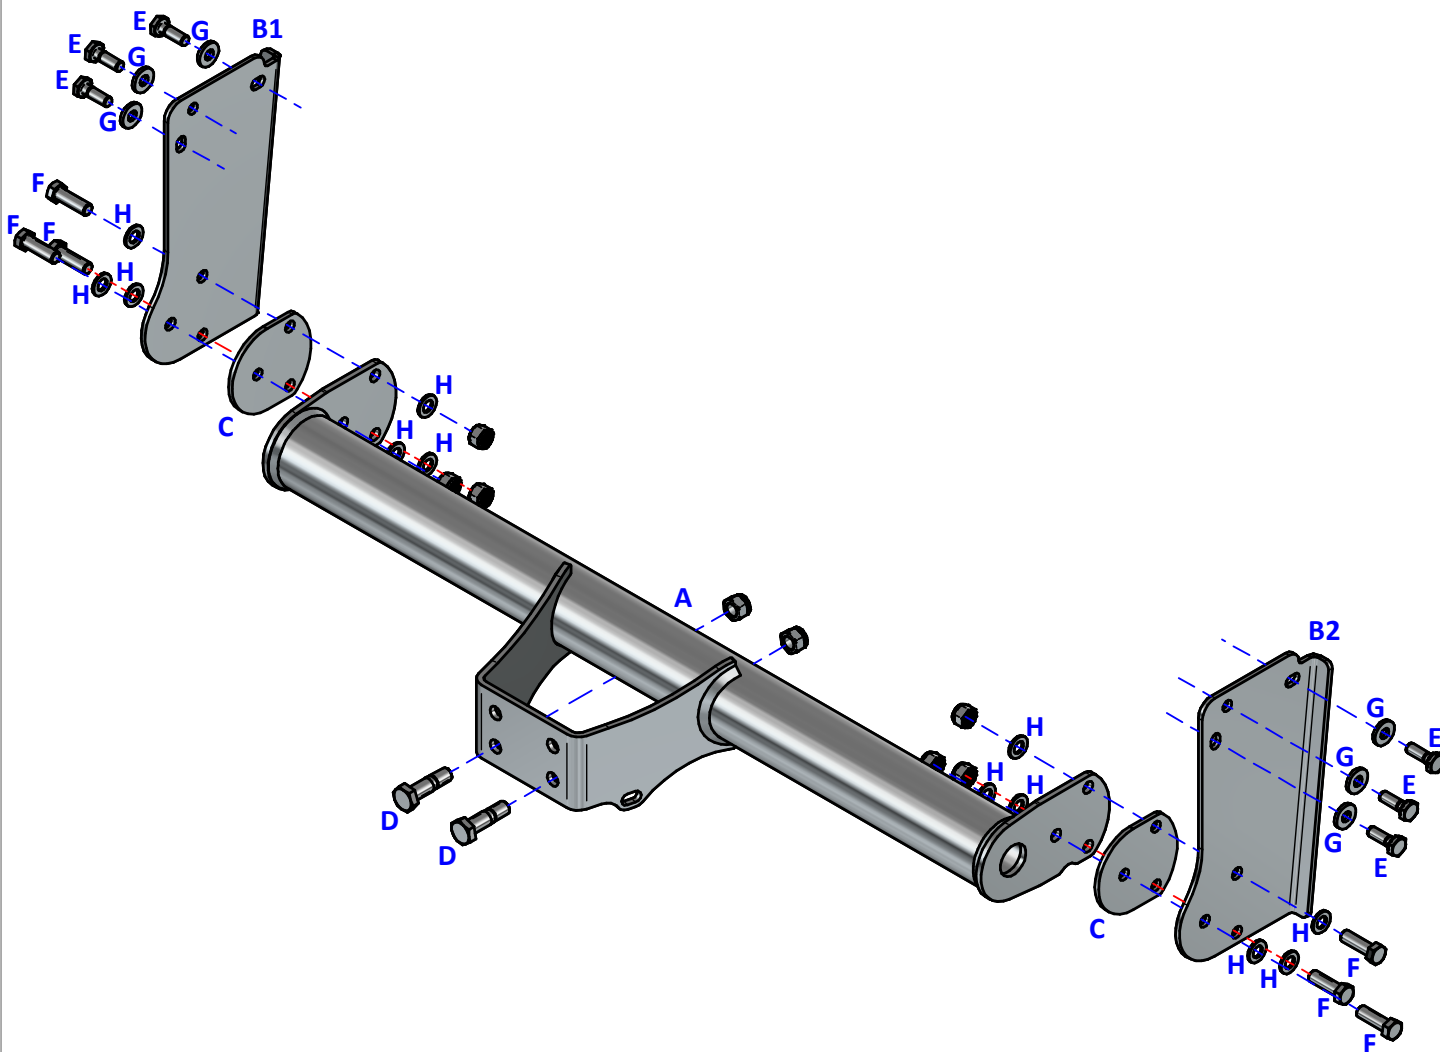

### Notes:

- For Torque settings see general notes overleaf.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.