



TLDV2 Deliver 9 Chassis Cab (With OEM Towing Brackets) 2020> & e-Deliver 7 Panel Van 2024>


Item	Qty	Description	Item	Qty	Description
A	1	TLDV2 Crossmember	F	2	M16 x 40 Bolts & Nyloc Nuts (Must Be Fitted)
B	2	Side Arms	G	2	M16 x 65 Bolts & Nyloc Nuts
C1	1	Left Hand Angle Bracket	H	4	M14 x 50 Bolts, 2 S/P Washers & 2 Nyloc Nuts
C2	1	Right Hand Angle Bracket	J	4	M14 x 110 Bolts & Nyloc Nuts
D	2	Captive Nut Plate	K	4	M12 x 35 Bolts & S/P Washers
E	1	Clamp Plate (Must Be Fitted At All Times)	L	14	14 x 27 Flat Washers
			M	4	12 x 40 Flat Washers

Pre-Installation e-Deliver 7 Panel Van Only

- Remove the four existing bolts from the chassis where the side arms will connect and discard.
(Note: Fig 2 and the main Towbar illustration show the correct setting for the fitment to this vehicle).

Towbar Installation:

- Fix Items B to the inside face of the towing brackets using Items J and Items L.
- Insert Item D inside of the **(e-Deliver 7 Bumper brackets) (Deliver 9 Chassis Cab Towing brackets)** and locate above the vertical mounting points.
(Note: Some e-Deliver 7 models may require the bumper brackets lowering by removing the four vertical fixings to insert item D).
- Fix Items C1 and C2 to the towing brackets at the vertical mounting points using Items K and Items M fixing into Item D.
- Fix Item A to Items B, C1 and C2 using Items H and Items L.
(Note: Fit Item A to the setting that suits the vehicles body the best using Fig 1 for longer projecting bodies and Fig 2 as the standard setting especially on tipping bodies).
- Using Items F through the setting not used for the towball loosely fix Item E to the rear of the Face Plate.
(Always Follow This Before Fitting The Chosen Ball Bracket)
- Using Items G fix your desired ball bracket and socket plate (not supplied in this kit) to Item A.
- Fully tighten all fixings, ensuring the Towbar is rigid, Square and Secure.

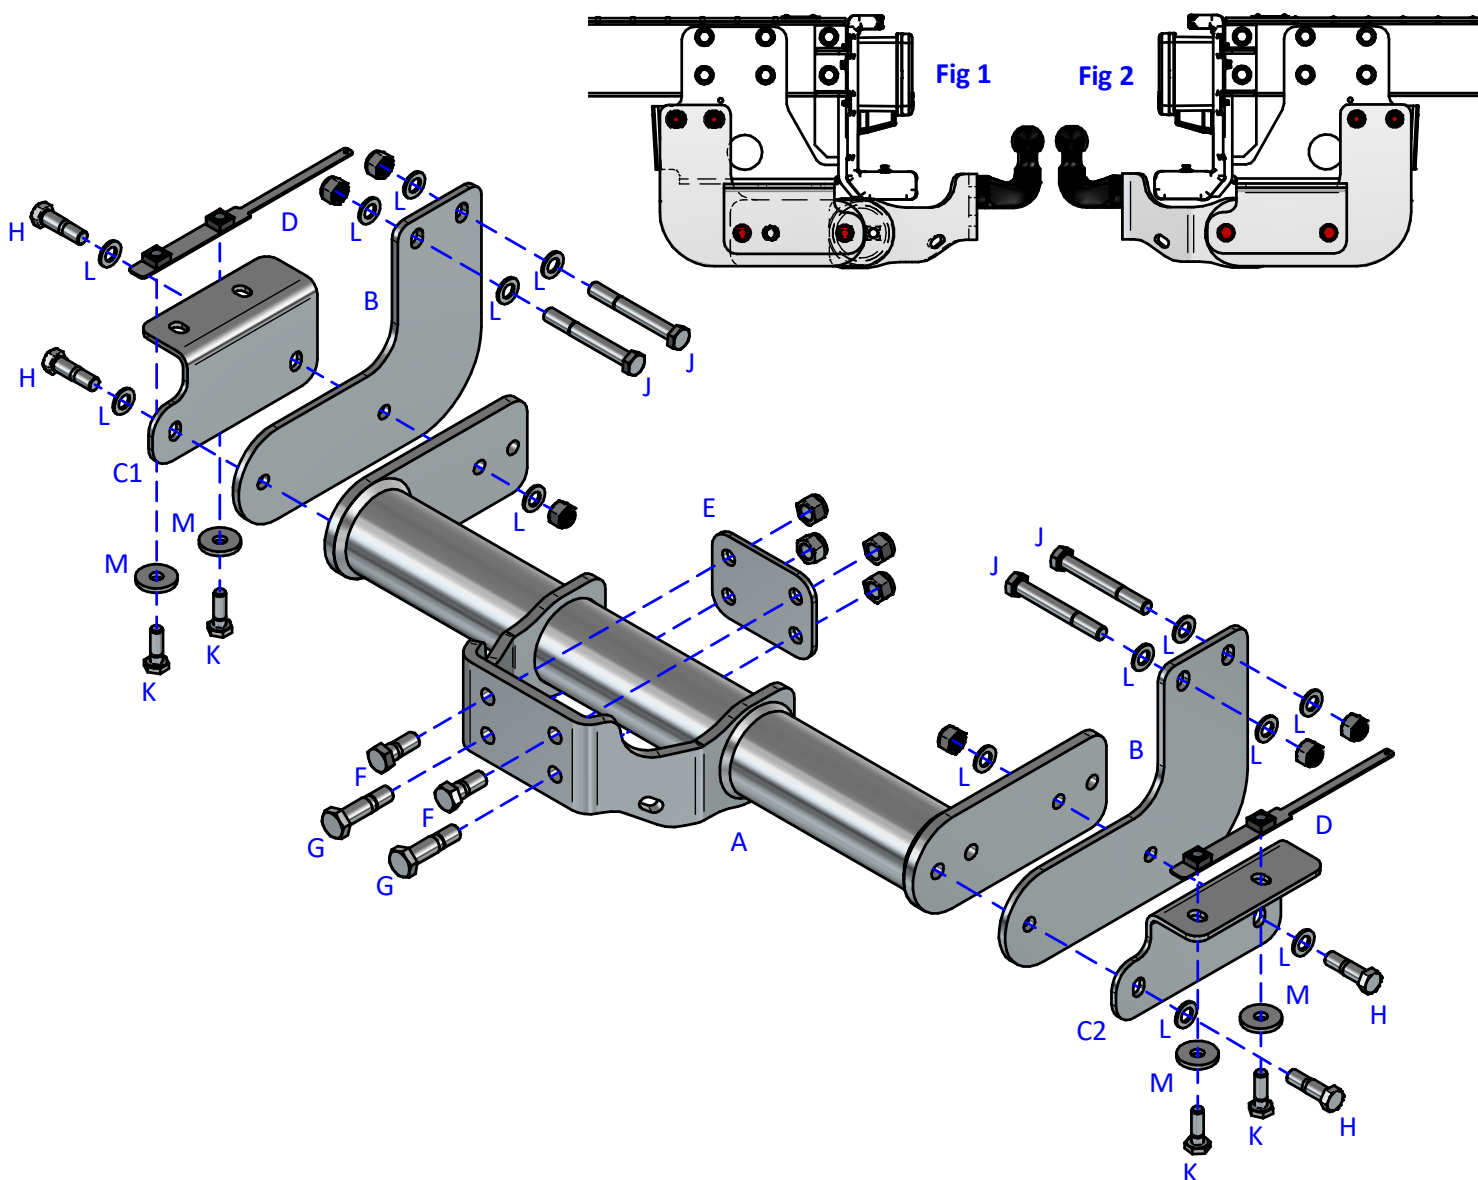

- Notes:**
- For Torque settings see general notes overleaf.
 - Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
 - We recommend the use of PRO-TOW Couplings with all our products.