

TPUG17 Peugeot 3008 Mk3 2024>, Peugeot 5008 Mk3 2024>, Citroen C5 Aircross Mk2 2025> & Jeep Compass Mk3 2025>

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TPUG17 Crossbar	D	2	M16 x 50 Bolts & Nyloc Nuts	215 Nm
B	2	Side Arms	E	2	M12 x 40 Bolts & Nyloc Nuts	100 Nm
C	1	Extension	F	1	M12 x 120 Bolt (10.9) & Nyloc Nut	130 Nm
			G	12	M10 x 40 (10.9) Bolts, 4 Nyloc Nuts & 8 S/P Washers	70 Nm
			H	2	M12 x 35 Bolts & S/P Washers	100 Nm
			J	16	10 x 25 Flat Washers	
			K	4	12 x 25 Flat Washers	
T1	1	30 mm O/D 60 mm Long Spacer Tube	L	2	12 x 40 Flat Washers	


Bumper Removal

- Open the tailgate and remove the inner light cluster panels fixings. **Note: Jeep Compass** separate the trim panel from the rear light clusters to access the fixings and remove.
- Remove the rear inner boot panel.
- On vehicles without a spare wheel, lift the lower boot wheel well floor trim. On vehicles with a spare wheel, remove the small covering panel on each side.
- Remove the fixing in the boot opening securing the outer bumper panel from each side. **Note: Jeep Compass** has an additional fixing behind the light clusters.
- Remove the fixings along the lower edge of the bumper.
- On the underside of the bumper pivot down the small access panels located behind each of the rear wheel arches and disconnect the electrical and gsm connector on the nearside and the number plate washer feeder pipe on the offside. **Note: Not Jeep Compass.**
- Carefully release the outer wheel arch trim from each side then remove the fixings.
- Pull back the wheel arch trim and remove the tip screw from each side. **Note: Not Jeep Compass.**
- Carefully release the bumper from the rear wings and from below and around each light cluster and fully remove.
- Cut the bumper removing the pre marked area. **Note: Jeep Compass** may require a 140mm x 120mm cut
- Remove the rear impact beam, eight fixings and lift off the location pins. **Note: This will not be reused with the towbar assembly.**


Towbar Installation

- Loosely hang item **A** using the keyhole slots on the location pins each side of the rear panel and loosely fix to the rear panel using items **G** with items **J**.
- Insert items **B** into each side of the chassis rail and loosely fix in place from inside the boot area using items **H** with items **L**.
- Loosely fix items **A** to item **B** using items **G** and items **J**.
- Loosely fix item **C** to item **A** using items **F** with items **K** and items **E** with items **K** at the position shown in **Figure 1**, ensuring item **T1** is fitted at the lower mounting point.
- Fully tighten all fixings ensuring the Towbar is rigid, square and secure.
- Remount the bumper and all trim panels then reconnect the wiring loom and feeder pipe on each side.
- Loosely fix your desired ball bracket and wiring plate (not supplied in this kit) to item **C** using items **D** and fully tighten any remaining fixings.

Figure 1

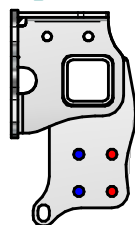

- Citroen C5 Aircross
- All Other Models

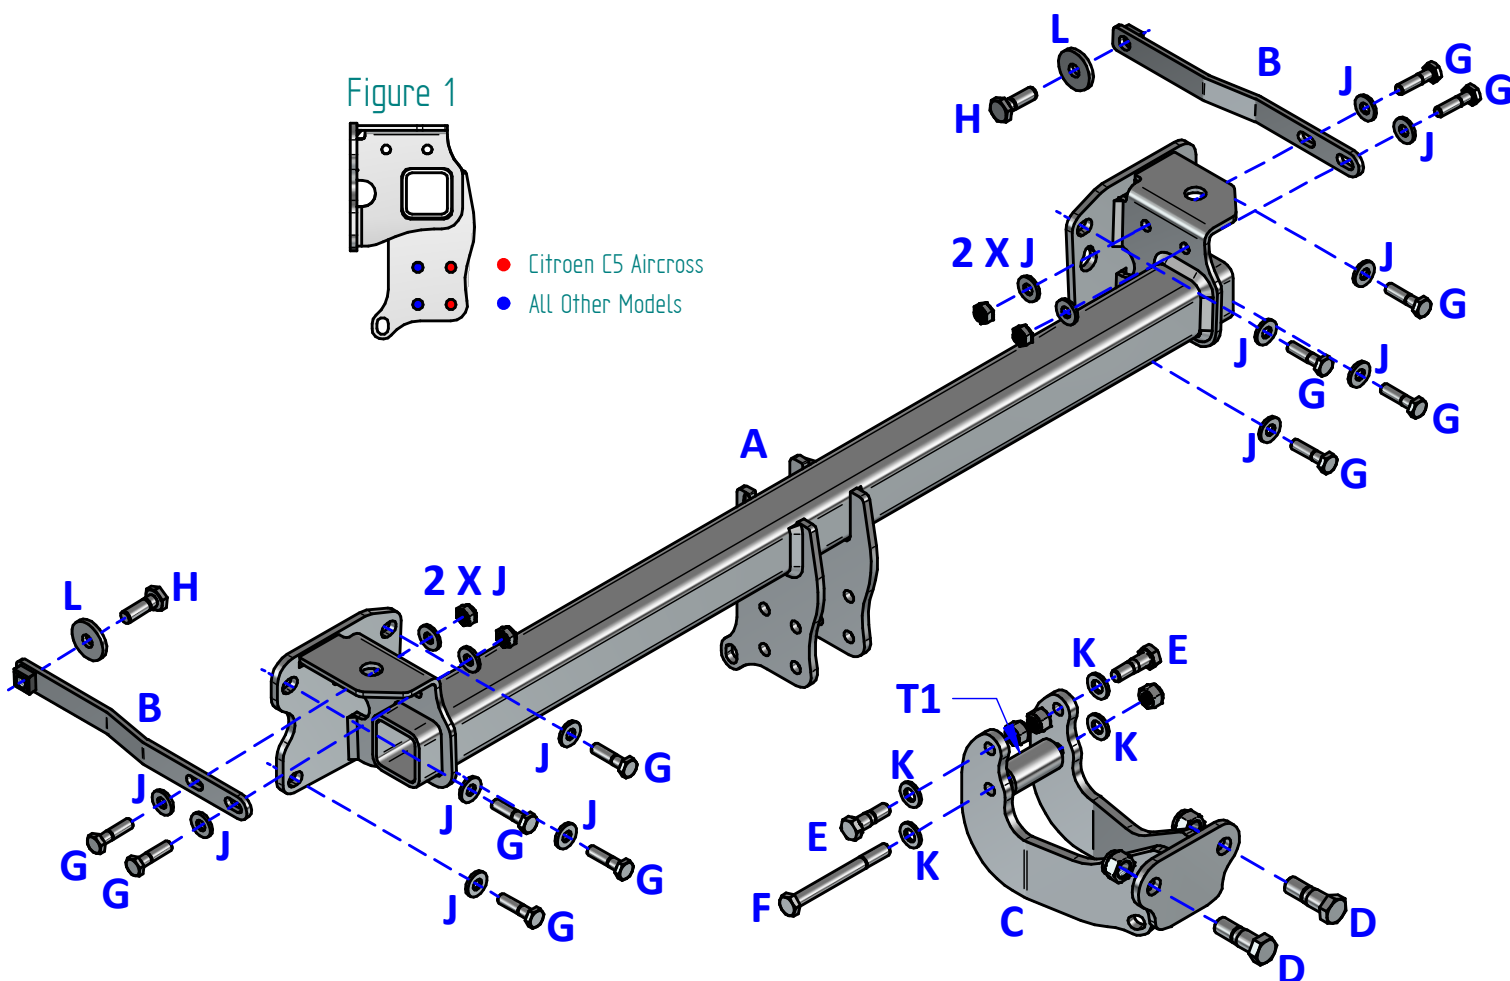

Notes:

- For Torque settings see the column next to each item in the list.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.