


TLDV5 Maxus (LDV) eTerron 9 2024>

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TLDV5 Crossbar	C	2	M16 x 55 Bolts & Nyloc Nuts	215 Nm
B	2	Side Arms	D	6	M12 x 40 x 1.5 Fine Pitch Bolts (10.9) & S/P Washers	130 Nm
			E	6	M14 x 45 Bolts & Nyloc Nuts	150 Nm
			F	6	12 x 30 Belleville Spring Washers	
			G	12	14 x 27 Flat Washers	

Towbar Installation

- Working one side at a time remove the three fixings from each side of the chassis and loosely fix items **B** to the chassis using items **D** with items **F**. **Note:** The original bumper retaining bolts will not be reused with this towbar assembly.
- Loosely fix item **A** to items **B** using items **E** with items **G**.
- Loosely fix your desired ball bracket and wiring plate (not supplied in this kit) to item **A** using items **C**.
- Fully tighten all fixings, ensuring the Bumper and Towbar are rigid, square and secure.

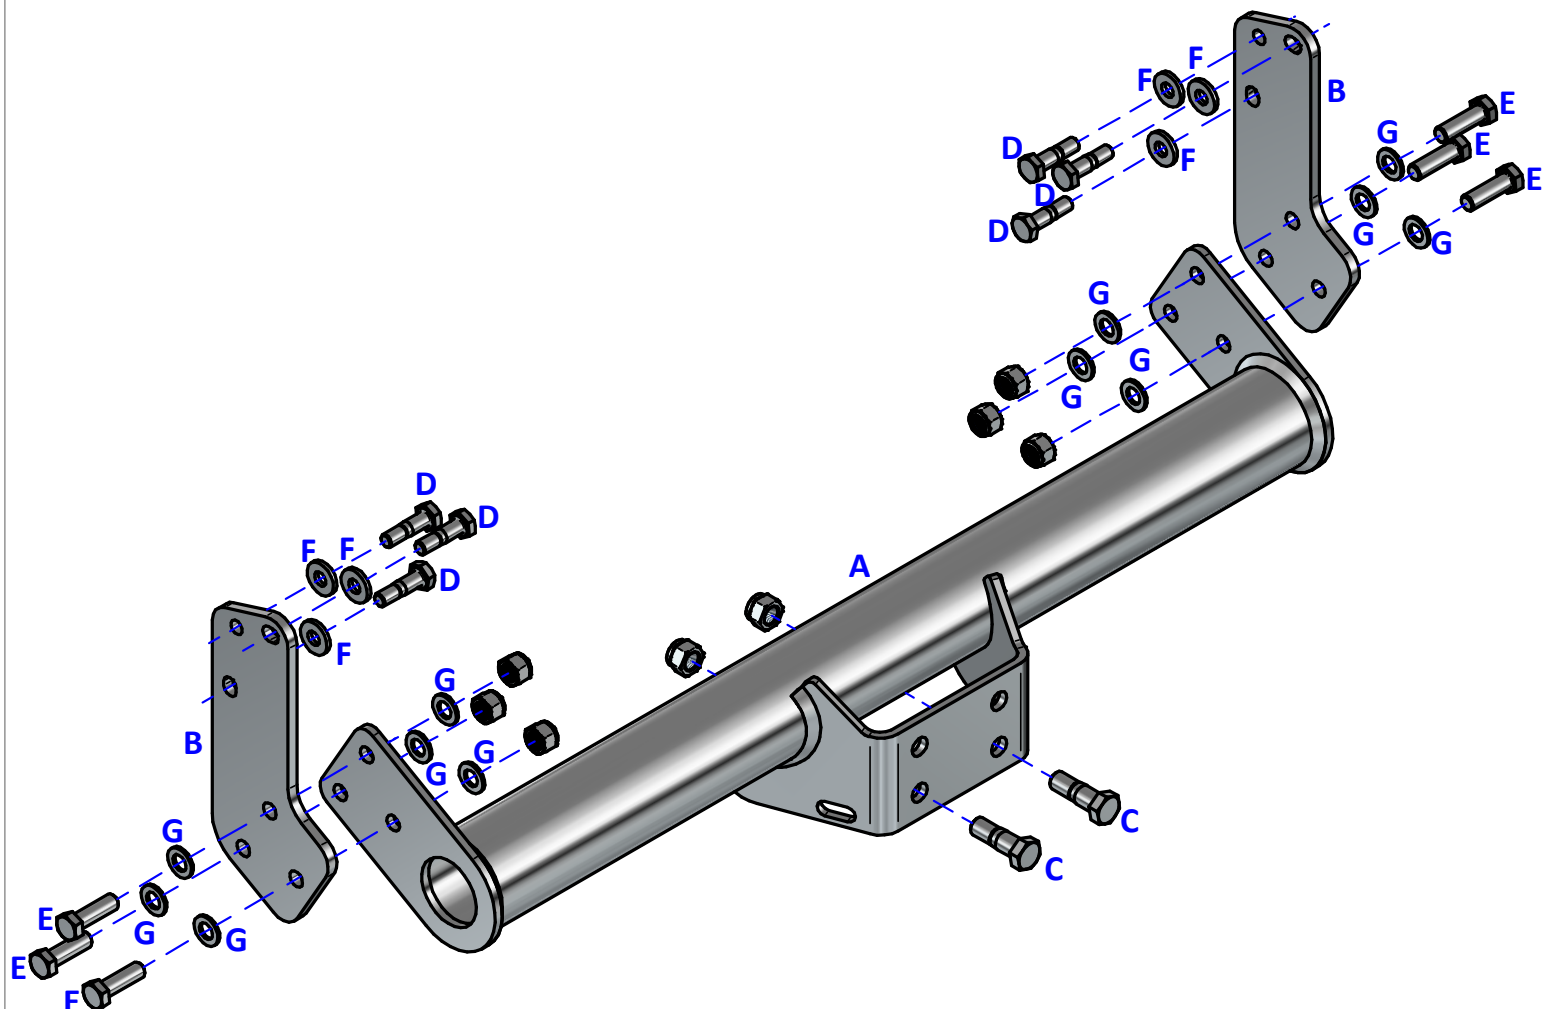

Notes:

- For Torque settings see the column next to each item in the list.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
- We recommend the use of PRO-TOW Couplings with all our products.