



TR10A

Renault Master Chassis Cab (Single Rear Wheel) 2010-2024 (X62) 2024> (XDD)
Nissan NV400 Chassis Cab (Single Rear Wheel) 2011-2022 (X62) & Nissan Interstar (Single Rear Wheel) 2022-2024 (X62) 2024> (XDD)
Vauxhall Movano Chassis Cab (Single Rear Wheel) 2010-2022 (X62)

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TR10A Crossbar	E	2	M16 x 60 Bolts & Nyloc Nuts	215 Nm
B	2	Side Arms	F	18	M12 x 45 Bolts (10.9), 12 S/P Washers & 6 Nyloc Nuts	130 Nm
C1	1	Left-Hand Lower Chassis Bracket	G	24	12 x 25 Flat Washers	
C2	1	Right-Hand Lower Chassis Bracket				
D1	1	Left-Hand 2024> XDD Bracket				
D2	1	Right-Hand 2024> XDD Bracket				

Towbar Installation:

1. Locate all the towbar mounting points and remove any existing fixings if present and release any wiring loom clips from the chassis.

Note: Clean all towbar mounting faces on chassis rails ensuring all faces are clean and grease free.

2. **Note: 2024> XDD only.** Loosely fix items **D1** and **D2** to the chassis at the forwardmost inner mounting points using items **F** and items **G**.

3. Loosely fix items **B** to the chassis using items **F** and items **G** at the positions shown in **Figures 1 & 2**.

4. Loosely fix items **C1** and **C2** to the underside of the chassis using items **F** and items **G**.



5. Loosely fix items **B** to items **C1** and **C2** using items **F** and items **G**.

6. Loosely fix item **A** between items **B** using items **F** and items **G**.



7. Using items **E** secure your desired ball bracket and wiring plate (not supplied in this kit) to item **A**.

8. Fully tighten all fixings ensuring the towbar is rigid, square and secure using the torque settings listed above, then clip the wiring loom into the towbar.

TR10A X62 2010-2024

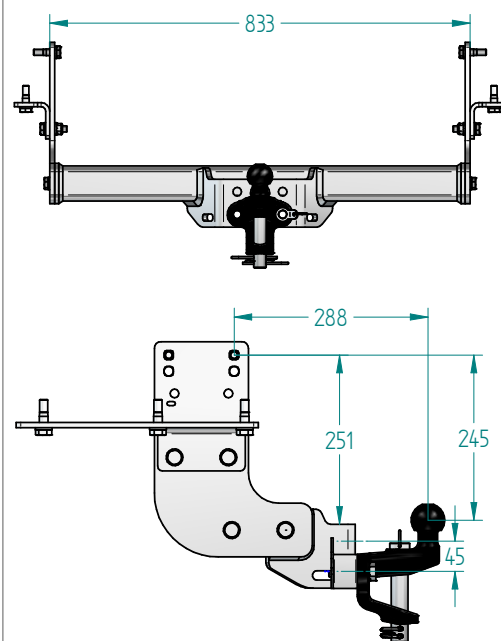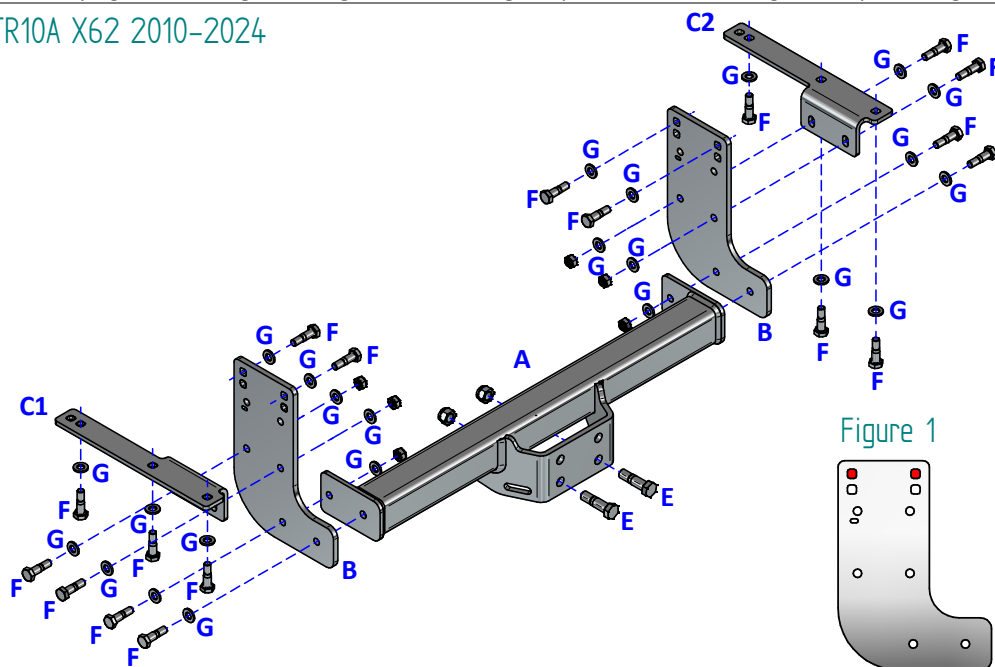

TR10A XDD 2024>

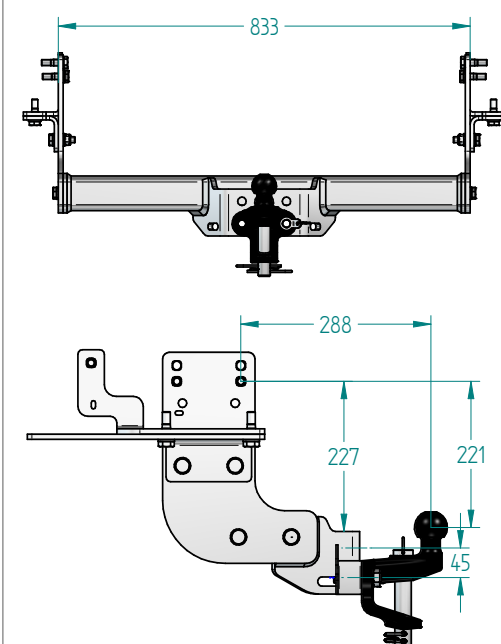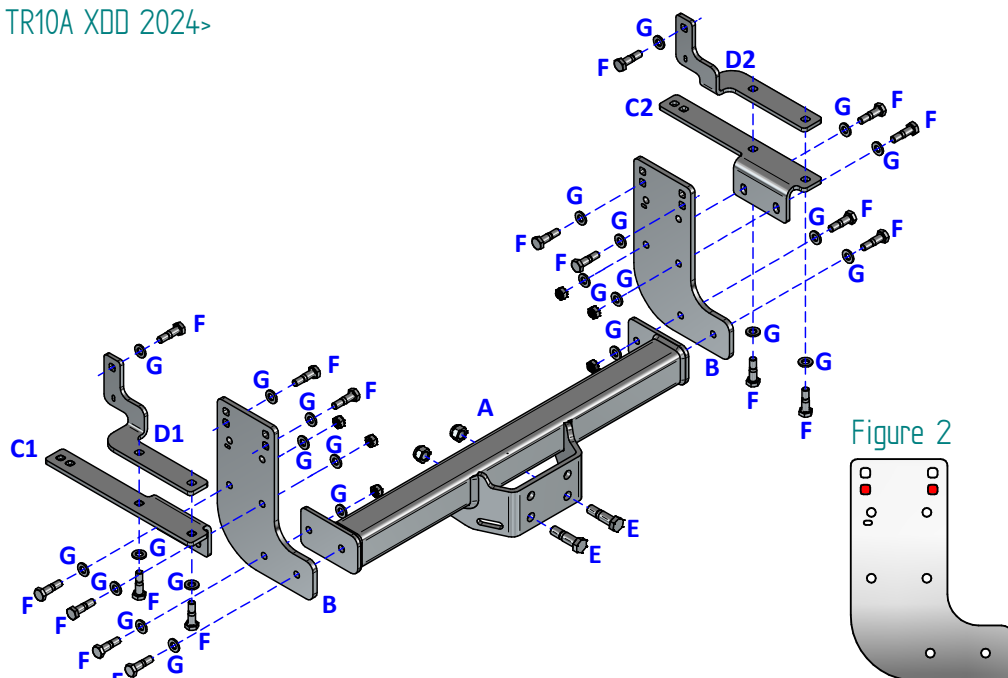

- Notes:**
- For Torque settings see the column next to each item in the list.
 - Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
 - We recommend the use of PRO-TOW Couplings with all our products.