

TR11AH Renault Master Chassis Cab (Twin Rear Wheel) 2010-2024 (X62) 2024> (XDD)
Nissan NV400 Chassis Cab (Twin Rear Wheel) 2011-2022 (X62) & Nissan Interstar (Twin Rear Wheel) 2022-2024 (X62) 2024> (XDD)
Vauxhall Movano Chassis Cab (Twin Rear Wheel) 2010-2022 (X62)

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TR10AH Crossbar	D1	1	Left-Hand 2024> XDD Bracket	
A1	1	Slider Face Plate	D2	1	Right-Hand 2024> XDD Bracket	
A2	2	Slider Pins & Clips	E	2	M16 x 55 Bolts & Nyloc Nuts	215 Nm
B	2	Side Arms	F	20	M12 x 45 Bolts (10.9), 12 S/P Washers & 8 Nyloc Nuts	130 Nm
C	1	Lower Chassis Bracket	G	28	12 x 25 Flat Washers	

Towbar Installation:

1. Locate all the towbar mounting points and remove any existing fixings if present and release any wiring loom clips from the chassis.
- Note:** Clean all towbar mounting faces on chassis rails ensuring all faces are clean and grease free.
- Note:** 2024> XDD only. Loosely fix items D1 and D2 to the chassis at the forwardmost inner mounting points using items F and items G.
- Loosely fix items B to the chassis using items F and items G at the positions shown in Figures 1 & 2.
- Loosely fix items C to the underside of the chassis using items F and items G.
- Loosely fix items B to items C using items F and items G.
- Loosely fix item A between items B using items F and items G.
- Fix item A1 to item A using items A2.
- Using items E secure your desired ball bracket (not supplied in this kit) to item A1.
- Fully tighten all fixings ensuring the towbar is rigid, square and secure using the torque settings listed above, then clip the wiring loom into the towbar.

TR11AH X62 2010-2024


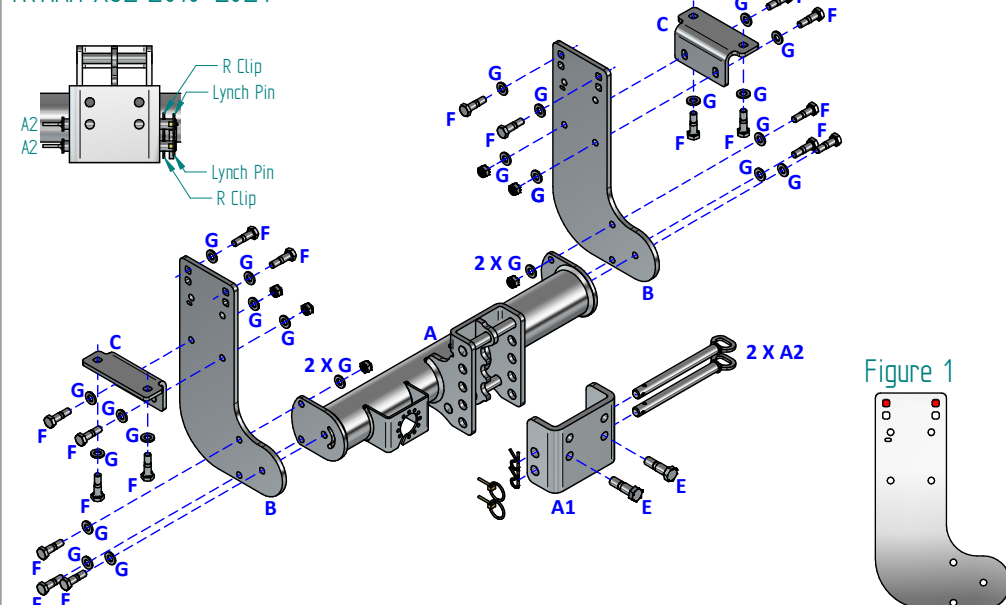


Figure 1

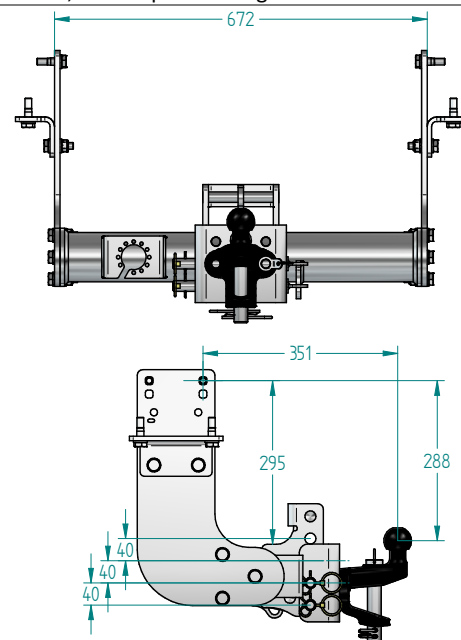

TR11AH XDD 2024>


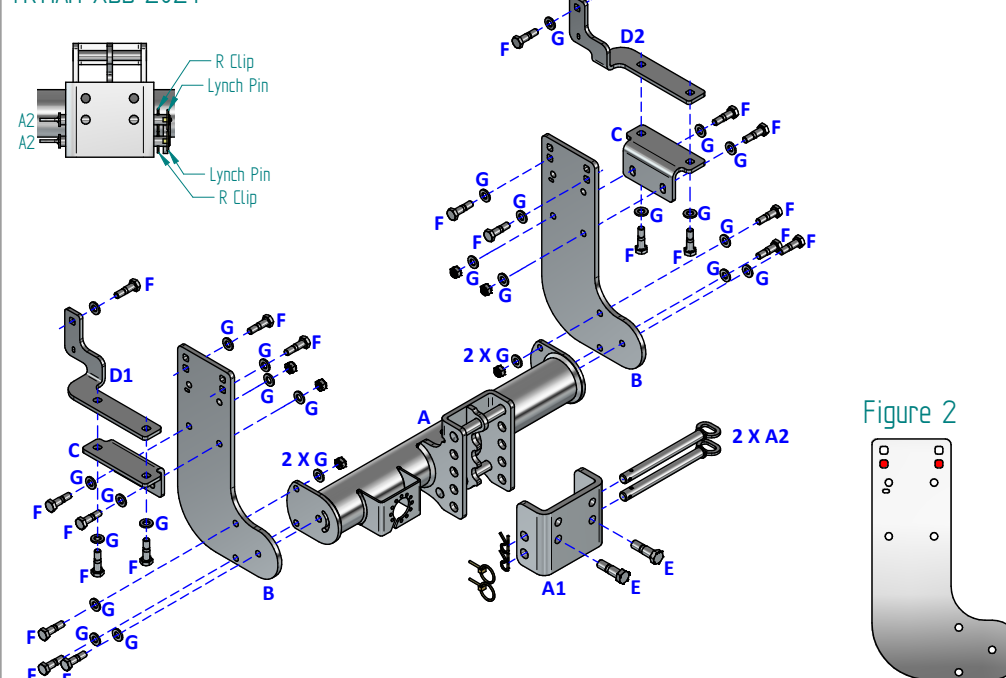


Figure 2

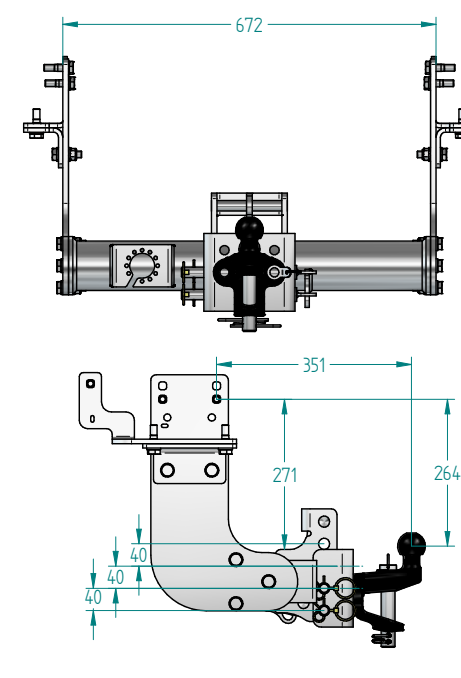

- Notes:
1. For Torque settings see the column next to each item in the list.
 2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
 3. We recommend the use of PRO-TOW Couplings with all our products.