

## TR11A



Renault Master Chassis Cab (Twin Rear Wheel) 2010-2024 (X62) 2024> (XDD)  
Nissan NV400 Chassis Cab (Twin Rear Wheel) 2011-2022 (X62) & Nissan Interstar (Twin Rear Wheel) 2022-2024 (X62) 2024> (XDD)  
Vauxhall Movano Chassis Cab (Twin Rear Wheel) 2010-2022 (X62)

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TR11A Crossbar	E	2	M16 x 60 Bolts & Nyloc Nuts	215 Nm
B	2	Side Arms	F	18	M12 x 45 Bolts (10.9), 12 S/P Washers & 6 Nyloc Nuts	130 Nm
C	2	Lower Chassis Bracket	G	24	12 x 25 Flat Washers	
D1	1	Left-Hand 2024> XDD Bracket				
D2	1	Right-Hand 2024> XDD Bracket				



### Towbar Installation:

1. Locate all the towbar mounting points and remove any existing fixings if present and release any wiring loom clips from the chassis.
2. **Note: 2024> XDD only.** Loosely fix items D1 and D2 to the chassis at the forwardmost inner mounting points using items F and items G.
3. Loosely fix items B to the chassis using items F and items G at the positions shown in Figures 1 & 2.
4. Loosely fix items C to the underside of the chassis using items F and items G.
5. Loosely fix items B to items C using items F and items G.
6. Loosely fix item A between items B using items F and items G.
7. Using items E secure your desired ball bracket and wiring plate (not supplied in this kit) to item A.
8. Fully tighten all fixings ensuring the towbar is rigid, square and secure using the torque settings listed above, then clip the wiring loom into the towbar.

### TR11A X62 2010-2024

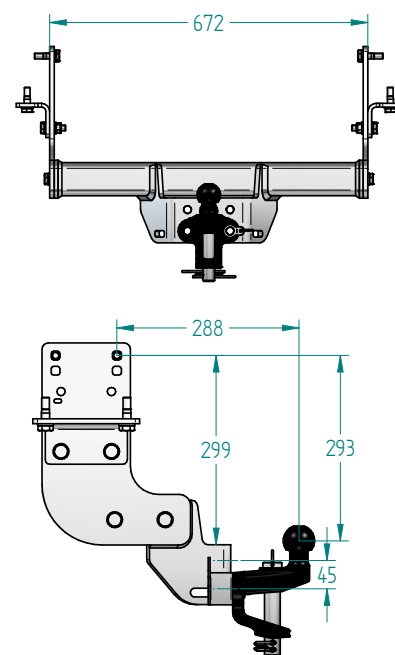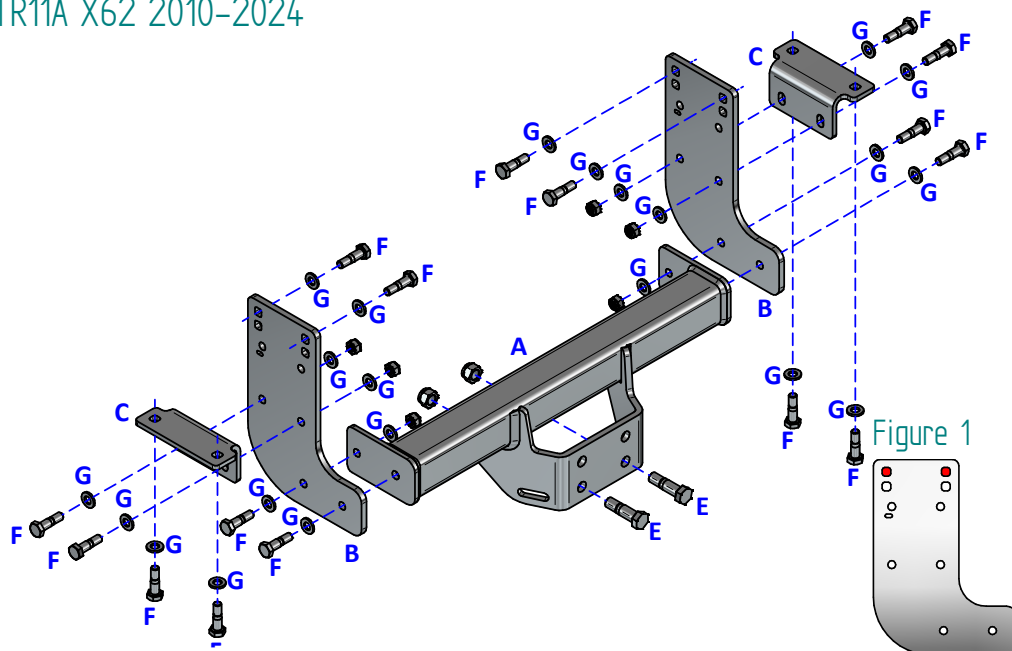

### TR11A XDD 2024>

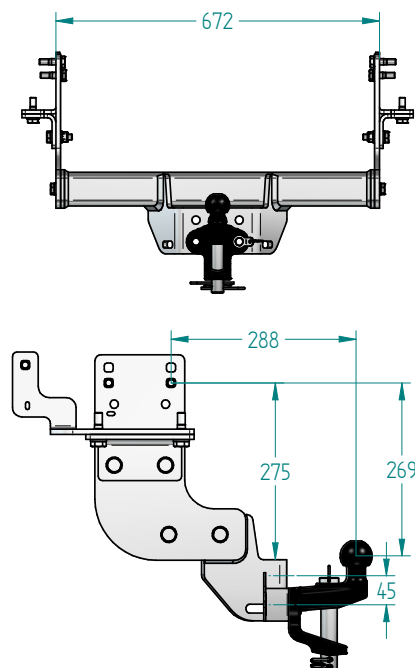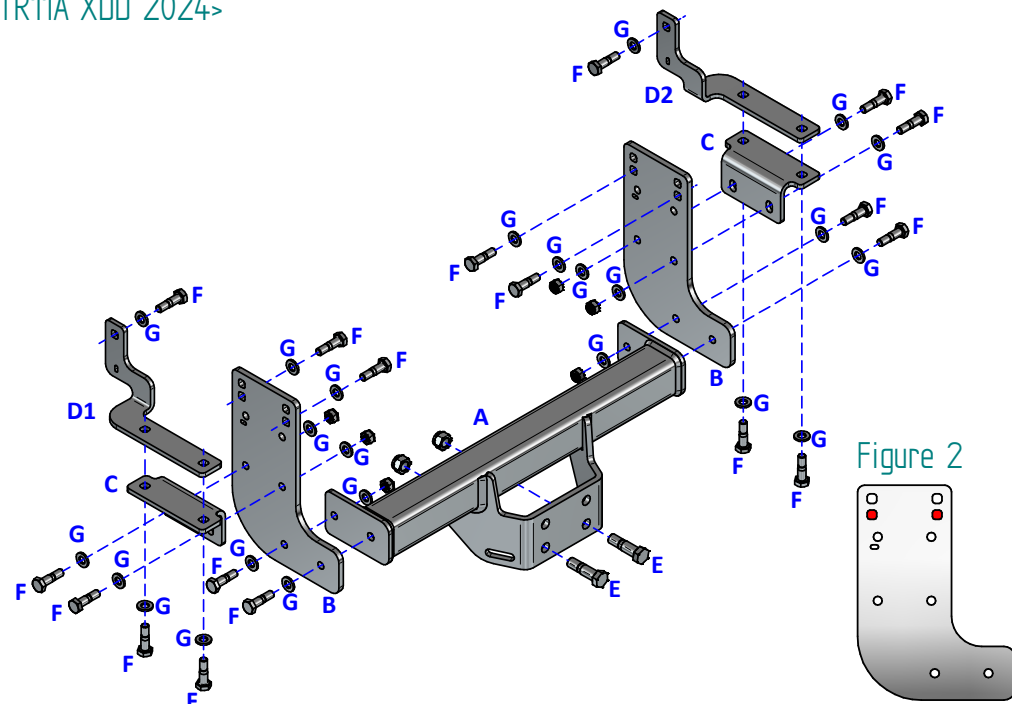

- Notes:**
1. For Torque settings see the column next to each item in the list.
  2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
  3. We recommend the use of PRO-TOW Couplings with all our products.