




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

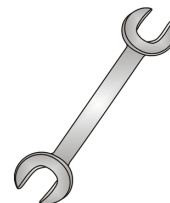

Issue 1

TTSD-E

| Item | Qty | Description |
|------|-----|-----------------------------|
| A | 2 | M16 x 60 Bolts & Nyloc Nuts |
| B | 2 | M8 x 30 Bolts & Nyloc Nuts |
| C | 4 | 8 x 25 Flat Washers |
| D | 1 | European Double Step |
| E | 1 | Socket Plate 2 |

1. Using Item **A** fit Item **D** and your desired ball bracket (Not supplied in this kit) to the Towbar face plate.
2. Using Item **B** with Item **C** fit Item **E** to the mounting holes found in the tread pattern.
3. Fully tighten all fixings ensuring the step is rigid, square and secure.

