

Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting Issue: 2



TAD6VK Audi A6 (C8) 2018> A6 allroad (C8) 2019> A7 (F2) 2018>


| • • | | | | • • • | |
|------|-----|----------------------|------|-------|---|
| Item | Qty | Description | Item | Qty | Description |
| Α | 1 | TAD6 Crossmember | D | 1 | Flip Up Socket Plate (TTFP/RH) |
| В | 2 | Handed Side Arms | E | 2 | M12 x 60 Bolts & S/P Washers |
| С | 1 | 6201 Detachable Neck | F | 6 | M12 x 40 (10.9) Bolts, 4 Nyloc Nuts & 2 S/P Washers |
| | | | G | 2 | M12 x 22 Bolt & S/P Washers |
| | | | Н | 2 | M12 x 25 Bolts & S/P Washers |
| | | | J | 4 | 12 x 30 Flat Washers |
| | | | K | 12 | 12 x 25 Flat Washers |
| | | | М | 4 | 100 x 2.5 Black Zip Ties |
| | | | N | 1 | M10 x 30mm Bolt & Nyloc Nut |
| | | | Р | 2 | 10 x 25 Flat Washer |

Bumper Removal.

- 1. Remove rear light clusters by removing the black inner plastic trim to reveal two fixings per light cluster.
- 2. Remove three fixings from each wheel arch, peel back wheel arch liner to reveal one tip fixing either side. Remove six fixings along bumper lower edge.
- 3. Carefully release the bumper from the vehicle body and pull rearwards disconnecting any necessary wiring looms.
- 4. Remove the rear impact beam (this is not refitted with the Towbar assembly). Replace fixings into rear panel to prevent water ingress.
- 5. As per Fig 3 Use Item N with Items P to prevent water ingress. As per Fig 2 cut the heat shield, Note: Some models are pre-cut.

Towbar Installation.

- 1. Insert Items B into each correct chassis member and fix through the rearmost mounting point using Item F with Item J, fix at the forward mounting point using Item E with Item J.
- 2. Fix Item A between each side arm using Items F with Items K.
- 3. Fix Item C and Item D to Item A using Items G with Items K and Items H with Items K.
- **4.** Fully tighten all fixings ensuring the Towbar is rigid, square and secure.
- 5. Cut the rear bumper as per Fig:1 Relocating the boot sensor cable when applicable and refit. NOTE: Some models are pre-cut.

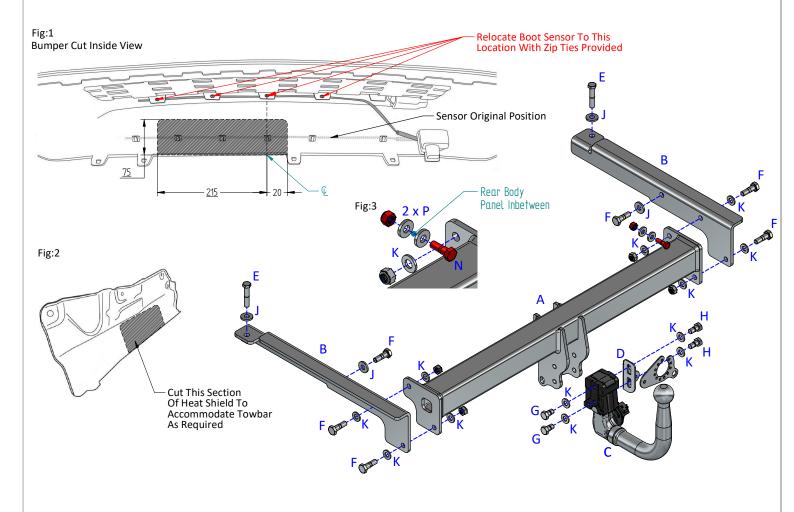

Notes:

- 1. For Torque settings see general notes overleaf.
- 2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.