



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

TC638 Citroen Xsara Picasso 2000 - 2010

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	L/H Side Arm	F	4	M10 x 100 Bolts, Nuts & S/P Washers
C	1	R/H Side Arm	G	6	M10 x 35 Bolts & 6 S/P Washers
D	4	15 x 54 Spacer Tubes	H	4	10 x 40 Flat Washers
			J	10	10 x 25 Flat Washers

1. Remove the spare wheel and lower the rear exhaust hanger.
2. Locate item **D** into the existing holes in the outer face of each chassis member.
3. Using item **F** with item **J** and item **H** on the outer face of the chassis, loosely bolt item **B** and item **C** into place.
4. Locate the two existing holes in the rear panel open these out to 12mm. Using item **G** with item **J** loosely bolt item **A** at these points.
5. Using item **G** with item **J** bolt item **A** to item **B** and item **C**.
6. Using item **E** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
7. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
8. Re-fit the exhaust hanger and replace the spare wheel.

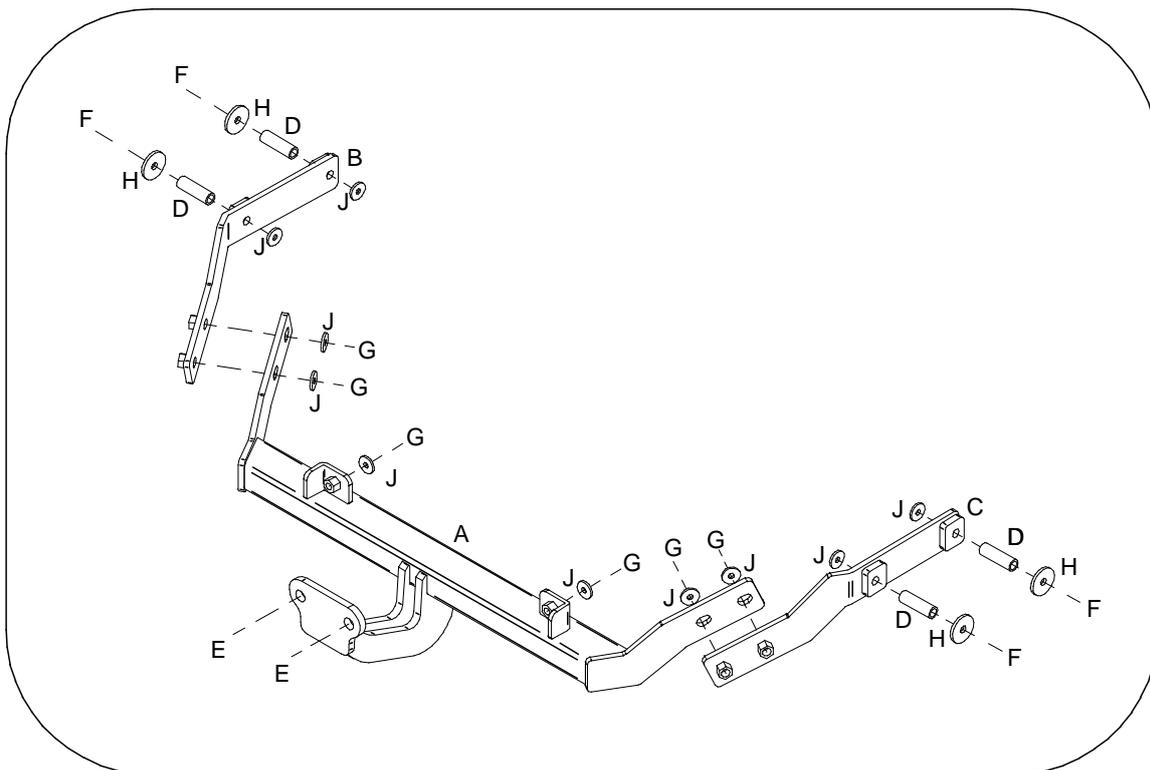

Note: nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.