



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 2

## TC710 Mitsubishi Canter 1998-2009

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	E	6	M12 x 50 Bolts & Nyloc Nuts
B	1	Spacer	F	2	M16 x 50 Bolts Nuts & S/P Washers
C	2	Small Clamp Plates	G	4	12 x 25 Flat Washers
D	2	2 Hole Clamp Plates			

1. Lower the spare wheel (if fitted).
2. Locate the three existing holes in each chassis member and open out to 13mm.
3. Using item E with item C and item D with item G bolt item A to the underside of the chassis.
4. Using item F bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
5. Fully tighten all nuts and bolts and ensure the Towbar is rigid and secure. Re-fit the spare wheel.

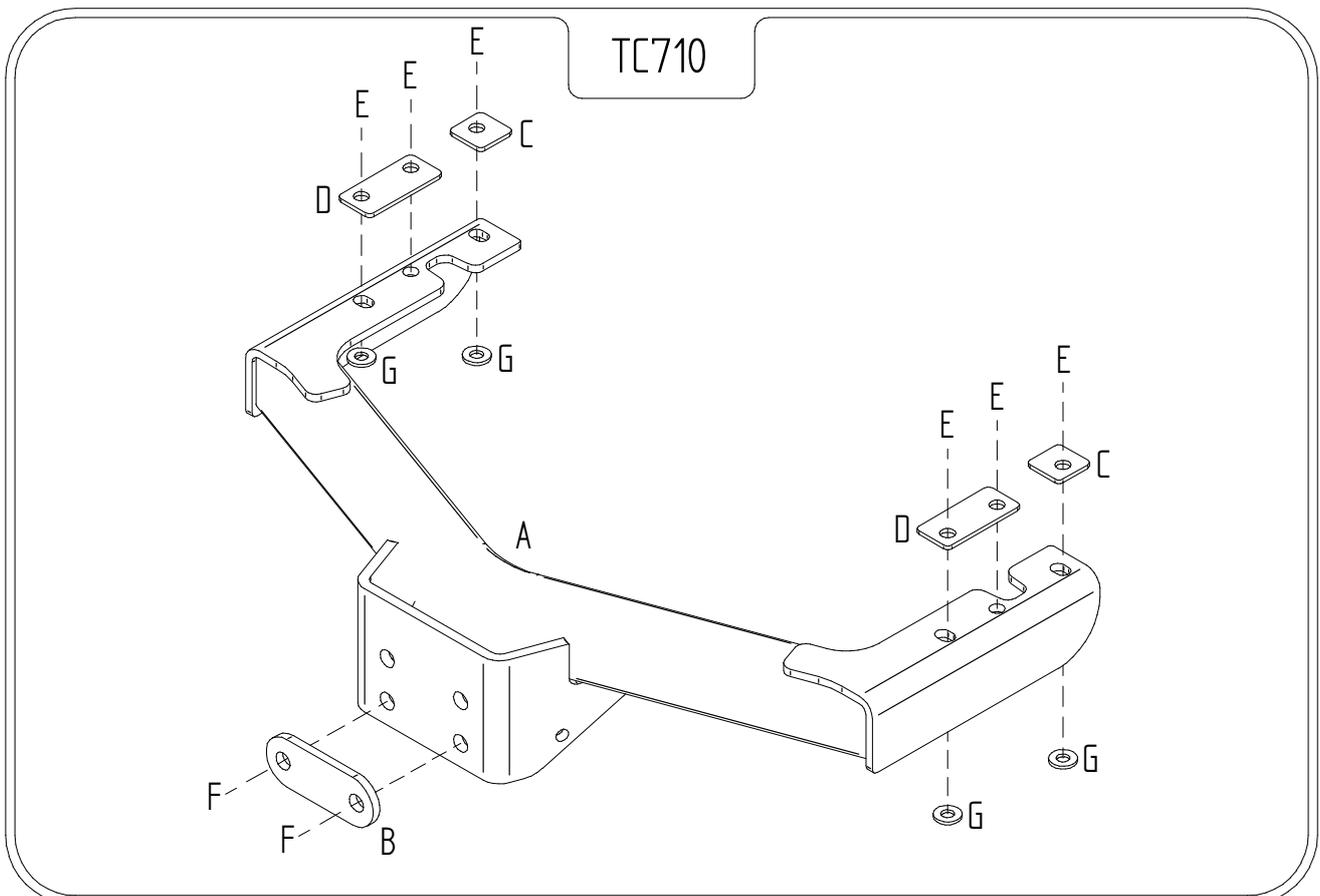

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.