



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

## TC711A Mitsubishi L200 Pick Up 1996 - 2006

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	G	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Side Arms	J	16	M12 x 40 Bolts, Nyloc Nuts & 2 x 12mm S/P Washers
C	2	Handed Clamp Plates	K	8	12 x 25 Flat Washers
D	2	Angle Brackets			
E	1	Coupling Spacer			

1. Remove the rear under-run bar (if fitted).
2. Using item J with item K loosely bolt item B to the existing holes in each chassis member. Use item C with nyloc nuts provided on forward holes (see sketch).
3. Using item J loosely bolt item D to item B and to the existing hole in the underside of each chassis member.
4. Using item J bolt item A to item B.
5. Using item G with item E bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

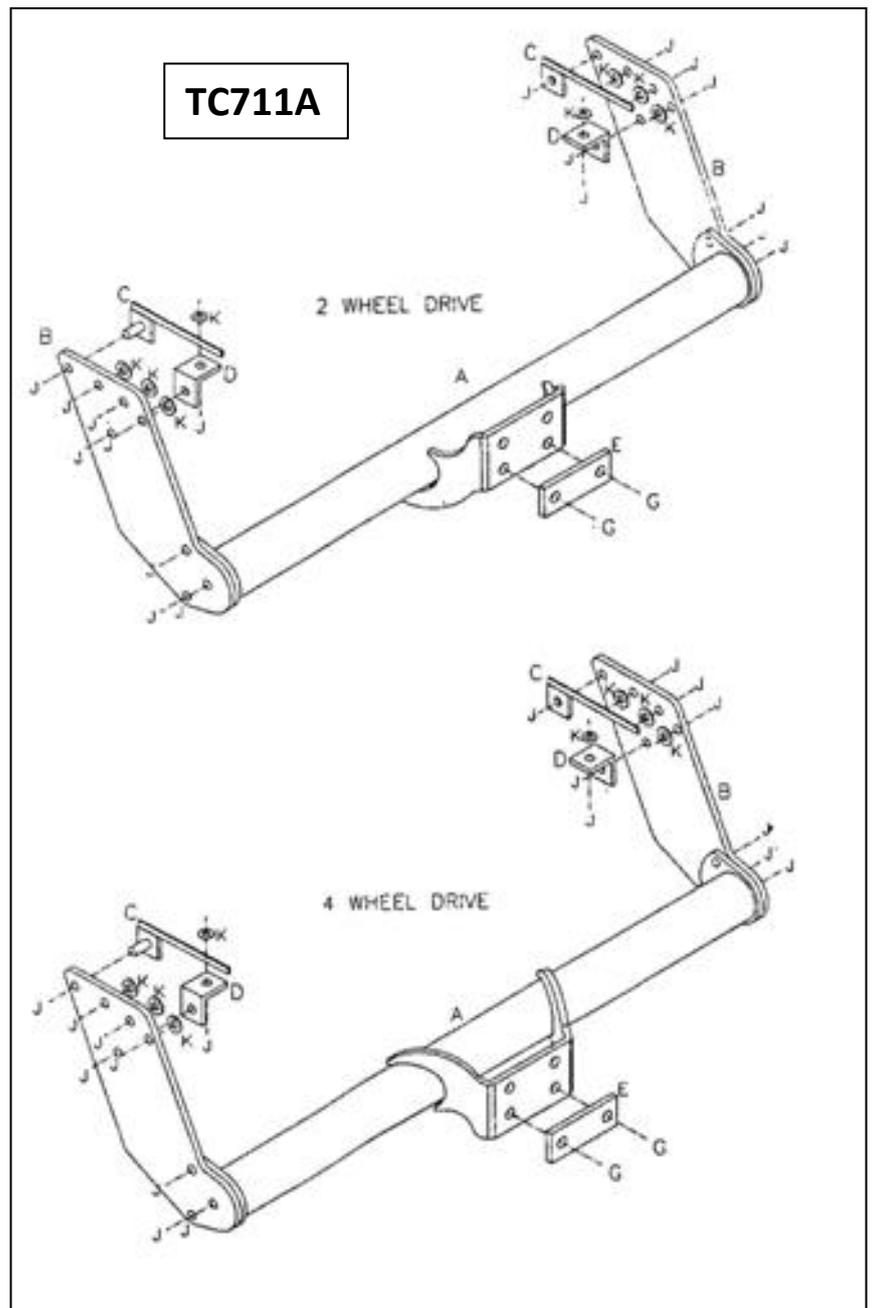

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.