



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 2

## TC712 Mitsubishi Shogun Challenger / Shogun Sport / Pajero Sport 1999>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	C	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	Coupling Spacer	D	4	M12 x 120 Bolts Nuts & S/P Washers
			E	2	M12 x 40 x 1.25 Bolts & S/P Washers
			F	6	12 x 40 Flat Washers

1. Remove towing eyes.
2. Using item D, and item E with item F bolt item A to the existing holes in each chassis.
3. Using item C with item B bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
4. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

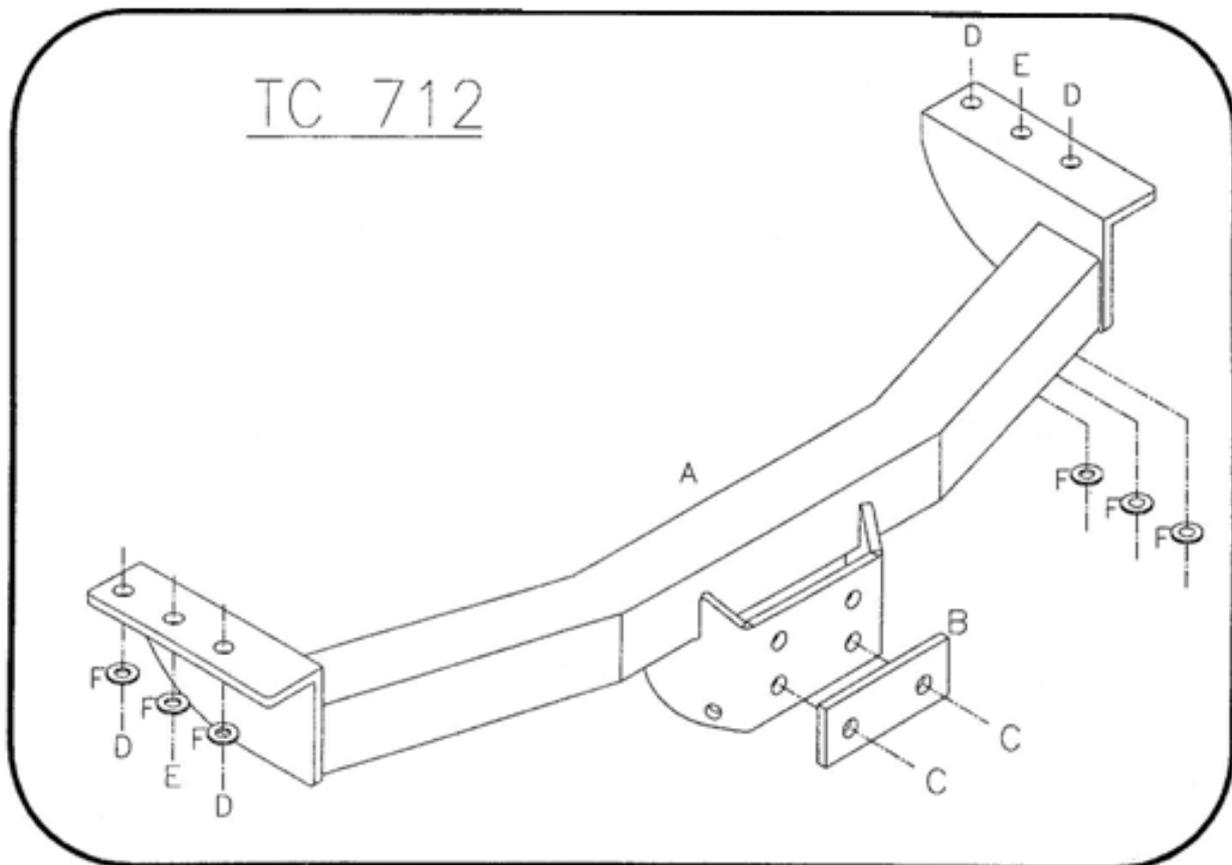

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.