




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

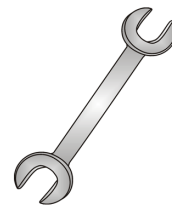

Issue 4

TCART1 CARTHAGO MOTORHOMES

| Item | Qty | Description | Item | Qty | Description |
|------|-----|------------------|------|-----|--|
| A | 1 | Crossmember | E | 2 | M16 x 50 Bolts & Nyloc Nuts |
| B | 2 | Handed Side Arms | F | 4 | M14 x 50 Flange Bolts (10.9) & Flange Nuts (165Nm) |
| C | 1 | Socket Plate 5 | G | 4 | M12 x 40 Bolts (10.9) & Nyloc Nuts |
| D | 1 | T1 Towball | H | 8 | 12 x 40 Flat Washers |

1. Using Items **G** with Items **H** fix Items **B** to each chassis member.
2. Using Item **F** fix Item **A** between Items **B**.
3. Using Item **E** fix Item **D** and Item **C** to your chosen height setting.
4. Fully tighten all fixings ensuring the Towbar is rigid, square and secure

Warning Vehicles Fitted With Chassis Extensions That Are Bonded To The Floor Will Require An Additional Chassis Strengthening Kit To Be Fitted.

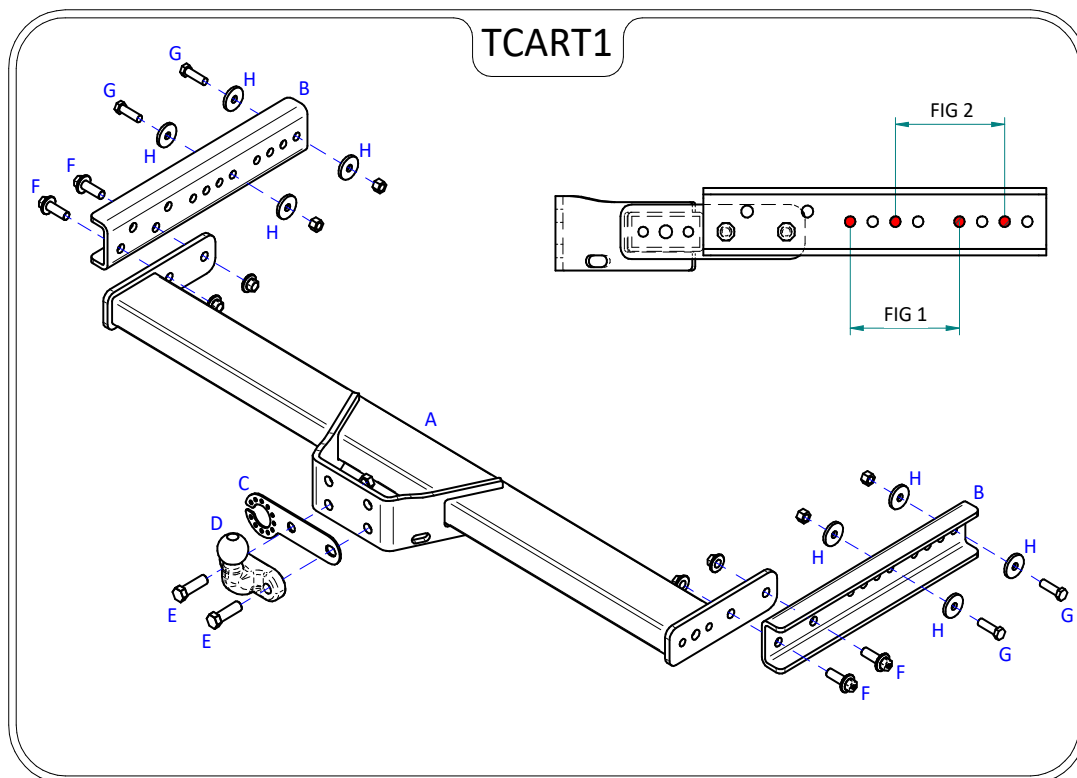


FIG 1 Fitting List:

- Chic E-line I44
- Chic E-line I47
- Chic E-line I49
- Chic E-line I50
- Chic E-line I51
- Chic C-Line 14.2
- Chic C-Line 14.7
- Chic C-Line 14.8
- Chic C-Line 14.9
- Chic C-Line 15.0
- C-Tourer I142
- C-Tourer I143
- C-Tourer I147
- C-Tourer I148
- C-Tourer I149
- C-Tourer T142
- C-Tourer T143
- C-Tourer T145
- C-Tourer T148
- C-Tourer T149
- C-Tourer T150
- C-Compactline I138
- C-Compactline I143
- C-Compactline I145

FIG 2 Fitting List:

- C-Tourer I138
- C-Tourer I150

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed