



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 3

TCH1 CHRYSLER JEEP CHEROKEE 2001- 2008

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	E	6	M12 x 40 Bolts & S/P Lock Washers
C	1	Extension Bar	F	6	M12 x 35 Bolts, 4 Nyloc Nuts & 2 S/P Lock Washers
			G	2	M12 x 100 Grade 10.9 Bolts & Nyloc Nuts
			H	6	12 x 40 Flat Washers
			J	4	12 x 25 Flat Washers
			K	1	Socket Plate 1
			L	10	M12 Black Bolt Caps
			M	2	M16 Black Bolt Caps

1. Remove the towing eye. (This is no longer required).
2. Remove the under-run beam (if fitted). (This is no longer required).
3. Using Item E with Item H loosely bolt Item B to the existing captive nuts in the lower face of each chassis member.
4. Using Item F loosely bolt Item A to Item B.
5. Using Item G with Item J bolt Item C to Item A.
6. Using Item D bolt the ball bracket (not supplied in this kit) to the mounting plate.
7. Fully tighten all nuts and bolts and ensure the Towbar is rigid and secure.

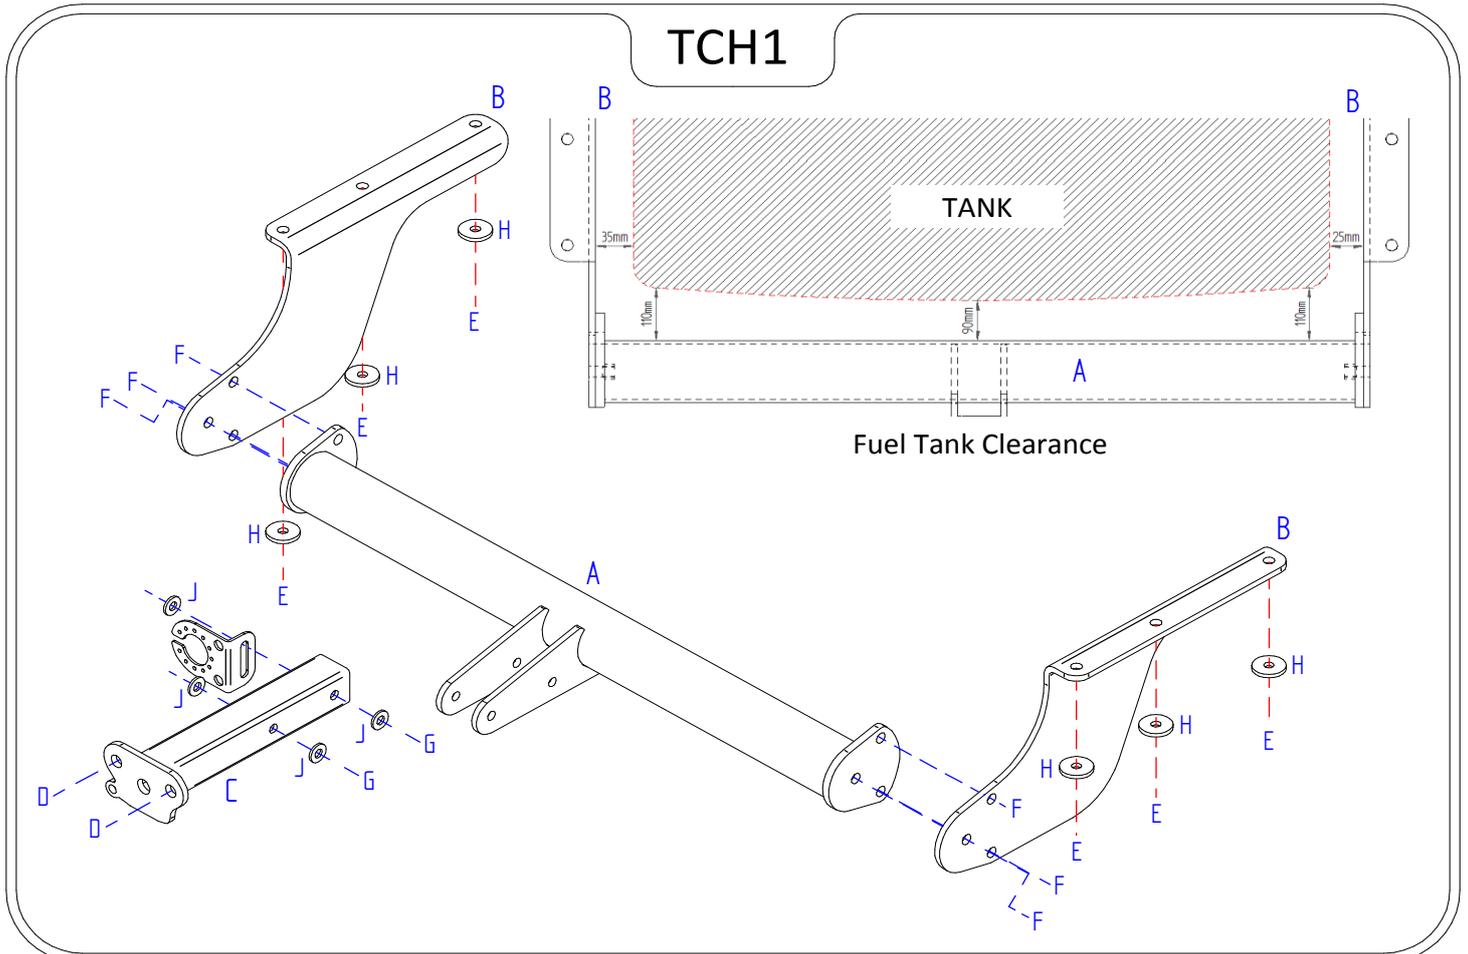

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.