



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

## TCH2 CHRYSLER JEEP COMMANDER 2006> CHRYSLER JEEP GRAND CHEROKEE 2005 - 2011

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	C	2	M16 x 55 Bolts, Nuts & S/P Washers
B	1	Coupling Spacer	D	4	M12 x 100 Grade 10.9 Bolts & S/P Washers
			E	4	12 x 25 Flat Washers

1. Lower the spare wheel.
2. Locate Item **A** onto rear crossmember and using Item **D** and Item **E** bolt into place.
3. Replace the spare wheel.
4. Using Item **C** bolt the ball bracket (not supplied in this kit) to the mounting plate.  
**NOTE** Item **B** is used to space the Towball out if required.

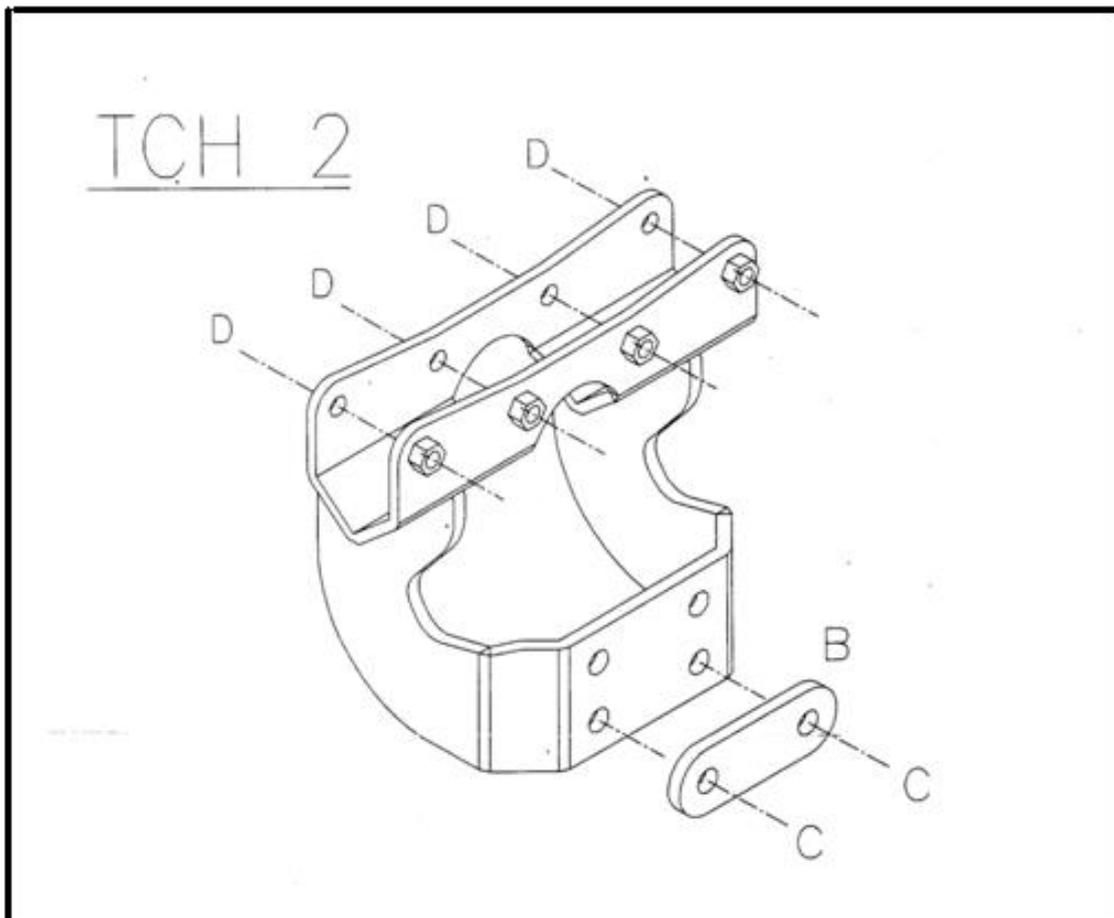

**Note:**

1. Recommended torque setting for M12 Grade 10.9 -139 Nm. (For other Torque settings see notes overleaf).
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.