



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 5


TED1 ELDDIS MOTORHOMES

Autoquest 2008> Compass Avantgarde 2009> Aspire 2010>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	F	8	M12 x 35 Bolts Grade 10.9 & Nyloc Nuts
C	1	Single Socket Plate 5	G	4	M12 x 40 Bolts Grade 10.9 & Nyloc Nuts, 2 S/P Washers
D	1	Towball & Cover	H	8	12 x 40 Flat Washers
			J	4	12 x 25 Flat Washers

TOWBAR INSTALLATION:

1. Locate the Towbar mounting points and using Item F with Item H bolt Items B to each correct chassis extension.
2. Using Item G with Item J bolt Item A between each side arm ensuring vehicles with a short body overhang use Fig.1 and a long body overhangs use Fig.2.
3. Using Item E bolt the ball bracket and wiring plate to the face plate.
4. Fully tighten all nuts and bolts ensuring Towbar is rigid, square and secure.
5. Fit vehicle specific wiring kit as per the separate instruction.

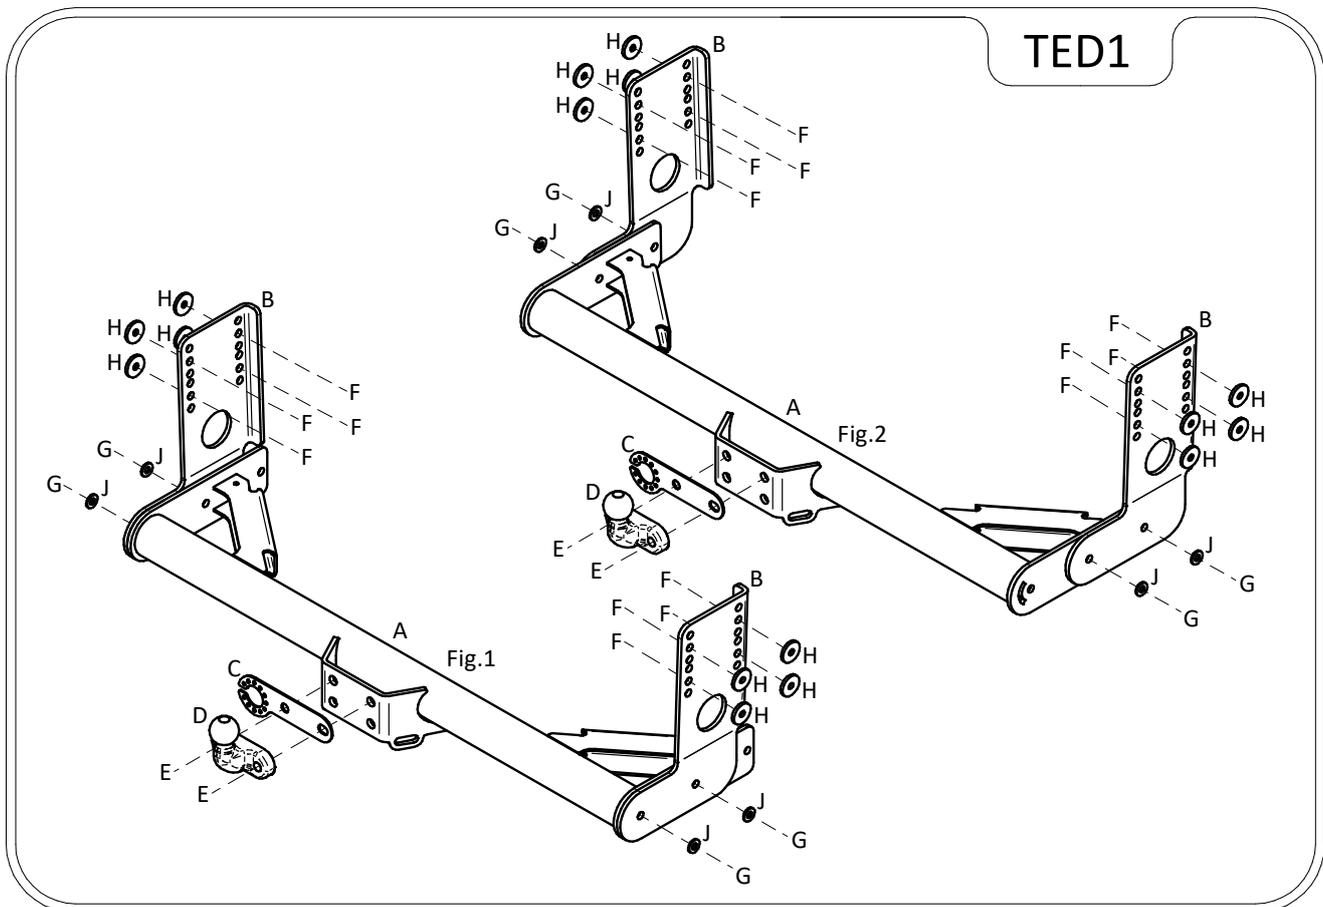

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.