



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 2

TFD17SN FORD FIESTA 2008 – 2017 / FIESTA 2017> / Ka+ 2017>

Item	Qty	Description	Item	Qty	Description
A	1	TFD17 Crossmember	E	1	VASP8 L/H Socket Plate
B	2	Handed Side Arms	F	4	M10 x 35 Bolts & S/P Washers
C	2	3mm Spacer Plates	G	4	M10 x 45 Bolts & Nyloc Nuts
D	1	ACS1 / 9201 Swan Neck	H	2	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
			J	2	15mm Spacer Plates
			K	8	10 x 30 Flat Washers
			L	4	12 x 25 Flat Washers

BUMPER REMOVAL:


1. Remove the rear bumper, **Fiesta**: two vertical fixings and three in each wheel arch. **KA+**: four vertical fixings and three in each wheel arch, two in the boot shut panel, remove rear light clusters to reveal one more bumper fixing either side to remove. Release bumper tips from vehicle body and pull rearwards. (disconnect any necessary wiring looms)
2. Remove the bumper impact beam (This is not refitted with the Towbar) replace nuts back onto the studs.

TOWBAR INSTALLATION:

3. Locate Items **B** into each correct chassis and loosely fix in place using item **F** with item **K**.
4. Using item **G** with Item **K** fix item **A** between items **B**. (Note: some models may require Items **C**).
5. Using item **H** and Item **J** with Items **L** fix item **D** and Item **E** to item **A**.
6. Fully tighten all fixings and ensure the Towbar is rigid, square and secure.
7. Cut the bumper centrally as per the sketch below.
8. Refit the rear bumper.

TFD17SN

BUMPER CUT OUTSIDE VIEW

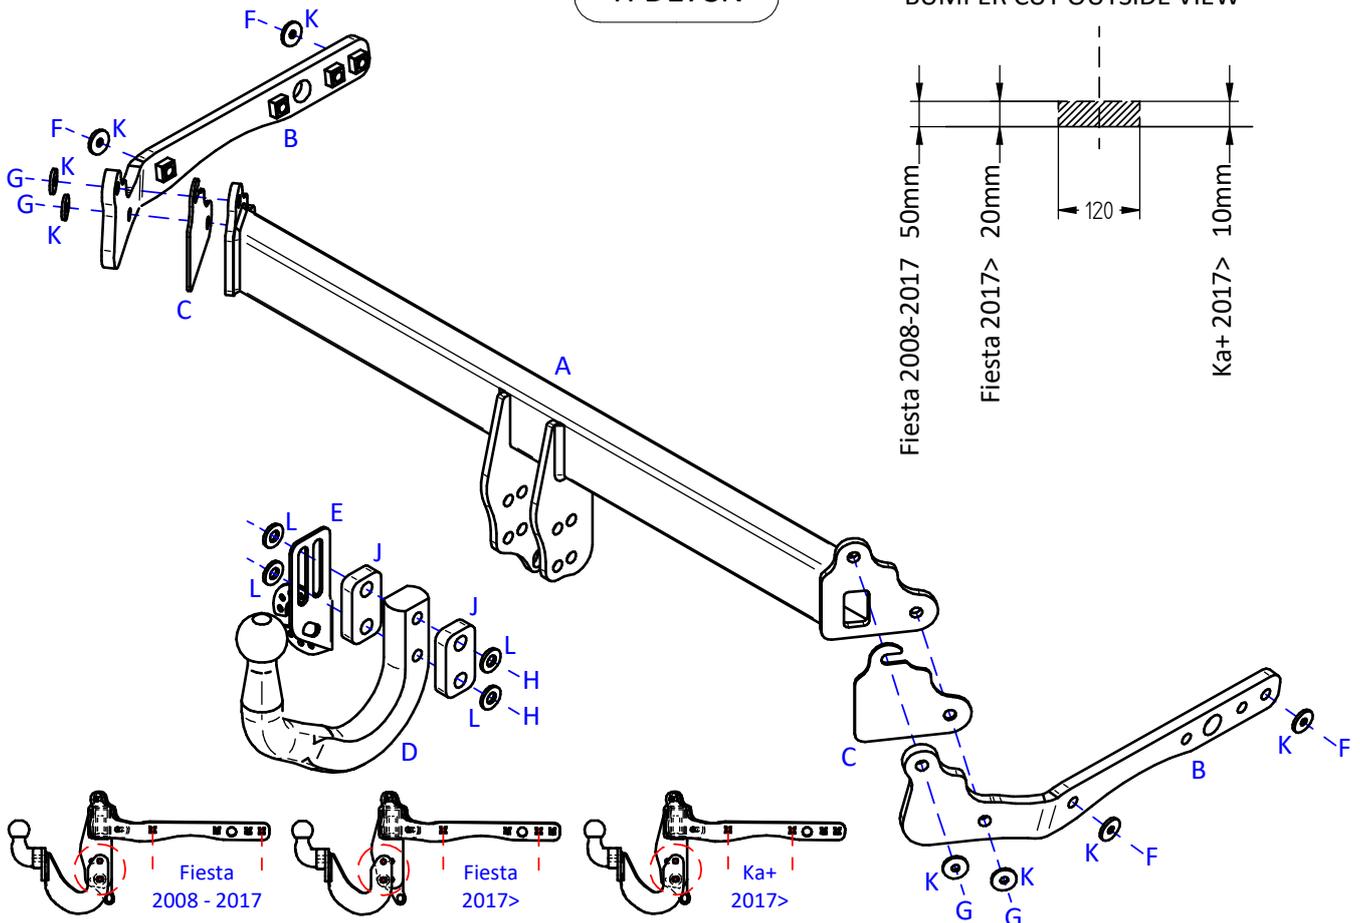

Note:

1. Torque Settings see notes overleaf.
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.