

# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 2


## TIVE3H IVECO DAILY 30S – 35S 35C – 40C – 50C

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 55 Bolts & Nyloc Nuts
B	2	Handed Side Arms	F	8	M12 x 50 Bolts (Grade 10.9) & Nyloc Nuts
C	2	Spacer Plates	G	8	M12 x 40 Bolts (Grade 10.9) & Nyloc Nuts
D	8	12 x 40 Flat Washers	H	24	12 x 25 Flat Washers
X	1	Slider Face Plate			
X1	2	Slider Pins & Clips			

### TOWBAR INSTALLATION:

1. Locate four Towbar mounting points in each chassis member.
2. Using Item F with Item H and Item D fix each correct side arm (Item B) and spacer plate (Item C) to each correct chassis member.
3. Using Item G with Item H fix Item A between each side arm.
4. Using Item E to fix your desired coupling to Item A.
5. Fully tighten all fixings ensuring the Towbar is rigid square and secure.

### TIVE3H

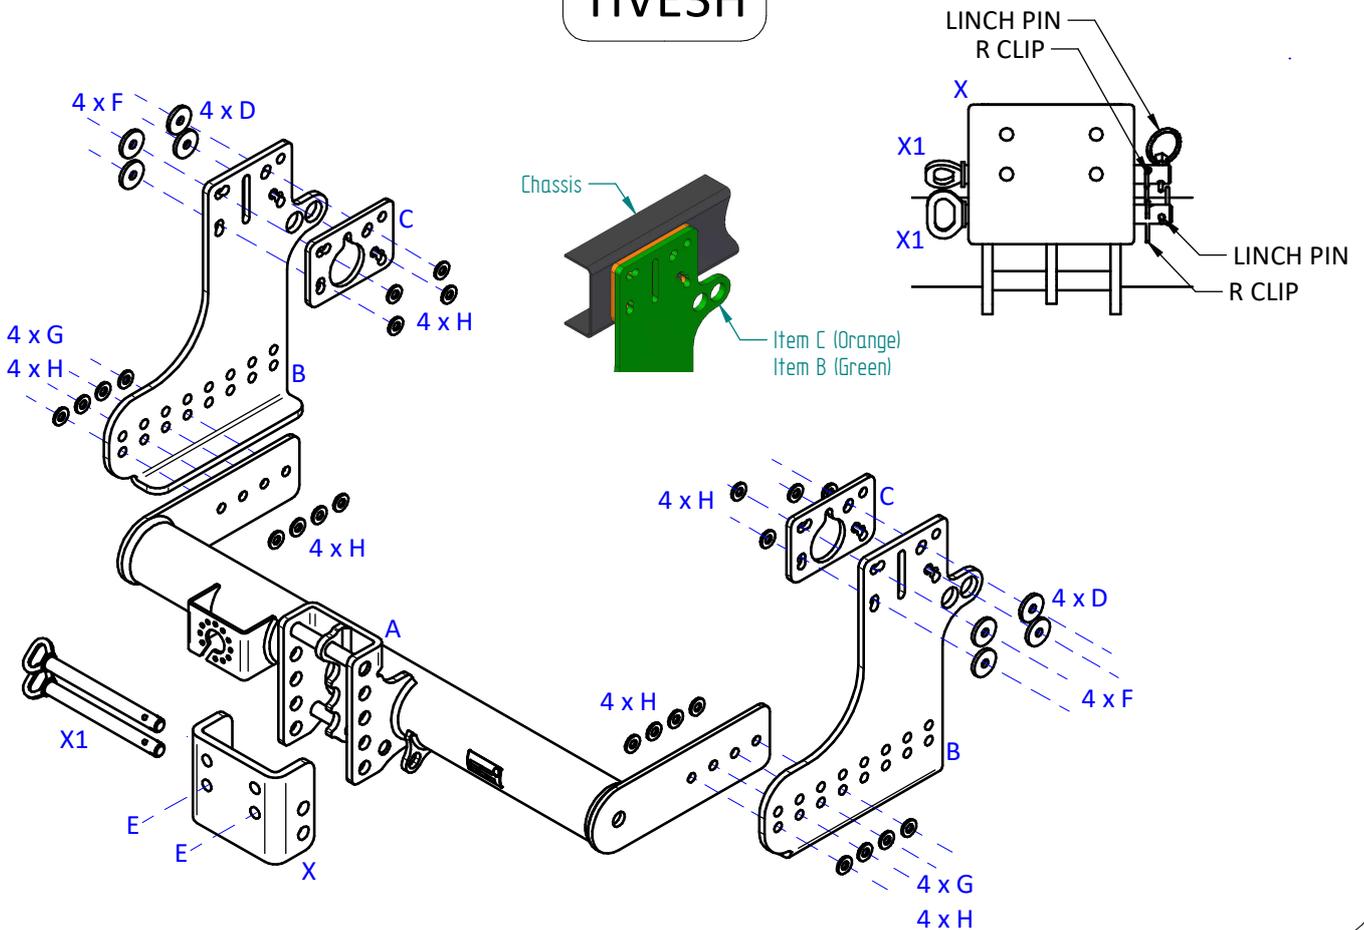

### Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.