



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting
Issue: 1




Fitting
Instruction

TIZ7H-SC ISUZU D MAX SINGLE CAB 2021>

Item	Qty	Description	Item	Qty	Description
A	1	TIZ7H Crossmember	E	2	M16 x 55 Bolts & Nyloc Nuts
A1	1	Slider Face Plate	F	6	M12 x 40 x 1.25 (10.9) Bolts & S/P Washers
A2	2	Slider Pins & Clips	G	16	M12 x 45 (10.9) Bolts, 12 Nyloc Nuts & 4 S/P Washers
B	2	Side Arms (1A-S)	H	36	12 x 30 Flat Washers
C	2	Handed Angle Brackets	J	1	16 x 27 Flat Washer
D	2	M12 Clamp Plates			

TOWBAR INSTALLATION:

- Using Item F with Item H fix Items B to each chassis member (outside face). (Models with bumper arms that bolt to the outside face of each chassis, remove original fixings and discard, fit Items B as per instruction using the additional Item H as a spacer at the forwardmost point only).
- Insert Items D into the open ends of each chassis and line up with the vertical mounting points.
- Using Item G with Item H fix items C to Items B and to the vertical chassis mounting points.
- Fix Item A between each side arm using Items G and items H.
- Using Item E fix you desired ball bracket (not supplied in this kit) to Item A1.
Note: When fitting AV352L use Item J under the bolt head which is not used for the eyelet as shown in Fig 1 so that Items E are balanced.
- Fully tighten all fixings ensuring the Towbar is rigid, square and secure.

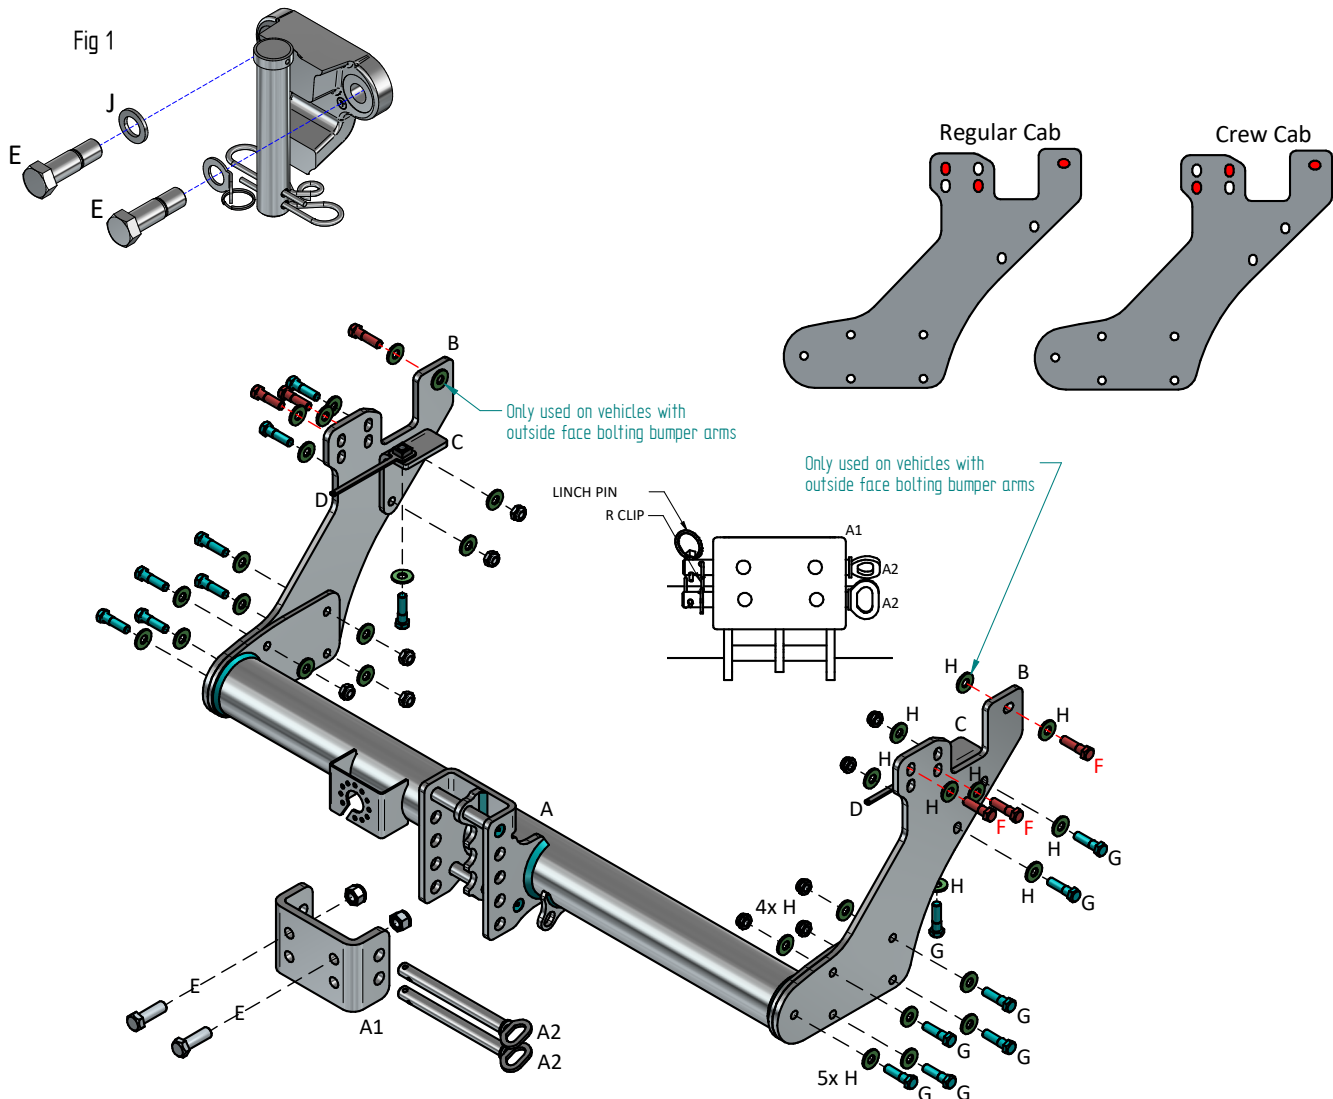

Notes:

- For Torque settings see general notes overleaf.
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.