



Tow-Trust Towbars


Important: Please read General Notes overleaf before fitting

Issue 1

TK12SN KIA SPORTAGE 3 2010> HYUNDAI iX 35 2010>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
B	1	ACS8 / 9208 Swan Neck	E	8	M10 x 35 x 1.25 Bolts & S/P Washers
C	2	Side Arms	F	6	M12 x 40 Bolts, 4 Nuts & 6 S/P Washers
			G	2	15mm Spacer Plates
			H	8	10 x 40 Flat Washers
			J	4	12 x 25 Flat Washers
			K	1	VASP8 L/H Socket Plate

- Optional:** You may find fitting this Towbar easier by first lowering the exhaust silencers.
- Locate all Towbar mounting points and clear of any mastic.
- Using item **E** with item **H** loosely fix side arms (item **C**) to each chassis member.
- Carefully insert item **A** up into the rear bumper and fix in place with item **F**.
- Using item **D** with item **J** and item **G** fix item **B** and item **K** to item **A**.
- Fully tighten all nuts and bolts ensuring Towbar is rigid and secure.

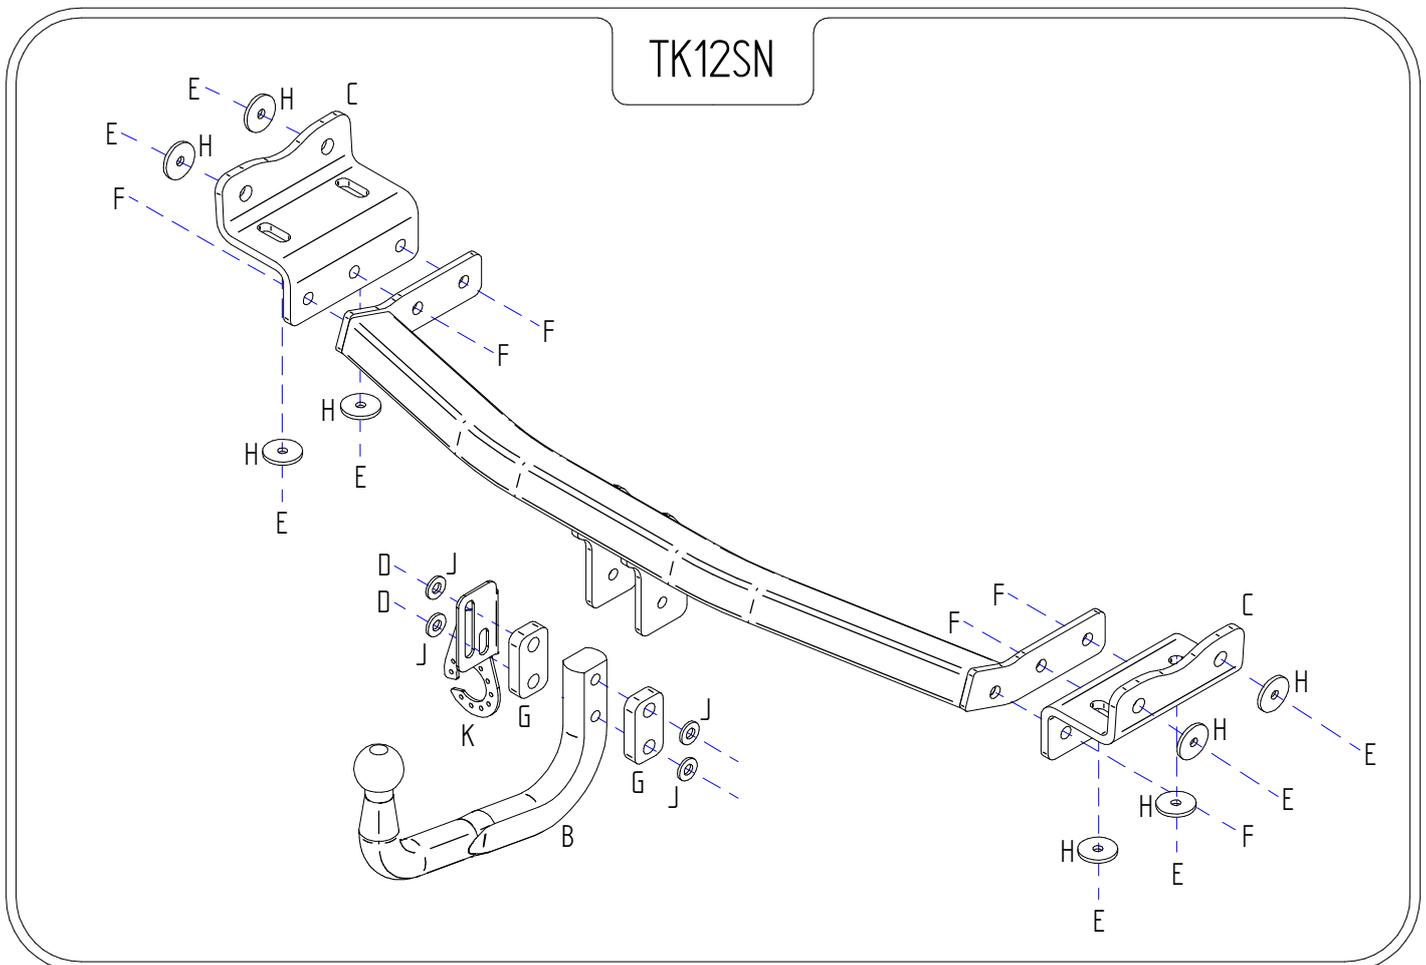

Note:

- Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
- Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.