



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

## TL227 Jaguar X Type Saloon 2001 - 2010 & Estate 2003 - 2010

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	Extension Bar	F	6	M12 x 35 Bolts, Nuts & S/P Washers
C	2	Handed Side Arms	G	4	M12 x 130 Bolts & S/P Washers
D	4	19 x 90.5 Spacer Bushes	H	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
			J	4	12 x 40 Flat Washers
			K	4	12 x 25 Flat Washers
			L	1	Socket Plate 1

1. Remove the rear bumper. Three plastic fixings along the lower edge, two bolts inside the boot behind the trim, four nuts inside along the rear panel, two fixings in each lower mudguard, one upper tip bolt and one side bolt behind each mudguard.
2. Cut a small section from the lower edge of the bumper centrally 65mm wide x 100mm deep. Trim the bumper cut to suit the socket plate.
3. At the rearmost mounting temporarily lower the exhaust silencers.
4. Locate Item **D** and Item **G** with Item **J** under each bolt head, into existing holes in each chassis. NOTE: the bolts should locate into the slots provided. Loosely bolt Item **C** to these bolts.
5. Using Item **F** loosely bolt Item **A** to Item **C**.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
7. Replace rear bumper.
8. Using Item **H** with Item **K** bolt Item **B** to Item **A**.
9. Using Item **E** bolt the ball bracket (not supplied in this kit) to the mounting plate.

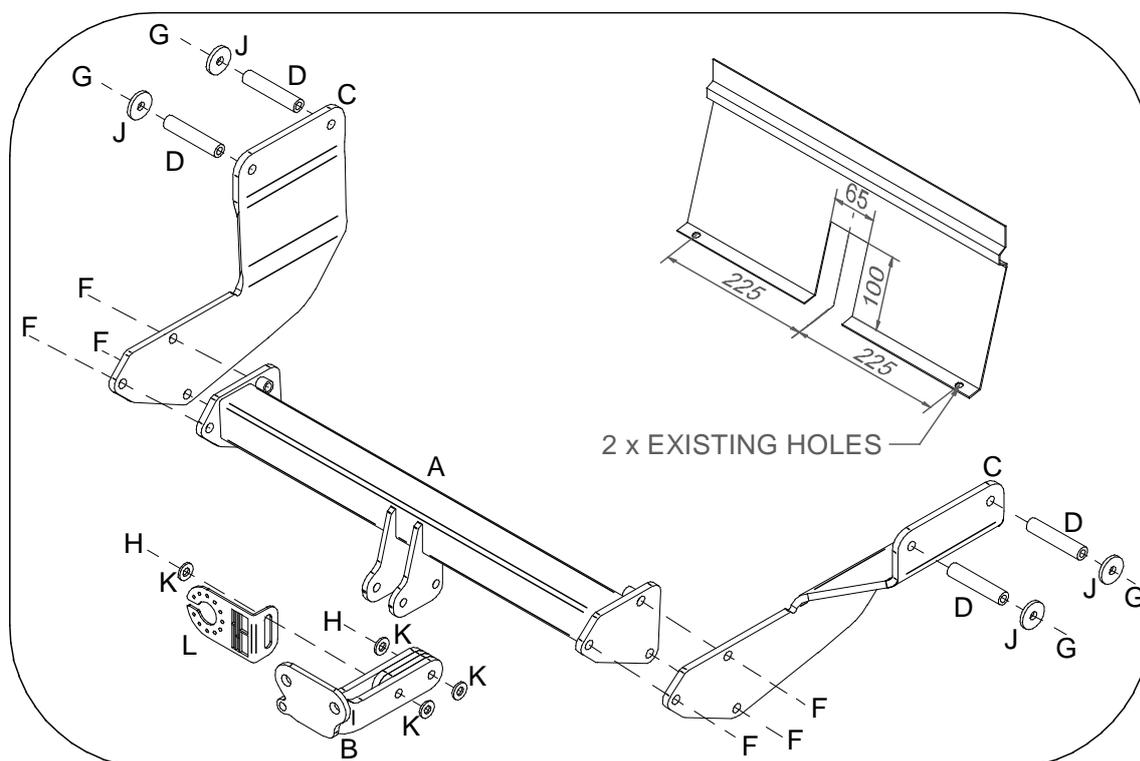

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.