



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 1

TL238 Land Rover Defender 90 1984 – 1998 Land Rover Defender 110 (County) / Pick-Up 1983 - 1998

Item	Qty	Description	Item	Qty	Description
A	1	Drop Plate	D	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Side Arms	E	4	M12 x 90 Bolts, Nuts & S/P Washers
C	2	Clamp Plates	F	4	M10 x 30 Bolts, Nuts & S/P Washers
			G	4	12 x 35 Flat Washers

1. Using item E with item G under each head and item C inside the rear chassis member, loosely bolt item A to the four existing holes.
2. Using item F, loosely bolt item B to the holes provided on the inside face of the chassis. **NOTE:** The towing eye is at this point on some models, in which case use the existing bolt.
3. Using item F, bolt items B to item A.
4. Using item D, bolt and ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
5. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

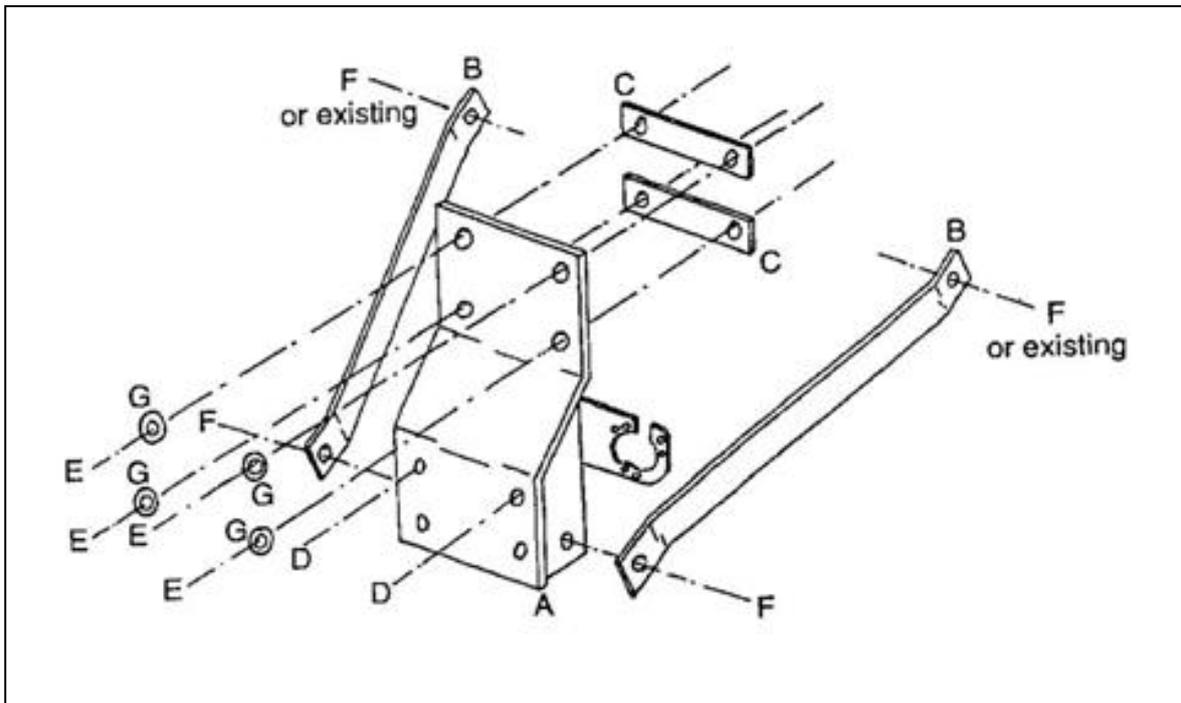

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.