



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

## TL246 Land Rover Freelander 1997 - 2006

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	F	2	M12 x 75 x 1.25 Bolts & S/P Washers
B	1	Extension Bar	G	6	10 x 30 Flat Washers
C	2	M16 x 50 Bolts & Washers	H	4	12 x 25 Flat Washers
D	6	M10 x 40 Bolts & S/P Washers	I	2	12 x 40 Flat Washers
E	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts			

1. Remove the three inner bolts only securing the towing eye.
2. Locate the two existing holes across the rear of the vehicle (these are covered with tape).
3. Using item **D** with item **G** loosely bolt item **A** to the existing threaded holes each side.
4. Using item **F** with item **I** bolt item **A** to the existing central mounting points.
5. Using item **E** with item **H** bolt item **B** to item **A**.
6. Using item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
7. Fully tighten all nuts and bolts and ensure the Towbar is rigid and secure.

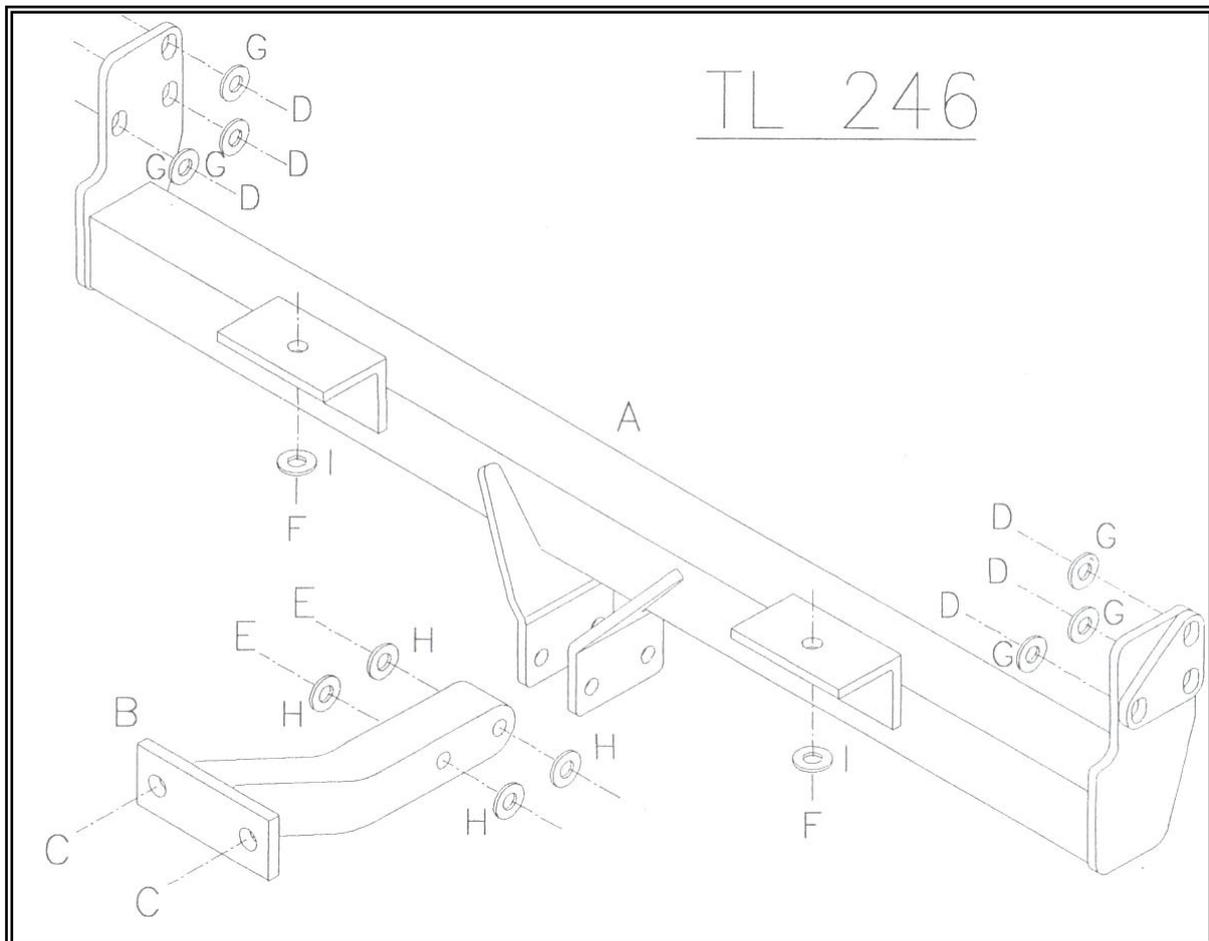

### Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.