



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 4

TN 814 Nissan Micra 1993 - 2003

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	H	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	R/H Side Plate	J	6	M10 x 40 Bolts 2 Nuts 6 S/P Washers
C	1	L/H Side Plate	K	4	M10 x 40 Bolts on Wire with Nuts & S/P Washers
D	1	L/H Angle Bracket	L	4	M12 x 35 Bolts 2 Nuts & 4 S/P Washers
E	1	R/H Angle Bracket	M	1	M10 x 120 Bolt & Nyloc Nut
F	2	Clamp Plates with M10 Nuts	N	14	10 x 25 Flat Washers
G	2	Angled Bushes			

This towbar can be fitted without removing the bumper but the fitter may prefer to do so.

1. Locate item **K** through the existing holes in the side of each chassis member.
2. Using the nuts and washers (item **N**) provided, loosely bolt item **C** and item **E** into place.
3. Bend the cover plate on the end of each chassis enough to locate item **F** into the chassis. Using item **J** with item **N** loosely bolt item **B** and item **D** into place.
4. Using item **J** with item **N** loosely bolt item **D** to item **C**.
5. Using item **L** bolt item **A** to item **B** and item **C**.
6. Using the holes in item **A** as a jig, drill 11mm hole through the towing eye bracket. Using item **M** with item **G** and Item **N** bolt item **A** into position.
7. Using item **H** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
8. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
9. Replace bumper if removed.

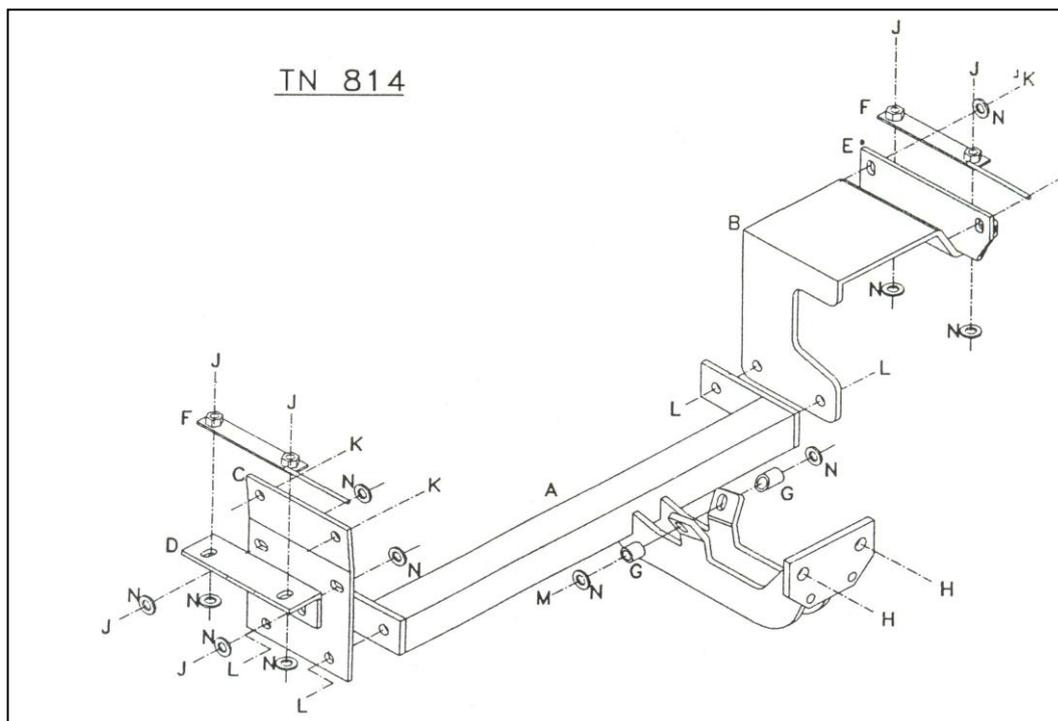

Note: nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.