



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

TN 841A NISSAN X-TRAIL 2001 - 2007

| Item | Qty | Description | Item | Qty | Description |
|------|-----|---------------|------|-----|--|
| A | 1 | Crossmember | E | 4 | M16 x 50 Bolts, Nuts & S/P Washers |
| B | 1 | L/H Side Arm | F | 4 | M12 x 40 Bolts, 2 Nuts & 4 S/P Washers |
| C | 1 | R/H Side Arm | G | 12 | M10 x 40 Bolts & S/P Washers |
| D | 1 | Extension Bar | H | 2 | M8 x 30 Bolts & S/P Washers |
| | | | J | 12 | 10 x 30 Flat Washers |
| | | | K | 2 | 8 x 25 H/D Flat Washers |
| | | | L | 4 | 12 x 25 Flat Washers |

1. Remove the plastic underguard. (4 screws and 5 nuts)
2. Remove rear bumper four plastic clips along the lower edge and two fixings in tailgate opening. Remove the two push in clips each side to release the wheel arch liner; this will reveal two fixings at each tip.
3. Temporarily disconnect the fog lamp wire.
4. Cut a slot in the lower edge of the bumper centrally 140mm wide x 50mm deep. If required trim to suit.
5. Temporarily remove the rearmost exhaust rubber from its hanger.
6. Remove the chassis caps, these are no longer required.
7. Locate Item **B** and Item **C** into the ends of each chassis and using Item **G** with Item **J** loosely bolt each side arm into place through the existing holes.
8. Using Item **H** with Item **K** bolt the side arm tags to the existing captive nuts on the rear face of the panel.
9. Using Item **F** with Item **L** bolt Item **A** to Item **B** and Item **C**.
10. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
11. Refit the bumper, underguard and exhaust rubbers.
12. Using Item **E** bolt Item **D** to Item **A**.
13. Using Item **E** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

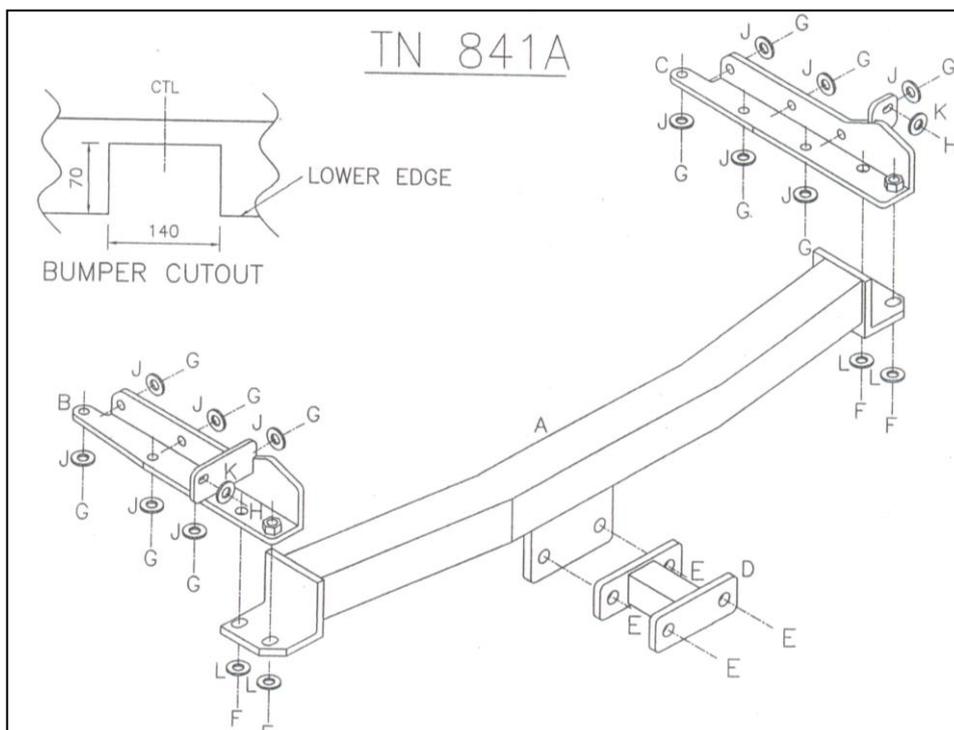

Note: nose load limits and vehicle manufacturers' trailer / caravan weight limits must be observed.