



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 1

## TP7SN PEUGEOT 308 EST/SW 2008>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M12 x 110 Grade 10.9 Bolts & Nyloc Nuts
B	1	ACS8 / 9208 Swan Neck	F	4	M8 x 40 Bolts Grade 10.9 Bolts & S/P Washers
C	1	L/H Side Arm	G	2	M8 Nuts & S/P Washers
D	1	R/H Side Arm	H	4	M12 x 40 Bolts, Nuts & S/P Washers
			J	2	15mm Spacer Plates
			K	6	8 x 25 H/D Flat Washers
			L	12	12 x 25 Flat Washers
			M	1	VASP8 L/H Socket Plate

1. Remove the two fixings on the lower edge of the bumper to release the bumper tags and fold down out the way.
2. Remove the four fixings holding the lower corner guards from the lower edge of the bumper and remove guards.
3. Remove the two lower fixings from each side of the impact beam on the back panel and discard.
4. Using item **F** with item **K** loosely bolt item **A** to the two lower fixing points of the impact beam on the rear panel.
5. Using item **G** with item **K** bolt the side arms to the existing stud on the outside face of each chassis member.
6. Using item **H** with item **L** bolt the side arms to item **A**.
7. Using item **E** with item **L** and item **J** bolt item **B** with item **M** to item **A**.
8. Fully tighten all nuts and bolts ensuring towbar is rigid and secure.
9. Replace corner guards and bumper tag fixings.

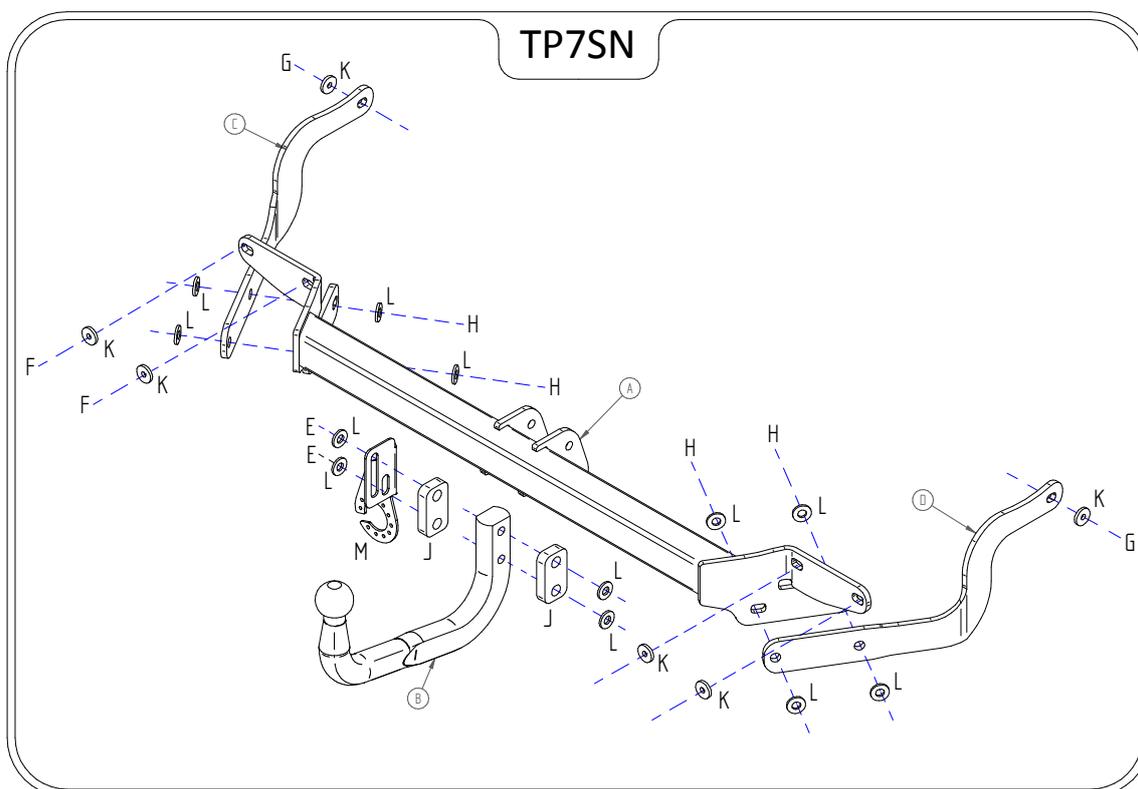

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.