



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 6

**TR 822 Renault Master Van 1998 - 2010**  
**Vauxhall Movano Van 1998 - 2010**  
**Nissan Interstar Van 2002 - 2010**

Item	Qty	Description	Item	Qty	Description
<b>A</b>	1	Towbar	<b>D</b>	2	M16 x 50 Bolts, Nuts & S/P Washers
<b>B</b>	1	Coupling Spacer	<b>E</b>	4	M10 x 45 Bolts & S/P Washers
<b>C</b>	2	Handed Side Arms	<b>F</b>	5	M8 x 35 Bolts & S/P Washers
			<b>G</b>	8	M12 x 40 Bolts, 2 Nuts & 8 S/P Washers
			<b>H</b>	5	8 x 25 Flat Washers
			<b>J</b>	4	10 x 30 Flat Washers
			<b>K</b>	8	12 x 25 Flat Washers

1. Remove the three bumper arms (these are no longer required).
2. Remove the two inner bolts securing the towing eye to the chassis.
3. Using Item **E** with Item **J** loosely bolt Item **A** to the existing threaded holes in the side of each chassis.
4. Using Item **F** with Item **H** bolt the bumper at existing points to Item **A**.
5. Using Item **G** with Item **K** loosely bolt Item **C** to the existing holes in the bottom face of each chassis and to the two holes in Item **A**.
6. Using Item **D** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate. Item **B** coupling spacer is supplied if required.
7. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

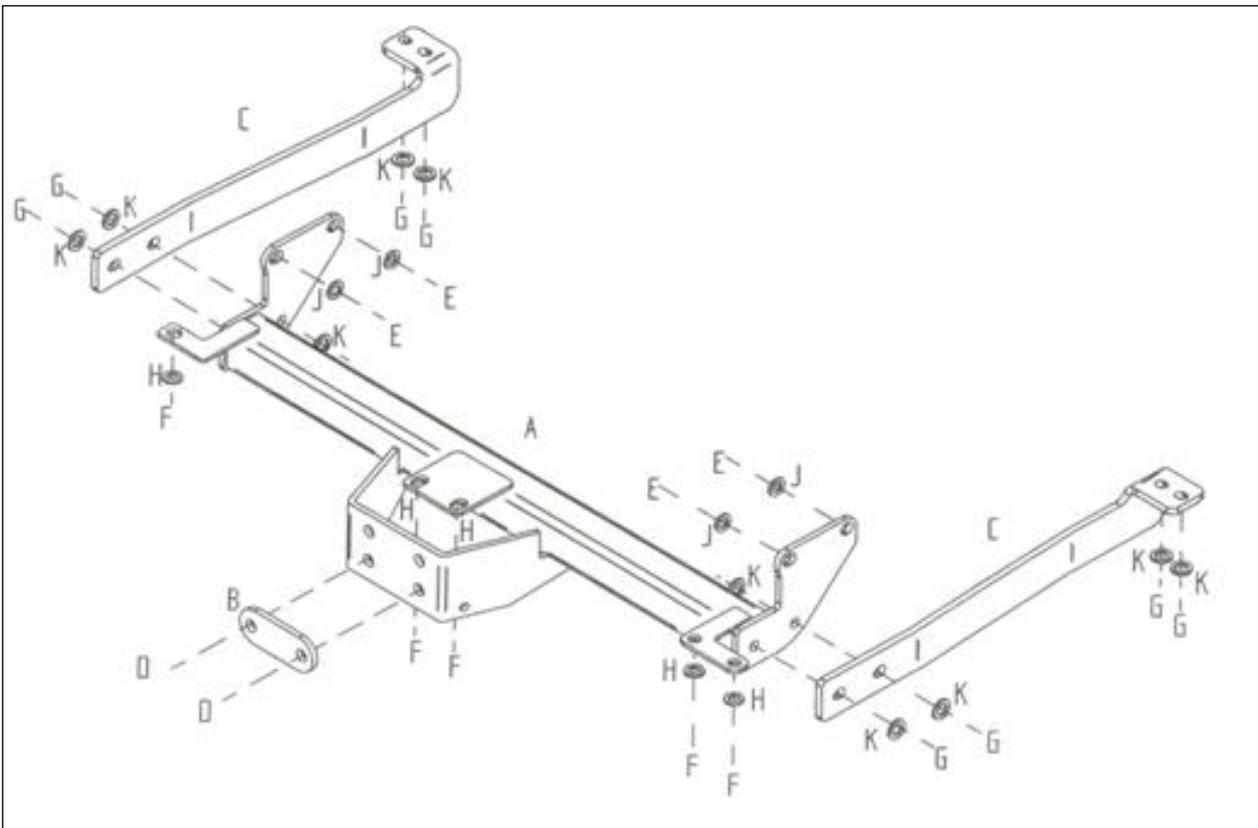

**Note:** nose load limits and vehicle manufactures trailer / caravan weight limits must be observed.