



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

TR823 Renault Espace 1997-2003 Grand Espace 1998-2003

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	E	2	M16 x 100 Bolts, Nuts & S/P Washers
B	2	M12 Clamp Plates	F	2	M12 x 140 Bolts, Nuts & S/P Washers
C	2	19 x 106 Tubes	G	4	M12 x 35 Bolts, Nuts & S/P Washers
D	1	50mm Spacer Block	H	8	12 x 40 Flat Washers

1. Remove the cover from the centre of the bumper and lower the spare wheel. (retain the cover in case towbar is removed).
2. Locate the M12 square nuts into position, corresponding with item F, bend the small tab to hold the nuts in place.
3. Locate item A into position and using item G, with item H, loosely bolt the towbar through the existing holes at each side.
4. Using item G with item H and item B passed through the apertures and over the existing holes, loosely secure the towbar at these points.
5. Using item F and item C secure the towbar to the square nuts already in position.
6. Using the holes in item A as a jig, drill two 17mm holes through the rear panel (these holes will break into the existing holes with no detriment to the strength of the towbar).
7. Using item E with item D bolt the ball bracket and wiring plate (not supplied in this kit) into position.
8. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
9. Replace the spare wheel.

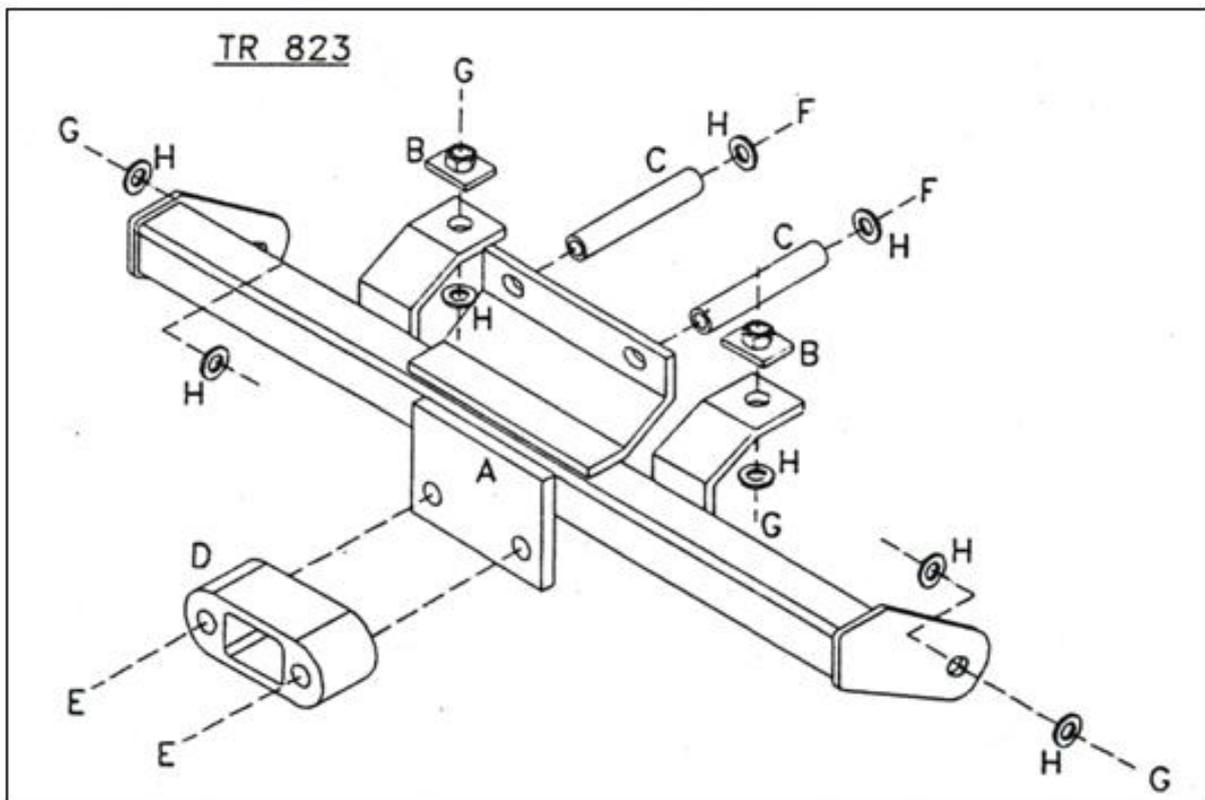

Note: nose load limits and vehicle manufactures trailer / caravan weight limits must be observed.