



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 3

**TR825 Renault Clio 1998 – 2005 Clio Campus 2007 – 2010 Clio Van 2000>**

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16x50 Bolts Nuts & S/P Washers
B	1	R/H Side Plate	E	9	M10x30 Bolts 5 Nuts & 9 S/P Washers
C	1	L/H Clamp Strap	F	1	M10x40 Bolts Nuts & S/P Washers
			G	10	10x40 Flat Washers
			H	4	10x25 Flat Washers

1. Remove the three bolts securing the rear exhaust bracket.
2. Place item **A** against the rear panel so that the welded nuts locate over the existing holes and loosely bolt into position using item **E** with item **G**. (The existing holes may need opening out to accept the bolts).
3. On the left hand side remove the straps securing the heat shield. Using item **E**, Item **G** and item **H** loosely bolt item **C** at the forward mounting point. Using item **F** with item **H** and item **G** loosely bolt item **C** to the chassis and to item **A**.
4. On the right hand side, using item **E** with item **G** and item **H** loosely bolt item **B** to item **A** and to the chassis.
5. Using item **D** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
7. Re-fit the heat shield and exhaust hanger.

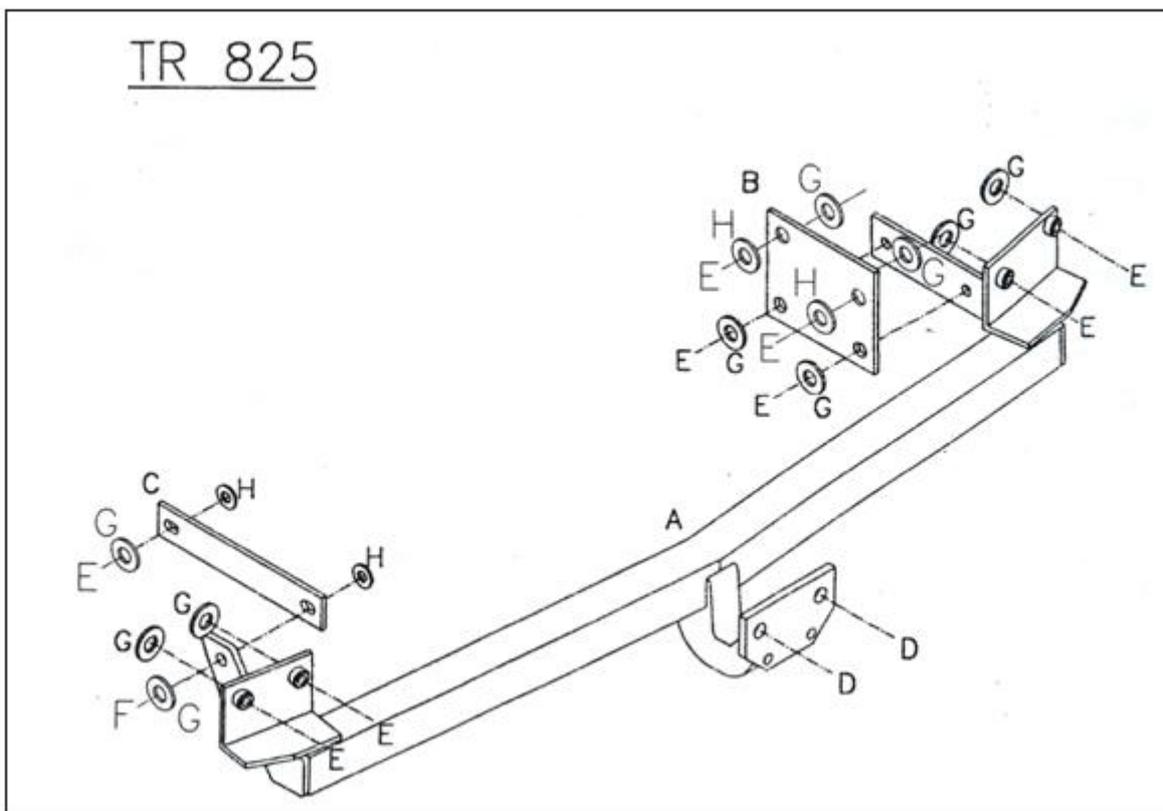

**Note:** nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.