



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 10

TS856 Suzuki Jimny 1998>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	H	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	Extension Bar	J	5	M10 x 35 Bolts & S/P Washers
C	1	L/H Side Arm	K	3	M12 x 35 Bolts, Nuts & S/P Washers
D	1	R/H Side Arm	L	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
E	2	Captive Clamp Straps	M	5	12 x 25 Flat Washers
F	3	Captive Washers	N	5	10 x 25 Flat Washers

1. Insert item E from the rear and locate the captive nut over each existing forward hole. Using item J with item N loosely bolt item C and item D into place.
2. Place item F over the existing holes above the left hand towing eye and item F over the rearmost existing hole above the right hand towing eye.
3. Using item K loosely bolt item A to item C and item D.
4. Using item J with item N loosely bolt item A to the chassis and item F and item F already in place.
5. Using item L with item M bolt item B to item A.
6. Using item H bolt the ball bracket (not supplied in this kit) to the mounting plate.
7. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

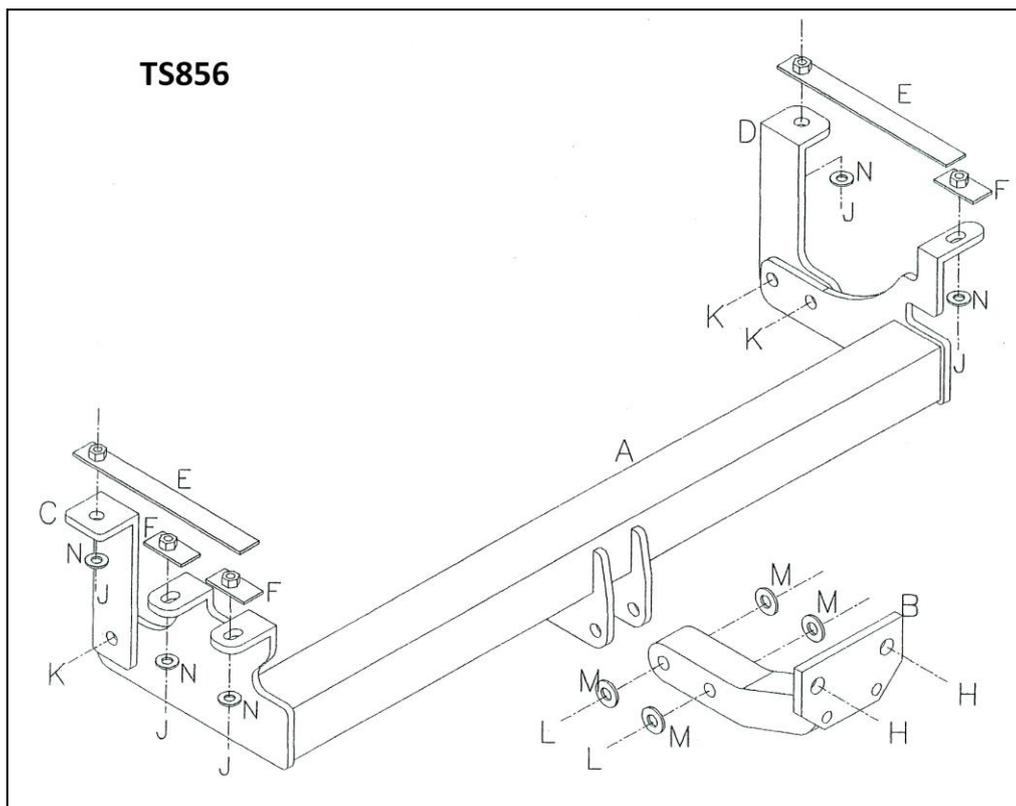

- Note:** 1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.