

Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 2

TS 1100 Saab 9-3 Hatch 1998-2002 Saab 900 Hatch 1993-2002 & 900 Convertible 1994-2002

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	D	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	Drop Plate	E	2	M10 x 50 Bolts Nuts & S/P Washers
C	2	25mm x 15mm Spacer Bushes	F	5	M10 x 35 Bolts, 2 Nuts & 5 S/P Washers
			G	2	10 x 50 Flat Washers
			H	3	10 x 25 Flat Washers

1. Remove bumper. From inside the boot remove the rear slam trim. Tow bolts each side securing the bumper. Pull out plastic trim on ears of the bumper. Remove spare wheel and tools.
2. Place item E through the lower set of holes in item B.
3. Using item F with item H bolt item B to the existing threaded holes in the bumper beam. Square the drop plate and fully tighten the three bolts.
4. Replace the bumper.
5. Place item C onto the bolts already in place and loosely bolt item A to item B using the nuts and washers provided. (The lower edge of the bumper or spoiler may need cutting, see sketch).
6. Using the forward holes in item A as jigs, drill two 11mm holes up into the spare wheel well.
7. Using item F with item G inside the spare wheel well, bolt item A into position.
8. Using item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
9. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

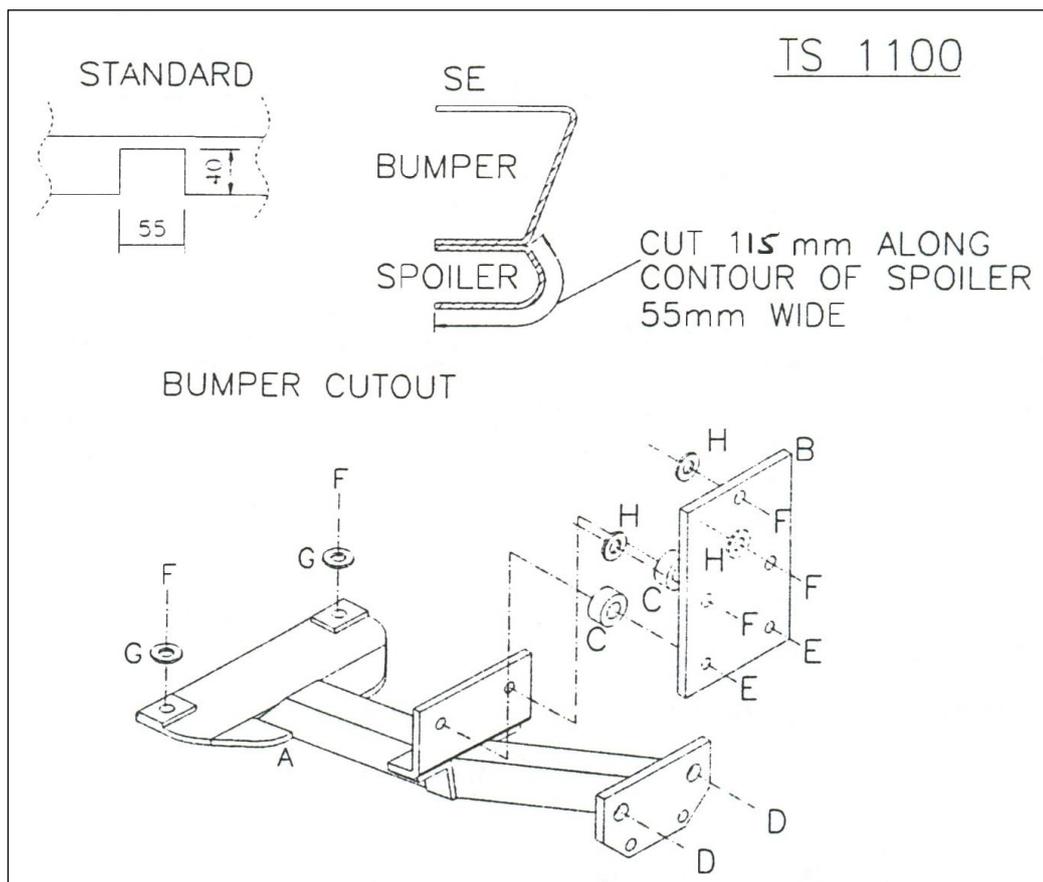

Note: nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.