



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 4

## TT862 TOYOTA HI LUX & VIGO PICK UP 4WD 2005 - 2011

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 60 Bolts, Nuts & S/P Washers
B	2	Side Arms	F	6	M14 x 40 Bolts & Nyloc Nuts
C	1	Coupling Spacer	G	2	M12 x 90 Bolts & Nyloc Nuts
D	2	19 x 58 Spacer Bushes	H	4	M12 x 40 x 1.25 Bolts Grade 10.9 & S/P Washers
			J	2	12 x 40 Flat Washers
			K	4	12 x 25 Flat Washers
			M	2	Bumper Spacers

1. Remove the rear bumper.
2. Temporarily loosen all fixings which secure bumper arms to the bumper.
3. Using Item **G** with Item **D** and Item **J** loosely bolt Item **B** to the existing forward hole in each chassis member.
4. Using Item **H** with Item **K** loosely refit bumper between bumper arms and side arms Item **B**.
5. Using Item **F** bolt Item **A** to Item **B**.
6. Using Item **E** and Item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
7. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

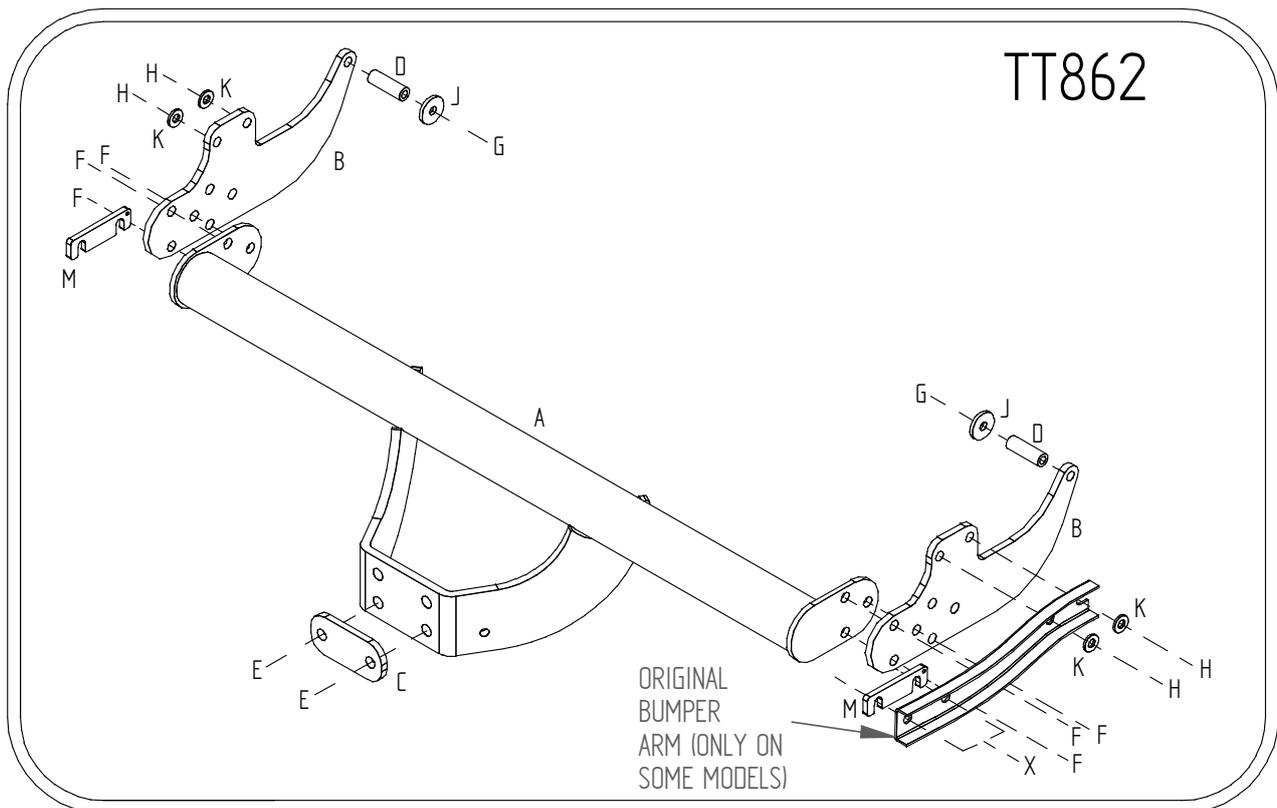

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.