



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 3

## TT883 Toyota Landcruiser 100 1998>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts Nuts & S/P Washers
B	1	L/H Side Arm	E	10	M14 x 50 x 1.5 Bolts & S/P Washers
C	1	R/H Side Arm	F	6	M12 x 40 x 1.25 Bolts & S/P Washers
			G	6	M12 x 50 Bolts, 4 Nyloc Nuts & 2 S/P Washers
			H	10	14 x 27 Flat Washers
			J	6	12 x 40 Flat Washers
			K	10	12 x 25 Flat Washers

1. Remove the towing eye. (This is no longer required).
2. Using item E with item H (or Item F with Item J) loosely bolt item B and Item C to the existing threaded holes in each chassis member.
3. Using Item G with Item K loosely bolt item A to Item B and Item C.
4. Using item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
5. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

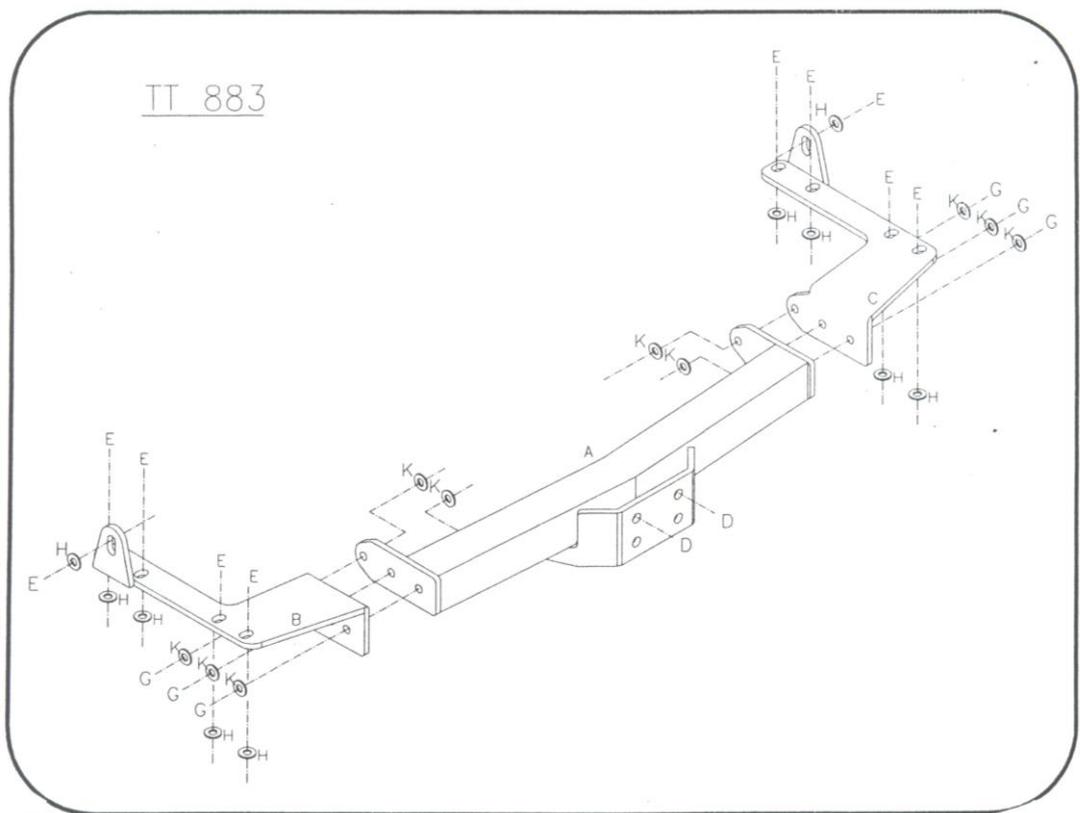

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.