


## TTRUPD03-EXT Reg 58.03 Extension Rearwards

Item	Qty	Description	Item	Qty	Description
A	2	TTRUPD03-EXT	B	8	M16 x 50 (10.9) Flange Bolts & Flange Nuts

# Refer To Full TTRUPD03 Installation Instructions For Full Fitting Guide

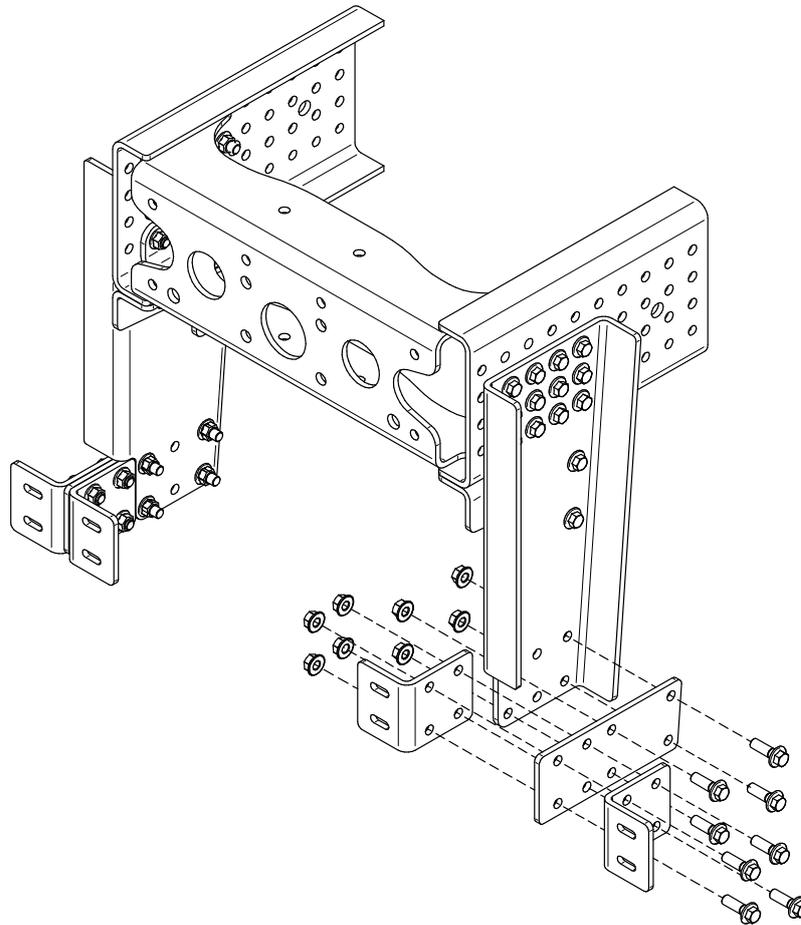

**Notes:**

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.