



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

## TVW7 VOLKSWAGEN AMAROK MODELS WITH BUMPER STEP 2010>

Item	Qty	Description	Item	Qty	Description
A	2	Central Plates	D	2	M16 x 75 Bolts, Nuts & S/P Washers
B	1	Link Plate	E	4	M12 x 45 x 1.5 Bolts & S/P Washers
C	1	Special Coupling Spacer / Socket Plate 8mm	F	4	12 x 40 Flat Washers
			G	4	M16 x 40 Bolts, Nuts & S/P Washers
			H	4	M16 Bolt Caps
			J	3	M5 x 40 Screw Head & Nuts

1. Locate Towbar mounting points on the lower face of the rear bumper, if necessary clean threads.
2. Using Item E with Item F bolts Items A to the lower face of the rear bumper.
3. Using Items G bolt Item B to Item A.
4. Using Item D bolt your desired ball bracket (not supplied in this kit) and Item C to the face plate.
5. Fully tighten all nut and bolts ensuring Towbar is rigid, square and secure.

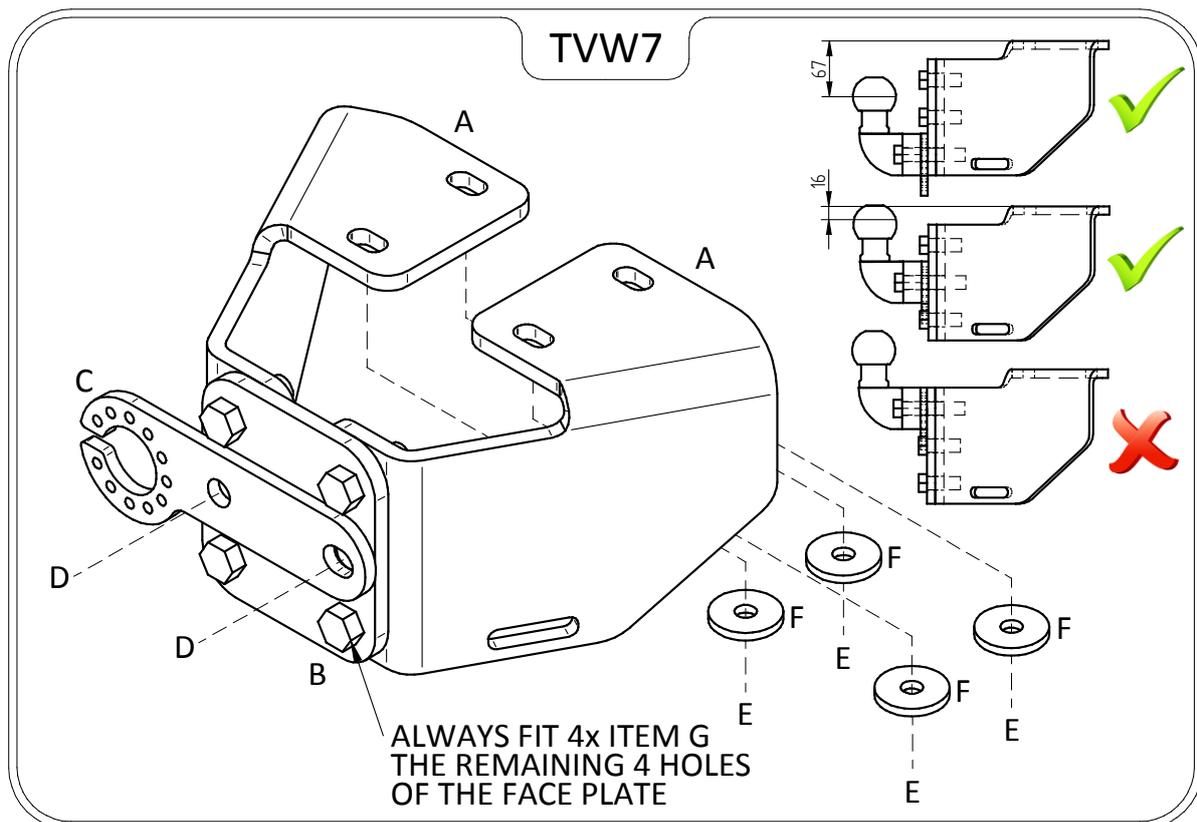

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.