



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 1

TVW13 MAN TGE / VOLKSWAGEN CRAFTER VAN SRW 2017> (With Step)

Item	Qty	Description	Item	Qty	Description
A	1	TVW13 Crossmember	D	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	E	8	M12 x 150 Bolts & Nyloc Nuts
C	2	Spacer Plates	F	4	M14 x 40 Bolts & Nyloc Nuts
			G	16	12 x 25 Flat Washers
			H	8	14 x 27 Flat Washers

- N/S ONLY:** Remove the four fixings securing the vehicle step to the chassis. (Discard fixings) Drill out the four M12 Weld nuts to 12.5mm as per FIG.1
- Insert Item E and Item G through each Towbar mounting point from the outside face, slide Item C over the weld nuts and loosely fix Item B in place.
- Repeat the above process for the **O/S Chassis**.
- Using Item F and Item H fix Item A between each side arm.
- Using Item D fix your desired ball bracket and wring plate (Not supplied in this kit) to Item A.
- Fully tighten all fixings ensuring the Towbar is rigid square and secure.

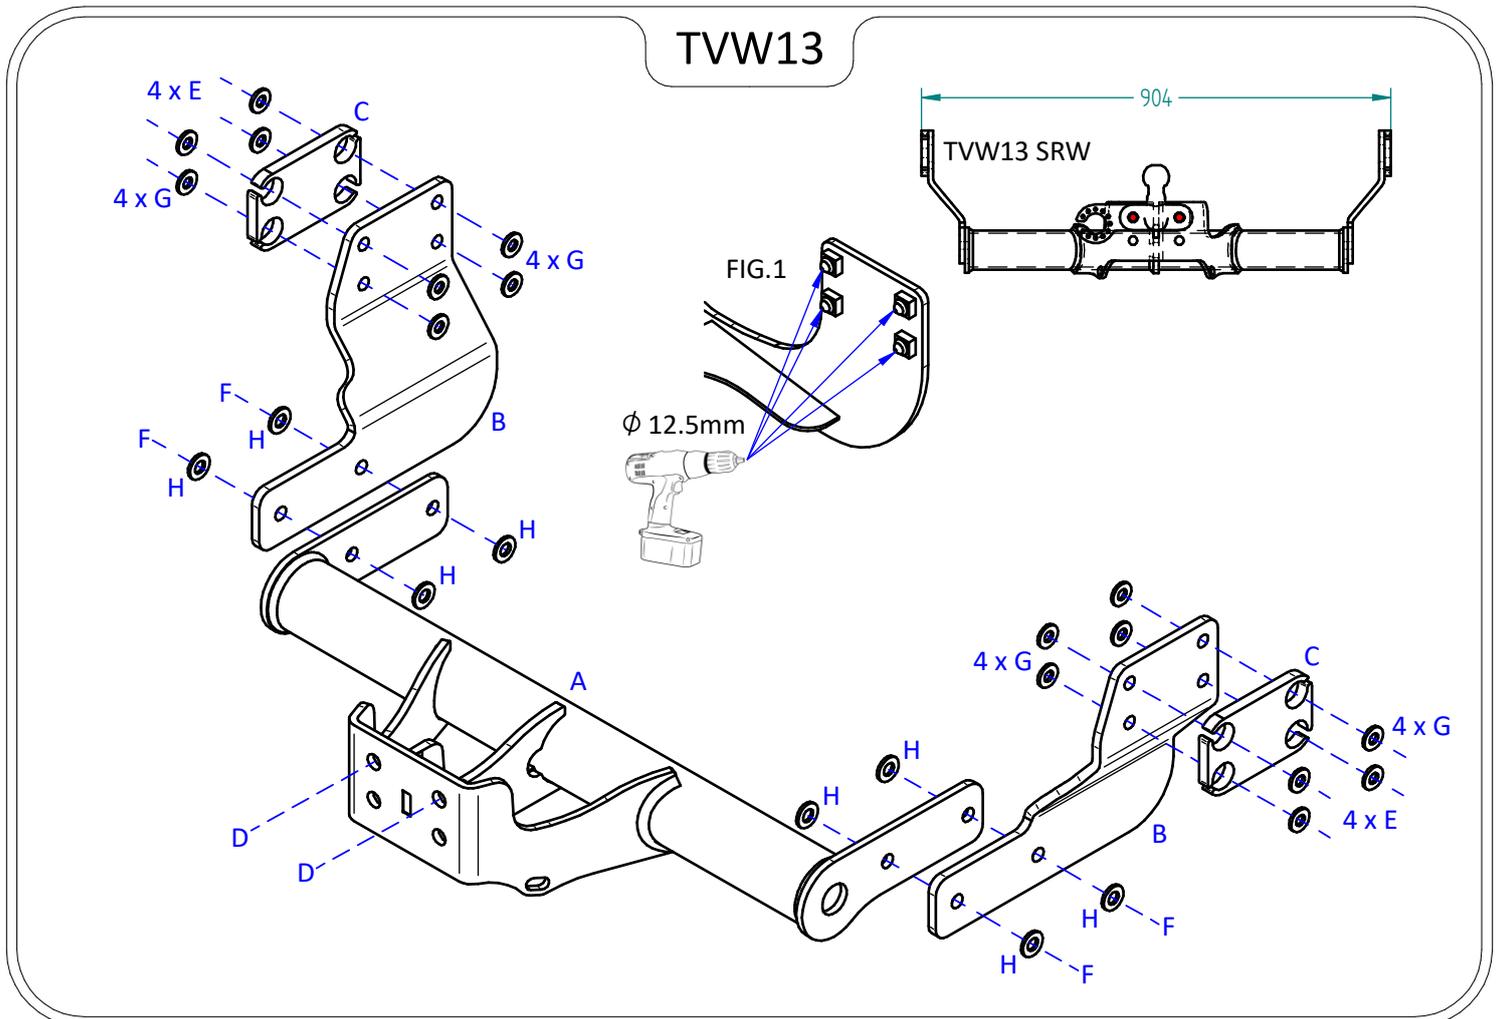

Note:

- Torque Settings see notes overleaf.
- Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.