



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 2

TVW14H MAN TGE / VOLKSWAGEN CRAFTER CHASSIS CAB SRW 2017>

Item	Qty	Description	Item	Qty	Description
A	1	TVW14H Crossmember	C	2	M16 x 55 Bolts & Nyloc Nuts
A1	1	Slider Face Plate	D	8	M12 x 120 Bolts & Nyloc Nuts
A2	2	Slider Pins (205) & Clips	E	4	M14 x 40 Bolts & Nyloc Nuts
B	2	Side Arms	F	16	12 x 25 Flat Washers
			G	8	14 x 27 Flat Washers

1. Remove the Spare wheel mechanism from the O/S. four fixings located through the light board. (Towbar can be fitted without removing this item).
2. Using Item **D** with Item **F** fix Items **B** to the inside face of each chassis member.
3. Using Item **E** with Item **G** fix Item **A** to Items **B**.
4. Using Item **C** fix you desired ball bracket (Not supplied in this kit) to Item **A**.
5. Fully tighten all fixings ensuring the Towbar is rigid, square and secure.
6. Refit spare wheel mechanism.

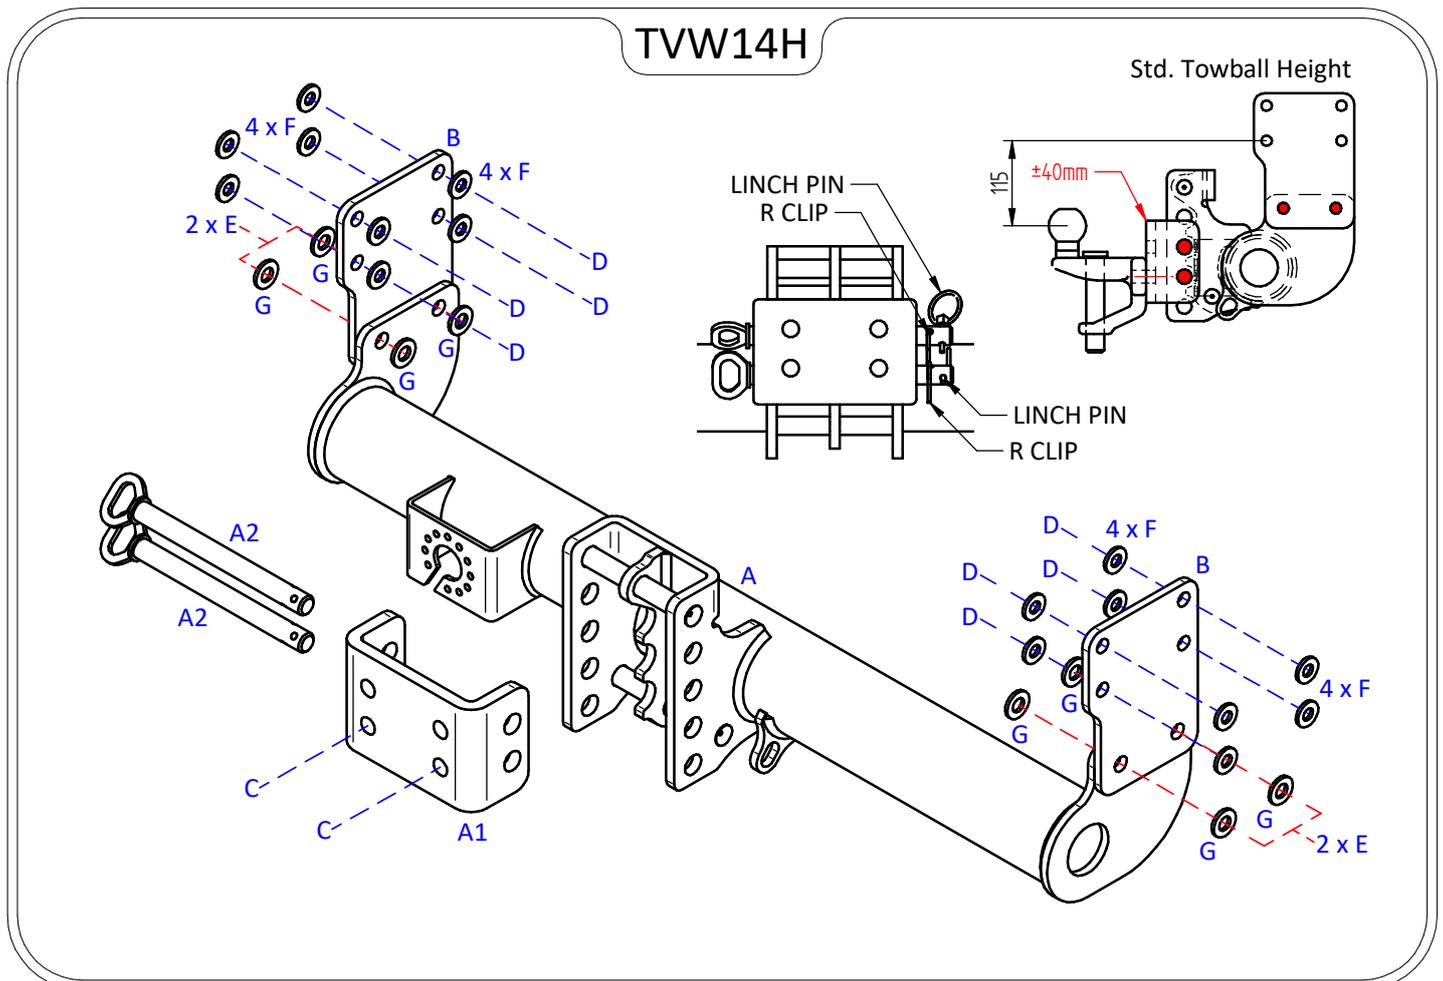

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -130 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.